



# Sun™ QFS, Sun™ SAM-FS, and Sun™ SAM-QFS Installation and Configuration Guide

---

Sun Microsystems, Inc.  
4150 Network Circle  
Santa Clara, CA 95054 U.S.A.  
650-960-1300

Part No. 816-2543-10  
August 2002, Revision A

Send comments about this document to: [docfeedback@sun.com](mailto:docfeedback@sun.com)

Copyright © 2002 Sun Microsystems, Inc., 901 San Antonio Road, Palo Alto, California 94303 U.S.A. All rights reserved.

Sun Microsystems, Inc. has intellectual property rights relating to technology embodied in this product or document. In particular, and without limitation, these intellectual property rights may include one or more of the U.S. patents listed at <http://www.sun.com/patents> and one or more additional patents or pending patent applications in the U.S. or other countries.

This product or document is distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, AnswerBook2, docs.sun.com, Sun Enterprise, Ultra, Java, OpenWindows, Solaris, SunSolve, and Sun StorEdge are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc. The Energy Star logo is a registered trademark of EPA. Adobe is a registered trademark of Adobe Systems, Incorporated.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

Federal Acquisitions: Commercial Software—Government Users Subject to Standard License Terms and Conditions.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

---

Copyright © 2002 Sun Microsystems, Inc., 901 San Antonio Road, Palo Alto, California 94303, Etats-Unis. Tous droits réservés.

Sun Microsystems, Inc. a les droits de propriété intellectuels relatants à la technologie incorporée dans ce produit. En particulier, et sans la limitation, ces droits de propriété intellectuels peuvent inclure un ou plus des brevets américains énumérés à <http://www.sun.com/patents> et un ou les brevets plus supplémentaires ou les applications de brevet en attente dans les Etats - Unis et les autres pays.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, AnswerBook2, docs.sun.com, Sun Enterprise, Ultra, Java, OpenWindows, Solaris, SunSolve. et SunStorEdge sont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc. Adobe est une marque enregistrée de Adobe Systems, Incorporated.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE "EN L'ETAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISEE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFAÇON.



# Contents

---

**Preface xi**

How This Book Is Organized xi

Related Documentation xii

Accessing Sun Documentation Online xii

Licensing xiii

Diagnostics xiii

Installation Assistance xiv

Using UNIX Commands xiv

Typographic Conventions xv

Shell Prompts xvi

Sun Welcomes Your Comments xvi

**1. Overview 1**

Release Package Contents 2

Directories and Files Created 3

    Directories Created 4

    Files Created 5

    Site Files 6

    Modified System Files 8

    ▼ To Install Sun Solaris Patches 9

<b>2. System Requirements</b>	<b>11</b>
Step 1: Verifying the Environment	11
▼ To Verify the Environment	11
Step 2: Verifying Disk Cache	12
▼ To Verify the Available Disk Cache Space	12
Example	13
Step 3: Verifying Disk Space	15
▼ To Verify Disk Space	16
Step 4: Verifying Sun Solaris Patches	17
▼ To Verify Sun Solaris Patches	17
Step 5: Verifying Archive Media (Optional)	18
▼ To Attach Removable Media Devices	19
Step 6: Verifying the Software License	23
Step 7: Verifying Compatibilities	24
Step 8: Verifying the Java Runtime Environment (Optional)	24
<b>3. Sun QFS Initial Installation Procedure</b>	<b>25</b>
Step 1: Obtaining the Release Files	26
▼ To Install from a CD-ROM	26
Step 2: Adding the Packages	27
Step 3: Setting Up <code>PATH</code> and <code>MANPATH</code> Variables	28
▼ To Set Up <code>PATH</code> and <code>MANPATH</code> Variables	28
Step 4: Licensing the Sun QFS Software	29
▼ To License the Sun QFS Software	29
Step 5: Configuring the Sun QFS File System	29
▼ To Create the <code>mcf</code> File	30
▼ To Reinitialize the <code>mcf</code> File	32
Configuration Example 1	32
▼ To Write the <code>mcf</code> File	33

Configuration Example 2	33
Configuration Example 3	35
▼ To Configure the System	35
Configuration Example 4	36
▼ To Configure the System	37
Configuration Example 5	38
▼ To Configure the System	39
Step 6: Creating the <code>samfs.cmd</code> File (Optional)	40
Step 7: Creating the Mount Point and Updating the <code>/etc/vfstab</code> File	41
Step 8: Initializing the File System	42
▼ To Initialize a File System	42
Step 9: Mounting the File System	43
▼ To Mount the File System Automatically	43
▼ To Mount the File System Manually	43
▼ To Confirm that a File System is Mounted and Set Permissions	44
Step 10: Sharing the File System With NFS Client Systems (Optional)	45
▼ To NFS Share the File System	45
Step 11: Mounting the File System on the NFS Client Systems (Optional)	46
Step 12: Establishing Periodic Dumps Using <code>qfsdump(1M)</code>	47
▼ To Run the <code>qfsdump(1M)</code> Command Automatically	48
▼ To Run the <code>qfsdump(1M)</code> Command Manually	48
<b>4. Sun QFS Upgrade Procedure</b>	<b>51</b>
Step 1: Obtaining the Release Files	51
▼ To Install from a CD-ROM	52
Step 2: Backing Up Each File System	53
▼ To Back Up Each File System	53
Step 3: Unsharing the File Systems (Optional)	55
▼ To Unshare the File Systems	55

Step 4: Unmounting the File Systems	55
▼ To Unmount Using the <code>umount(1M)</code> Command	56
▼ To Unmount Using the <code>fuser(1M)</code> , <code>kill(1)</code> , and <code>umount(1M)</code> Commands	56
▼ To Unmount by Editing the <code>/etc/vfstab</code> File and Rebooting	56
Step 5: Removing Existing Sun QFS Software	57
▼ To Remove Software from a Release Prior to 4.0	57
Step 6: Adding the Packages	58
▼ To Add the Packages	58
Step 7: Updating the License Keys	58
▼ To License the Sun QFS Software	59
Step 8: Verifying the <code>mcf</code> File	59
▼ To Verify the <code>mcf</code> File	59
▼ To Reinitialize the <code>mcf</code> File	60
Step 9: Modifying the <code>/etc/vfstab</code> File (Optional)	60
▼ To Modify the <code>/etc/vfstab</code> File	60
Step 10: Reinitializing and Restoring the File Systems (Optional)	60
▼ To Reinitialize and Restore the File Systems	61
Step 11: Checking the File System (Optional)	61
Step 12: Mounting the File System (Optional)	62
Step 13: Recompiling API-Dependent Applications (Optional)	62
<b>5. Sun SAM-FS and Sun SAM-QFS Initial Installation Procedure</b>	<b>63</b>
Step 1: Obtaining the Release Files	64
▼ To Install from a CD-ROM	64
Step 2: Adding the Administrator Group (Optional)	65
▼ To Add the Administrator Group	66
Step 3: Adding the Packages	66
▼ To Add the Packages	66

Step 4: Editing the <code>st.conf</code> and <code>samst.conf</code> Files	67
▼ To Add a New Device Type	67
Example 1	68
The First Pair	68
The Second and Third Pairs	69
Example 2	69
▼ To Add a Target Device or LUN	70
Step 5: Rebooting the System	72
▼ To Reboot the System	72
Step 6: Setting Up <code>PATH</code> and <code>MANPATH</code> Variables	72
▼ To Set Up <code>PATH</code> and <code>MANPATH</code> Variables	72
Step 7: Licensing the Sun SAM-FS and Sun SAM-QFS Software	73
▼ To License the Sun SAM-FS and Sun SAM-QFS Software	73
Step 8: Configuring System Logging	74
▼ To Enable Logging	75
Step 9: Configuring the Environment	76
▼ To Reinitialize the <code>mcf</code> File	79
Example Sun SAM-FS Configuration	79
Example Sun SAM-FS Disk Cache Configuration	80
▼ To Write the <code>mcf</code> File	81
Identifying Peripherals Using the <code>/var/adm/messages</code> File	82
Configuring a Manually Loaded Magneto-optical Drive	83
▼ To Configure the Drive	83
Configuring a Magneto Optical Library	84
▼ To Configure the Library	84
Configuring a Manually Loaded DLT Drive	86
▼ To Configure the Drive	86
Configuring a DLT Library	87

▼ To Configure the Library	88
Step 10: Setting Up Default Values (Optional)	90
▼ To Set Up Default Values	90
Step 11: Creating the <code>samfs.cmd</code> File (Optional)	91
Step 12: Creating the Mount Point and Updating the <code>/etc/vfstab</code> File	91
▼ To Create the Mount Point and Update the <code>/etc/vfstab</code> File	92
Step 13: Initializing the File System	93
▼ To Initialize the File System	93
Step 14: Mounting the File System	94
▼ To Mount the File System Automatically	94
▼ To Mount the File System Manually	95
▼ To Confirm that a File System is Mounted and Set Permissions	95
Step 15: Checking Drive Order	96
▼ To Check the Drive Order of Tape or Magneto-Optical Libraries With a Front Panel	96
▼ To Check the Drive Order of Tape Libraries Without a Front Panel	97
▼ To Check the Drive Order of Magneto-Optical Libraries Without a Front Panel	98
Step 16: Labeling Tapes or Optical Disks (Optional)	100
Step 17: Configuring the Archiver (Optional)	101
Step 18: Enabling Disk Archiving (Optional)	102
▼ To Enable Disk Archiving on the Client	102
▼ To Enable Disk Archiving on the Server	104
Step 19: Sharing the File System With NFS Client Systems (Optional)	105
▼ To NFS Share the File System	105
Step 20: Mounting the File System on NFS Client Systems (Optional)	106
▼ To Mount the File System on Clients	107
Step 21: Writing Periodic Dump Files By Using <code>samfsdump(1M)</code>	108
▼ To Run the <code>samfsdump(1M)</code> Command Automatically	109



▼	To Run the <code>samfsdump(1M)</code> Command Manually	109
	Step 22: Enabling Automatic Rotating of Log and Trace Files (Optional)	110
<b>6.</b>	<b>Sun SAM-FS and Sun SAM-QFS Upgrade Procedure</b>	<b>111</b>
	Step 1: Obtaining the Release Files	111
▼	To Install From a CD-ROM	112
	Step 2: Backing Up Each Sun SAM-FS and Sun SAM-QFS File System	113
▼	To Back Up File Systems	113
	Step 3: Stopping the Sun SAM-FS or Sun SAM-QFS File System	114
▼	To Stop the File System	114
	Step 4: Unsharing the File Systems (Optional)	115
▼	To Unshare the File Systems	115
	Step 5: Unmounting the File Systems	116
▼	To Unmount Using the <code>umount(1M)</code> Command	116
▼	To Unmount Using the <code>fuser(1M)</code> , <code>kill(1)</code> , and <code>umount(1M)</code> Commands	116
▼	To Unmount by Editing the <code>/etc/vfstab</code> File and Rebooting	117
	Step 6: Removing Existing Sun SAM-FS or Sun SAM-QFS Software	117
▼	To Remove Software from a Release Prior to 4.0	117
	Step 7: Adding the Packages	118
▼	To Add the Packages	118
	Step 8: Updating the License Keys	119
▼	To License the Software	119
	Step 9: Verifying System Files	120
▼	To Verify System Files	120
▼	To Verify the <code>mcf</code> File	120
▼	To Reinitialize the <code>mcf</code> File	121
	Step 10: Modifying the <code>/etc/vfstab</code> File (Optional)	121
▼	To Modify the <code>/etc/vfstab</code> File	121

Step 11: Reinitializing and Restoring the File Systems (Optional)	122
▼ To Reinitialize and Restore the File Systems	122
Step 12: Checking the File System (Optional)	123
Step 13: Mounting the File Systems (Optional)	123
Step 14: Verifying the <code>archiver.cmd</code> File	124
Step 15: Recompiling API-Dependent Applications (Optional)	124
<b>Glossary</b>	<b>125</b>

# Preface

---

This manual, the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS Installation and Configuration Guide*, explains the installation and upgrade procedures for the Sun QFS, Sun SAM-FS, and Sun SAM-QFS software products, release 4.0. The 4.0 release can be installed on Sun Solaris™ 7, 8, and 9 operating environment (OE) platforms.

This manual is written for system administrators responsible for configuring and maintaining Sun QFS, Sun SAM-FS, and Sun SAM-QFS software. You, the system administrator, are assumed to be knowledgeable about Sun Solaris procedures, including creating accounts, performing system backups, and other basic Sun Solaris system administrator tasks.

---

## How This Book Is Organized

This manual contains the following chapters:

- Chapter 1 is an overview.
- Chapter 2 contains system requirements.
- Chapter 3 explains the Sun QFS initial installation procedure.
- Chapter 4 explains the Sun QFS upgrade procedure.
- Chapter 5 explains the Sun SAM-FS and Sun SAM-QFS initial installation procedure.
- Chapter 6 explains the Sun SAM-FS and Sun SAM-QFS upgrade procedure.

The glossary defines terms used in this and other Sun QFS, Sun SAM-FS, and Sun SAM-QFS documentation.

---

## Related Documentation

This manual is part of a set of documents that describes the operations of the Sun QFS, Sun SAM-FS, and Sun SAM-QFS software products. TABLE P-1 shows the complete release 4.0 documentation set for these products.

**TABLE P-1** Related Documentation

Title	Part Number
<i>Sun SAM-Remote Administrator's Guide</i>	816-2094
<i>Sun QFS, Sun SAM-FS, and Sun SAM-QFS Disaster Recovery Guide</i>	816-2540
<i>Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide</i>	816-2542
<i>Sun QFS, Sun SAM-FS, and Sun SAM-QFS Installation and Configuration Guide</i>	816-2543
<i>Sun SAM-FS and Sun SAM-QFS Storage and Archive Management Guide</i>	816-2544
<i>Sun QFS, Sun SAM-FS, and Sun SAM-QFS README File</i>	816-7675

Note that the *Sun SAM-Remote Administrator's Guide* has not been updated for the 4.0 release. An updated version of this manual will be provided at a later date.

---

## Accessing Sun Documentation Online

The Sun QFS, Sun SAM-FS, and Sun SAM-QFS software distribution includes PDF files for the documents for these products. These PDF files can be viewed from the following locations:

**1. At Sun's Network Storage documentation website.**

This website contains documentation for many storage software products.

**a. To access this website, go to the following URL:**

[www.sun.com/products-n-solutions/hardware/docs/Software/Storage\\_Software](http://www.sun.com/products-n-solutions/hardware/docs/Software/Storage_Software)

The Storage Software page displays.

**b. Click on the appropriate link from the following list:**

*Sun QFS Software*

*Sun SAM-FS and Sun SAM-QFS Software*

**2. At `docs.sun.com`,**

This website contains documentation for Solaris and many other Sun software products.

**a. To access this website, go to the following URL:**

`docs.sun.com`

The `docs.sun.com` page displays.

**b. Find the documentation for your product by searching for one of the following in the search box:**

- Sun QFS
- Sun SAM-FS
- Sun SAM-QFS

Viewing PDF files requires the Acrobat Reader software, which is available for free from the following website:

`www.adobe.com/products/acrobat/readstep.html`

---

## Licensing

For information on obtaining licenses for Sun QFS, Sun SAM-FS, or Sun SAM-QFS software, contact your Sun sales representative or your authorized service provider (ASP).

---

## Diagnostics

The Sun QFS, Sun SAM-FS, and Sun SAM-QFS software includes the `info.sh(1M)` script. This diagnostic script can be very useful to you and to the Sun customer support staff. This script produces a diagnostic report of the server configuration and collects log information. After the software is installed, you can access the `info.sh(1M)` man page for more information about this script.

---

# Installation Assistance

For installation and configuration services please contact Sun's Enterprise Services at 1-800-USA4SUN, or contact your local Enterprise Services sales representative.

---

## Using UNIX Commands

This document does not contain information on basic UNIX® commands and procedures such as shutting down the system, booting the system, and configuring devices.

See one or more of the following for this information:

- *Solaris Handbook for Sun Peripherals*
- AnswerBook2™ online documentation for the Sun Solaris OE
- Other software documentation that you received with your system

---

# Typographic Conventions

TABLE P-2 lists the typographic conventions used in this manual.

TABLE P-2 Typographical Conventions

Typeface or Symbol	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output.	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
AaBbCc123	What you type, when contrasted with on-screen computer output.	% <code>su</code> Password:
<i>AaBbCc123</i>	Book titles; new words or terms; words to be emphasized; and command-line variables to be replaced with a real name or value.	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be root to do this. To delete a file, type <code>rm filename</code> .
[ ]	In syntax, brackets indicate that an argument is optional.	<code>scmadm [-d sec] [-r n[:n][,n]...] [-z]</code>
{ arg   arg }	In syntax, braces and pipes indicate that one of the arguments must be specified.	<code>sndradm -b {phost   shost}</code>
\	At the end of a command line, the backslash (\) indicates that the command continues on the next line.	<code>atm90 /dev/md/rdisk/d5 \ /dev/md/rdisk/d1</code>

---

# Shell Prompts

TABLE P-3 shows the shell prompts that this manual uses.

**TABLE P-3** Shell Prompts

Shell	Prompt
C shell	<i>machine-name%</i>
C shell superuser	<i>machine-name#</i>
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

---

# Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun using the following email address:

`docfeedback@sun.com`

Please include the part number (816-2543-10) of your document in the subject line of your email.



# Overview

---

Before installing a Sun QFS, Sun SAM-FS, or Sun SAM-QFS software package, you must set up and configure the hardware to be used. The necessary hardware differs, depending on the software product, as follows:

- The Sun QFS environment typically consists of the following:
  - A server based on SPARC™ technology running the 7, 8, or 9 Sun Solaris operating environment (OE).
  - A disk cache consisting of RAID devices, JBOD devices, or both.
- The Sun SAM-FS and Sun SAM-QFS environment typically consists of the following:
  - A server based on SPARC technology running the 7, 8, or 9 Sun Solaris OE.
  - A disk cache consisting of RAID devices, JBOD devices, or both.
  - One or more libraries that include one or more tape or magneto-optical drives and/or one or more standalone drives. This requirement does not apply if you plan to archive to disk in another file system.

This chapter describes the characteristics of the Sun QFS, Sun SAM-FS, and Sun SAM-QFS release packages. It contains the following topics:

- “Release Package Contents” on page 2
- “Directories and Files Created” on page 3

This manual does not describe the installation or configuration procedures you need to use in order to create a Sun QFS shared file system. Use the procedures in this installation and configuration guide to create your Sun QFS or Sun SAM-QFS environment before attempting to configure a Sun QFS shared file system. The configuration procedures for a Sun QFS shared file system are described in the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*.

---

# Release Package Contents

You can obtain the Sun QFS, Sun SAM-FS, and Sun SAM-QFS software packages from the Sun Download Center or on a CD-ROM. The Sun Download Center is located at the following URL:

<http://sunwww.central/download/>

Contact your authorized service provider (ASP) or your Sun sales representative if you have questions on obtaining the software in one of these ways.

After the release, upgrade patches are available from the following URL:

<http://www.sunsolve.sun.com>

All packages are in Sun Solaris `pkgadd(1M)` format. These packages reflect the Sun Solaris version for the platform upon which you will be installing the Sun QFS, Sun SAM-FS, or Sun SAM-QFS software. For information on the directories and files provided with the release package, see the `README` file provided with the software.

TABLE 1-1 shows the release packages that include the software products.

**TABLE 1-1** Release Packages

Installed Package	Description
SUNWqfs	Sun QFS standalone file system software package. This package is not needed if you are installing Sun SAM-FS or Sun SAM-QFS software.
SUNWsamfs	Sun SAM-FS and Sun SAM-QFS software package. Includes the standard file system and the storage and archive management (SAM) software.
SUNWcqfs, SUNWcsamf	Chinese localized packages.
SUNWjqfs, SUNWjsamf	Japanese localized packages.
SUNWfqfs, SUNWfsamf	French localized packages.

The releases are identified using characters arranged in the following format:

*major . minor . bugfix*

TABLE 1-2 explains the release numbering scheme.

TABLE 1-2 Release Numbering

Release Level Component	Meaning
<i>major</i>	The release level of a major release.
<i>minor</i>	The release level of a minor feature release.
<i>bugfix</i>	The bug fix number. A number between 1 and 99 indicates a bug fix release. A letter from A through Z indicates prerelease software. The base release of a first feature release of a major release might not contain a bug fix level.

Examples:

- 4.0 is a major release with no minor release revisions and no bug fixes.
- 4.1 is a minor release.
- 4.0.1 is a bug fix release and is typically delivered in a patch. This number appears in the patch's README file.

---

## Directories and Files Created

This section describes the directories and files associated with the Sun QFS, Sun SAM-FS, and Sun SAM-QFS products. Additional information about the files in this section can be obtained from the man pages after they have been installed.

# Directories Created

TABLE 1-3 lists the directories created when the Sun QFS, Sun SAM-FS, and Sun SAM-QFS software packages are installed.

**TABLE 1-3** Directories Created

Directory	Content	Used By
<code>/dev/samst</code>	Device driver special files.	Sun SAM-FS, Sun SAM-QFS
<code>/var/opt/SUNWsamfs</code>	Device catalogs, the catalog trace file, and log files. Also archiver data directory and queue files.	Sun SAM-FS, Sun SAM-QFS
<code>/etc/fs/samfs</code>	Commands specific to Sun QFS, Sun SAM-FS, and Sun SAM-QFS software.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
<code>/etc/opt/SUNWsamfs</code>	Configuration and license files.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
<code>/opt/SUNWsamfs/bin</code>	User command binaries.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
<code>/opt/SUNWsamfs/client</code>	Files for RPC API client.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
<code>/opt/SUNWsamfs/examples</code>	Various example configuration files.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
<code>/opt/SUNWsamfs/jre</code>	Java runtime environment for the GUI tools. This is a symbolic link.	Sun SAM-FS, Sun SAM-QFS
<code>/opt/SUNWsamfs/include</code>	API include files.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
<code>/opt/SUNWsamfs/lib</code>	Relocatable libraries.	Sun QFS, Sun SAM-FS, Sun SAM-QFS

**TABLE 1-3** Directories Created (Continued)

Directory	Content	Used By
/opt/SUNWsamfs/man	man(1) pages.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
/opt/SUNWsamfs/sbin	System administrator commands and daemon binaries.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
/opt/SUNWsamfs/doc	<p>Documentation repository for any informational files included in the release. The README file is included in this directory. It summarizes the current release's features.</p> <p>You can access the README file for this release at any time from one of the documentation websites described in this manual's preface. It is available as the <i>Sun QFS, Sun SAM-FS, and Sun SAM-QFS README File</i>. After your software is installed, the content of the README file is located in</p> <p>/opt/SUNWsamfs/doc/README.</p>	Sun QFS, Sun SAM-FS, Sun SAM-QFS

## Files Created

TABLE 1-4 lists the files created when the Sun QFS, Sun SAM-FS, or Sun SAM-QFS software is installed.

**TABLE 1-4** Files Created

File	Description	Used By
/etc/opt/SUNWsamfs/inquiry.conf	Vendor and product identification strings for recognized SCSI devices.	Sun SAM-FS, Sun SAM-QFS
/kernel/drv/samst	Driver for SCSI media changers, optical drives, and non-motion I/O for tape drives.	Sun SAM-FS, Sun SAM-QFS
/kernel/drv/samst.conf	Configuration file for the samst driver.	Sun SAM-FS, Sun SAM-QFS

**TABLE 1-4** Files Created (*Continued*)

File	Description	Used By
<code>/kernel/fs/samfs</code>	Sun Solaris 32-bit file system module.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
<code>/kernel/fs/sparcv9/samfs</code>	Sun Solaris 64-bit file system module.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
<code>/kernel/sys/samsys</code>	System call module.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
<code>/kernel/sys/sparcv9/samsys</code>	Sun Solaris 32- and 64-bit system call module.	Sun QFS, Sun SAM-FS, Sun SAM-QFS

The Sun QFS, Sun SAM-FS, and Sun SAM-QFS file systems have dynamically loadable components that are stored in the Sun Solaris `/kernel` directory (see TABLE 1-4). You can determine the modules that are loaded by using the `modinfo(1M)` command. Typically, the file system module is loaded with the kernel at boot time. Alternatively, the file system module can be loaded when the file system is first mounted after the Sun software is installed.

## Site Files

TABLE 1-5 lists the files you create that are used by Sun SAM-FS and Sun SAM-QFS. Some of the files in this list are optional, and others are required. The following are the required files:

- `/etc/opt/SUNWsamfs/LICENSE.4.0`

■ /etc/opt/SUNWsamfs/mcf

**TABLE 1-5** Site Files

File	Description	Used By
/etc/opt/SUNWsamfs/LICENSE.4.0	License file. For more information, see the licensing information pertinent to your installation in “Step 6: Verifying the Software License” on page 23. This is a required file.	Sun QFS, Sun SAM-FS, Sun SAM-QFS
/etc/opt/SUNWsamfs/archiver.cmd	Archiver command file. For more information, see the <code>archiver.cmd(4)</code> man page or see the <i>Sun SAM-FS and Sun SAM-QFS Storage and Archive Management Guide</i> .	Sun SAM-FS, Sun SAM-QFS
/etc/opt/SUNWsamfs/samfs.cmd	File system mount parameter command file. For more information, see the <code>samfs.cmd(4)</code> man page or see the <i>Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator’s Guide</i> .	Sun QFS, Sun SAM-FS, Sun SAM-QFS
/etc/opt/SUNWsamfs/recycler.cmd	Recycler command file. For more information, see the <code>recycler.cmd(4)</code> man page or see the <i>Sun SAM-FS and Sun SAM-QFS Storage and Archive Management Guide</i> .	Sun SAM-FS, Sun SAM-QFS
/etc/opt/SUNWsamfs/releaser.cmd	Releaser command file. For more information, see the <code>releaser.cmd(4)</code> man page or see the <i>Sun SAM-FS and Sun SAM-QFS Storage and Archive Management Guide</i> .	Sun SAM-FS, Sun SAM-QFS

**TABLE 1-5** Site Files (Continued)

File	Description	Used By
<code>/etc/opt/SUNWsamfs/preview.cmd</code>	Previewer command file. For more information, see the <code>preview.cmd(4)</code> man page or see the <i>Sun SAM-FS and Sun SAM-QFS Storage and Archive Management Guide</i> .	Sun SAM-FS, Sun SAM-QFS
<code>/etc/opt/SUNWsamfs/defaults.conf</code>	Miscellaneous default values. For more information, see the <code>defaults.conf(4)</code> man page.	Sun SAM-FS, Sun SAM-QFS
<code>/etc/opt/SUNWsamfs/mcf</code>	Master configuration file. For more information, see the <code>mcf(4)</code> man page. This is a required file.	Sun QFS, Sun SAM-FS, Sun SAM-QFS

## Modified System Files

During installation, Sun QFS, Sun SAM-FS, and Sun SAM-QFS software adds information to certain Sun Solaris system files. These system files are ASCII text files. Sun Solaris uses these files to identify loadable kernel modules by number rather than by name.

TABLE 1-6 lists the system files that are modified during the installation of software packages.

**TABLE 1-6** Modified System Files

File	Description	Used By
<code>/etc/name_to_sysnum</code>	System call information file. The line added is as follows: <sup>1</sup> <code>samsys 181</code>	Sun QFS, Sun SAM-FS, Sun SAM-QFS
<code>/etc/name_to_major</code>	Maps driver to major number, as follows: <sup>2</sup> <code>samst 63</code> <code>samrd 64</code>	Sun SAM-FS, Sun SAM-QFS

1. The `samsys` system call number can vary depending on the system call numbers in use by the Sun Solaris software.
2. The `samst` and `samrd` major numbers can vary depending on the major numbers in use by the Sun Solaris software.

As part of the installation process, the existing `/etc/name_to_sysnum` file is backed up to `/etc/name_to_sysnum.SUNWsamfs`.



## ▼ To Install Sun Solaris Patches

Certain Sun Solaris patches overwrite the `/etc/name_to_sysnum` file. The `/etc/name_to_sysnum` file identifies loadable kernel modules by number rather than by name. If a patch overwrites this file, the Sun QFS, Sun SAM-FS, and Sun SAM-QFS system call number does not exist. A system panic can occur when you attempt to start Sun QFS, Sun SAM-FS, or Sun SAM-QFS processes and mount Sun QFS, Sun SAM-FS, or Sun SAM-QFS file systems if the system call number is not present in this file.

One indication of the problem is the presence of the following message in the `/var/adm/messages` file:

```
WARNING: system call missing from bind file
```

To avoid this message, you need to check and perhaps to fix your `/etc/name_to_sysnum` file if you install any Sun Solaris patches after your Sun QFS, Sun SAM-FS, or Sun SAM-QFS software is installed.

---

**Note** – The 4.0 releases use only one system call and only one system call number. By default, this is declared as `samsys 181` in the `/etc/name_to_sysnum` file. The following procedure assumes that you are using the default system call number of 181. If you are using a different number, modify the steps in this procedure to accommodate your system.

---

1. Use the `cp(1)` command to save your current `/etc/name_to_sysnum` file to an alternate location.

For example:

```
# cp /etc/name_to_sysnum /etc/name_to_sysnum.old
```

2. Install one or more patches.
3. Use `vi(1)` or another editor to open your `/etc/name_to_sysnum` file and search for lines containing the string `samsys`.
  - a. If no lines containing `samsys` exist in this file, add the following line:  
`samsys 181`
  - b. If lines containing the `samsys` exist, examine the system call number declared on the line.

- The following lines, if contained in the `/etc/name_to_sysnum` file, can be deleted:

```
samsys 180
samsys64 181
```

`samsys64` is no longer used in the release 4.0 software. `samsys 181` is the release 4.0 entry.

- If a `samsys` or `samsys64` line is present and does not declare 180 or 181 as its system call number, you need to examine the file to determine whether it should declare default system call numbers. If your file uses a nondefault system call number, ensure that a `samsys` system call line is present with a unique number.

#### 4. Reboot your system.

#### 5. Delete the backup file when all is determined to be running correctly.

For example:

```
# rm /etc/name_to_sysnum.old
```

# System Requirements

---

This chapter outlines the system requirements that must be met prior to the installation of Sun QFS, Sun SAM-FS, and Sun SAM-QFS software packages. These requirements are as follows:

- “Step 1: Verifying the Environment” on page 11
- “Step 2: Verifying Disk Cache” on page 12
- “Step 3: Verifying Disk Space” on page 15
- “Step 4: Verifying Sun Solaris Patches” on page 17
- “Step 5: Verifying Archive Media (Optional)” on page 18
- “Step 6: Verifying the Software License” on page 23
- “Step 7: Verifying Compatibilities” on page 24
- “Step 8: Verifying the Java Runtime Environment (Optional)” on page 24

The following sections describe these requirements in more detail.

---

## Step 1: Verifying the Environment

Sun QFS, Sun SAM-FS, and Sun SAM-QFS software packages run on many Sun workstations and servers. Before installation, you should verify the applicability of the hardware and the level of the Sun Solaris operating environment (OE). In addition, you must ensure that you have root-level access to your system.

### ▼ To Verify the Environment

1. **Verify that your system has a CD-ROM drive or that it can access the release package at the Sun Download Center.**

## 2. Verify your system's Sun Solaris OE.

The software relies on a properly configured Sun Solaris 7, 8, or 9 OE. Check to see that your server is running one of these levels by entering the following command:

```
# uname -sr  
SunOS 5.9
```

SunOS 5.x.y levels correspond to Sun Solaris OE levels. The preceding system is running the Sun Solaris 9 OE.

## 3. Log in to your system as root.

You must have superuser access to install the software.

---

# Step 2: Verifying Disk Cache

The Sun QFS, Sun SAM-FS, and Sun SAM-QFS software packages require a certain amount of disk cache in order for them to create and manage data files and directories. For the Sun QFS and Sun SAM-QFS software, at least two disk devices or partitions are required, one for file data and one for metadata. Multiple disk devices or partitions increase I/O performance. For the Sun SAM-FS software, at least one disk device or partition is required.

The disk devices or partitions do not require any special formatting, nor do they need to have a UNIX file system created on them. Make sure that the disks and partitions that you are using are not currently in use and do not contain any existing data because any existing data is lost when you create the Sun QFS, Sun SAM-FS, or Sun SAM-QFS file system.

For Sun SAM-FS and Sun SAM-QFS software, the disk must be connected to the server using a Fibre Channel or SCSI controller. Individual disk partitions can be specified for a disk, or the entire disk can be used as a disk cache. Disk arrays, including those under the control of volume management software, such as Solstice DiskSuite™ software and other volume management software products, are supported.

## ▼ To Verify the Available Disk Cache Space

### 1. Estimate the disk cache requirements for Sun QFS software (on file systems).

- Disk cache = largest file (in bytes) + amount of space needed for working files

- Metadata cache = ((number of files + number of directories) \* 512) + 16384 \* number of directories
2. **Estimate the disk cache requirements for Sun SAM-FS software (ms file systems).**
    - Disk cache = largest file (in bytes) + ((number of files + number of directories) \* 512) + 4096 \* number of directories + amount of space needed for working files
  3. **Estimate the disk cache requirements for Sun SAM-QFS software.**
    - Disk cache = largest file (in bytes) + amount of space needed for working files
    - Metadata cache = ((number of files + number of directories) \* 512) + 16384 \* number of directories
  4. **Use the `format(1M)` command to verify that you have sufficient disk cache space.**  
Remember that you must use `<ctrl>-d` to exit the `format(1M)` command.

## Example

CODE EXAMPLE 2-1 shows four disks attached to a server. There are two internal disks connected by means of controller 0 on targets 0 (c0t0d0) and 1 (c0t1d0). There are two external disks connected by means of controller 3 on targets 0 (c3t0d0) and 2 (c3t2d0).

**CODE EXAMPLE 2-1** `format(1M)` Command Example

```
# format
Searching for disks...done

AVAILABLE DISK SELECTIONS:
  0. c0t0d0 <SUN9.0G cyl 4924 alt 2 hd 27 sec 133>
     /sbus@1f,0/SUNW,fas@e,8800000/sd@0,0
  1. c0t1d0 <SUN2.1G cyl 2733 alt 2 hd 19 sec 80>
     /sbus@1f,0/SUNW,fas@e,8800000/sd@1,0
  2. c3t0d0 <SUN36G cyl 24620 alt 2 hd 27 sec 107>
     /sbus@1f,0/QLGC,isp@0,10000/sd@0,0
  3. c3t2d0 <SUN36G cyl 24620 alt 2 hd 27 sec 107>
     /sbus@1f,0/QLGC,isp@0,10000/sd@2,0

Specify disk (enter its number): 1
selecting c0t1d0
[disk formatted]
Warning: Current Disk has mounted partitions.

FORMAT MENU:
  disk          - select a disk
```

**CODE EXAMPLE 2-1** format(1M) Command Example (Continued)

```

type          - select (define) a disk type
partition     - select (define) a partition table
current       - describe the current disk
format        - format and analyze the disk
repair        - repair a defective sector
label         - write label to the disk
analyze       - surface analysis
defect        - defect list management
backup        - search for backup labels
verify        - read and display labels
save          - save new disk/partition definitions
inquiry       - show vendor, product and revision
volname       - set 8-character volume name
!<cmd>        - execute <cmd>, then return
quit

format> par

PARTITION MENU:
0          - change '0' partition
1          - change '1' partition
2          - change '2' partition
3          - change '3' partition
4          - change '4' partition
5          - change '5' partition
6          - change '6' partition
7          - change '7' partition
select     - select a predefined table
modify     - modify a predefined partition table
name       - name the current table
print      - display the current table
label      - write partition map and label to the disk
!<cmd>    - execute <cmd>, then return
quit

partition> pri
Current partition table (original):
Total disk cylinders available: 2733 + 2 (reserved cylinders)

Part      Tag      Flag      Cylinders      Size      Blocks
0         var      wm        0 - 2732      1.98GB    (2733/0/0) 4154160
1 unassigned wm        0              0          (0/0/0)    0
2 backup   wm        0 - 2732      1.98GB    (2733/0/0) 4154160
3 unassigned wm        0              0          (0/0/0)    0
4 unassigned wm        0              0          (0/0/0)    0
5 unassigned wm        0              0          (0/0/0)    0
6 unassigned wm        0              0          (0/0/0)    0

```

**CODE EXAMPLE 2-1** format(1M) Command Example (Continued)

```
7 unassigned      wm          0              0              (0/0/0)         0
partition> q
```

## Step 3: Verifying Disk Space

The software requires a certain amount of disk space in the / (root), /opt, and /var directories. The actual amount needed varies depending on the packages you install. TABLE 2-1 shows the minimum amount of disk space required in these various directories.

**TABLE 2-1** Minimum Disk Space Requirements

Directory	Sun SAM-FS, Sun SAM-QFS Disk Space Needed	Sun QFS Disk Space Needed
/ (root) directory	1,775 – 1,779 kilobytes	1,700 kilobytes
/opt directory	18,323 – 19,093 kilobytes	8,000 kilobytes
/var directory	577 – 597 kilobytes	170 kilobytes

Note that the archiver data directory, archiver queue files, and the log files are written to the /var directory, so the sizes shown in TABLE 2-1 should be considered a minimum amount for the /var directory.

TABLE 2-2 shows the disk space requirements for the individual installation packages.

**TABLE 2-2** Software Package Requirements (Required Packages)

Package	Space on / (root)	Space on /opt	Space on /var
SUNWqfs	1,700 kilobytes	8,000 kilobytes	170 kilobytes
SUNWsamfs	1,775 kilobytes	18,323 kilobytes	577 kilobytes

The following optional packages have been localized for Chinese, French, and Japanese language users. TABLE 2-3 shows the disk space requirements for these packages.

**TABLE 2-3** Software Package Requirements (Optional Packages)

Package	Space on /opt	Space on /var
SUNWcqfs, SUNWcsamf	8 kilobytes	90 kilobytes
SUNWfqfs, SUNWfsamf	7 kilobytes	140 kilobytes
SUNWjqfs, SUNWjsamf	10 kilobytes	140 kilobytes

## ▼ To Verify Disk Space

The following procedure shows how to verify whether or not there is enough disk space on your system to accommodate the SUNWqfs or SUNWsamfs packages. Note that these figures do not include the space needed for the optional localized packages described in TABLE 2-3.

1. Issue the `df(1M)` command as shown in CODE EXAMPLE 2-2.

**CODE EXAMPLE 2-2** Using the `df(1M)` Command to Verify Disk Space

```
# df -k /
Filesystem      kbytes  used  avail capacity  Mounted on
/dev/dsk/c0t1dos0 76767  19826  49271    29%      /
# df -k /opt
Filesystem      kbytes  used  avail capacity  Mounted on
/dev/dsk/c0t1dos4 192423  59006  114177   35%     /opt
```

2. Verify that there are at least 2,000 kilobytes available in the `avail` column for the `/` directory.
3. Verify that there are at least 20,000 kilobytes in the `avail` column for the `/opt` directory.
4. Verify that there are at least 577 kilobytes available in the `/var` directory.  
A quantity of 30 megabytes or more is recommended to allow for the growth of log files and other system files.
5. If there is not enough room for the software under each directory, repartition the disk to make more space available to each file system.  
To repartition a disk, see your Sun Solaris system administration documentation.



---

## Step 4: Verifying Sun Solaris Patches

The latest patches for the Sun Solaris OE are required. An updated list of Sun Solaris patches required prior to installation is included in the *Sun QFS*, *Sun SAM-FS*, and *Sun SAM-QFS README File*. After installation, the README is located in `/opt/SUNWsamfs/doc/README`.

### ▼ To Verify Sun Solaris Patches

- Use the `showrev(1M)` command to determine which patches are installed on your system.

For the sake of convenience, redirect the output to a file that can be examined easily. For example:

```
# showrev -p > outfile
```

If the required patches are not listed in the output from the `showrev(1M)` command, you must install them before installing any Sun QFS, Sun SAM-FS, or Sun SAM-QFS release packages. Patches are provided to customers with a Sun Microsystems maintenance contract by means of CD-ROM, anonymous FTP, and the Sun Microsystems SunSolve<sup>SM</sup> web site (<http://sunsolve.Sun.COM>).

To install a patch, load the CD-ROM or transfer the patch software to your system. Follow the instructions outlined in the *Patch Installation Instructions and Special Install Instructions* in the README file included in the patch or jumbo patch cluster.

---

**Note** – All patches should be installed before the Sun QFS, Sun SAM-FS, or Sun SAM-QFS 4.0 software is installed. Certain Sun Solaris patches overwrite the `/etc/name_to_sysnum` file. If you install Solaris patches after you have installed the Sun QFS, Sun SAM-FS, or Sun SAM-QFS 4.0 software, verify that your `/etc/name_to_sysnum` file is intact. The procedure for verifying your `/etc/name_to_sysnum` file is described in “Modified System Files” on page 8.

---

---

## Step 5: Verifying Archive Media (Optional)

This section applies to Sun SAM-FS and Sun SAM-QFS packages only.

The Sun SAM-FS and Sun SAM-QFS environments support archiving to removable media devices or to disk space in another file system.

If you are archiving to disk space in another file system, also called *disk archiving*, verify that you have space available on a disk and that the disk is accessible from the server upon which the Sun SAM-FS or Sun SAM-QFS software is installed. The archive copies can be written to any Sun Solaris file system, but they do not need to be written to a disk partition that is part of a Sun SAM-FS or Sun SAM-QFS file system.

If you are archiving to removable media devices, your environment should include at least one such device for archiving files. This device can be a single tape or optical drive or it can be multiple devices such as the drives within an automated library.

---

**Note** – One or more logical library catalogs are associated with each physical library. The library catalog tracks the movement of removable media devices within the library. If you are using tape devices, be aware that it is not possible to mix different types of tape media within a single library catalog. All media recorded in one library catalog must have the same media type code. Most libraries attached to a host system through a direct (SCSI) connection have one library catalog, and all drives in the library must be of the same media type. A library that is logically partitioned into two or more libraries has one catalog for each logical library, and the catalogs for each of these logical libraries can contain information for only one media type. For more information on media type codes and the types of media included in each code, see the `mcf(4)` man page.

---

The Sun SAM-FS and Sun SAM-QFS environments support a wide variety of removable media devices. A list of currently supported drives and libraries is available from Sun Microsystems.

The device that you intend to use must be attached and recognized by the server. If the removable media device is already connected and communicating with the server, go to “Step 6: Verifying the Software License” on page 23.

---

**Note** – Instructions for attaching removable media devices to a server are presented in this section. These are general guidelines for attaching removable media hardware to a server. For explicit instructions on connecting these peripherals to a server, refer to the hardware installation guide supplied by the vendor with the automated library and drives.

---

## ▼ To Attach Removable Media Devices

### 1. Power off the server before connecting devices.

Typically, central components are powered off first and then the peripheral equipment. So, use the `init(1M)` command to power off the server, as follows:

```
# init 5
```

This command brings down the system to the PROM level. At this point it is safe to power off the server and peripherals. For specific instructions regarding your equipment, see the documentation from the hardware vendor for proper power-on and power-off sequences.

### 2. Ensure that the removable media devices and the disk(s) to be used for the Sun SAM-FS and Sun SAM-QFS file system are connected and properly addressed.

### 3. Ensure that the SCSI target IDs are unique for each SCSI initiator (host adapter). (Optional)

Perform this step if you have libraries attached to the host system through a SCSI interface.

Avoid setting SCSI target IDs for peripherals to ID 7 because this ID is typically reserved for the initiator. For example, if you are using a SCSI host adapter with a previously attached disk drive set to use a target ID of 3, any additional peripheral connected to this bus must not have an ID of 3. Typically, the internal disk drive ID is 3 for SPARC systems and 0 for UltraSPARC™ systems.

### 4. Power on the peripherals and server according to the manufacturer's recommended sequence.

Typically, outermost peripherals are powered on first, working toward more central components in sequence.

## 5. Disable autobooting.

At the `> ok` prompt, disable autobooting by entering the following command:

```
>ok setenv auto-boot? false
```

## 6. Type `reset` at the next prompt.

For example:

```
>ok reset
```

Reenabling autobooting is described later in this procedure.

## 7. Conduct an inventory of target IDs and LUNs for each device connected to the host system through a SCSI interface. (Optional)

Perform this step if you have libraries attached to the host system through a SCSI interface.

Enter the following at the PROM `>ok` prompt:

```
{0} ok probe-scsi-all
/pci@1f,4000/scsi@3,1
Target 3
  Unit 0   Removable Device type 7   HP       C1716T       3404
Target 4
  Unit 0   Removable Device type 7   HP       C1716T       3404
Target 5
  Unit 0   Removable Device type 8   HP       C1710T       6.16

/pci@1f,4000/scsi@3
Target 0
  Unit 0   Disk          SEAGATE ST318404LSUN18G 4207
Target 6
  Unit 0   Removable Read Only device  TOSHIBA XM6201TASUN32XCD1103
```

In some instances, SCSI-attached devices might use a target number greater than 6 or a Logical Unit Number (LUN) greater than 0. If this is the case with your system, you must edit the `/kernel/drv/samst.conf` file when installed.

Save this output. The information in this output is needed when configuring SCSI-attached libraries.

## 8. Conduct an inventory of target IDs and LUNs for each device connected to the host system through a Fibre Channel interface. (Optional)

Perform this step if you have libraries or tape drives attached to the host system through a Fibre Channel interface.

Enter the following commands to locate the host adapter directory, select an item, and display the Fibre Channel host bus adapter (HBA) devices. The following is an example session:

```
{0} ok show-devs
/SUNW,ffb@1e,0
/SUNW,UltraSPARC-II@2,0
/SUNW,UltraSPARC-II@0,0
/counter-timer@1f,1c00
/pci@1f,2000
/pci@1f,4000
/virtual-memory
/memory@0,a0000000
/aliases
/options
/openprom
/chosen
/packages
/pci@1f,2000/SUNW,qlc@1
/pci@1f,2000/SUNW,qlc@1/fp@0,0
/pci@1f,2000/SUNW,qlc@1/fp@0,0/disk
/pci@1f,4000/SUNW,ifp@2
/pci@1f,4000/scsi@3,1
/pci@1f,4000/scsi@3
/pci@1f,4000/network@1,1
/pci@1f,4000/ebus@1
/pci@1f,4000/SUNW,ifp@2/ses
{0} ok select /pci@1f,2000/SUNW,qlc@1
{0} ok show-children
LiD HA LUN --- Port WWN --- ----- Disk description -----
 2 7e 0 500104f00041182b STK L700 0236
7c 7e 0 500104f00043abfc STK 9840 1.28
7d 7e 0 500104f00045eeaf STK 9840 1.28
6f 7e 0 5005076300416304 IBM ULT3580-TD1 16E0
6e 7e 0 5005076300416303 IBM ULT3580-TD1 16E0
```

If the server does not acknowledge all the devices (disk drives, tape or optical drives, the automated library, and so on), you should check the cabling. Cabling is often the problem when devices and controllers are not communicating. Do not proceed until all devices appear when probed.

Save this output. The information in this output is needed when configuring libraries attached through a Fibre Channel interface.

---

**Note** – “Step 4: Verifying Sun Solaris Patches” on page 17 explains the importance of installing all recommended patches before installing the Sun QFS, Sun SAM-FS, or Sun SAM-QFS software. If you have devices connected to the host system through a Fibre Channel interface, it is particularly important that you install the following Fibre Channel driver patches at the stated patch level or later:

- 111095-05 fctl/fp/fcp/usoc driver patch
- 111096-03 fcip driver patch
- 111097-04 qlc driver patch

In addition, you need to install the SAN Foundation Kit package (SUNWsan Package 1.0) and patch 111847-01 or later.

---

For more information, see the “Sun SAM-FS and Sun SAM-QFS Initial Installation Procedure” on page 63.

## 9. Reenable autobooting.

At the `>ok` prompt, enable autobooting by entering the following:

```
>ok setenv auto-boot? true
```

## 10. Boot the system.

```
>ok boot
```

## 11. Review system files.

Review the following files:

- `/var/adm/messages` to ensure that all devices were recognized.
- `/dev/rmt` for expected tape devices.
- `/dev/dsk` and `/dev/rdisk` for expected disks.

Due to special driver requirements, no device information appears in `/var/adm/messages` for magneto-optical devices or libraries until after the Sun SAM-FS or Sun SAM-QFS software package is installed.

---

## Step 6: Verifying the Software License

If you do not have a Sun Microsystems license key for the release level that you are installing, contact your authorized service provider (ASP) or Sun. When you contact Sun for a license, you will be asked to provide information regarding your environment.

For Sun QFS software, you will need to provide information such as the following:

- Your Sun sales order number.
- The host IDs of the system(s) upon which you will be installing the Sun QFS software.
- The server class of each host system to be used in the Sun QFS environment.

For Sun SAM-FS or Sun SAM-QFS, you will need to provide information such as the following:

- Your Sun sales order number.
- The host IDs of the system(s) upon which you will be installing the Sun QFS, Sun SAM-FS, or Sun SAM-QFS software.
- The types of libraries to be used in the Sun SAM-FS or Sun SAM-QFS environment.
- The media types of the drives to be used in the Sun SAM-FS or Sun SAM-QFS libraries.
- The total number of slots to be available to the Sun SAM-FS or Sun SAM-QFS software.

After your initial installation, if you upgrade your software or if you change your environment's configuration, you might need to change your software license. Changes to the environment that might necessitate upgrading your license include adding a library or changing a host system. If you have questions regarding your existing license, you can obtain license information by accessing the `samu(1M)` utility's 1 (for *license*) display. If you need to upgrade your license, contact your Sun sales representative.

The license keys for the Sun QFS, Sun SAM-FS, and Sun SAM-QFS packages allow the system to run indefinitely unless one of the following conditions is present:

- You were issued a temporary license. When a temporary license expires, the system is no longer able to load and unload cartridges, or to archive, stage, or release files.
- You are using Sun SAM-FS or Sun SAM-QFS software and you have exceeded the number of slots allowed for the license. In this case, you cannot import or label cartridges. Access continues unaffected for files already on a disk.

If your license expires, you can mount the file systems, but you cannot archive or stage files in a Sun SAM-FS or Sun SAM-QFS environment.

---

## Step 7: Verifying Compatibilities

The Sun QFS, Sun SAM-FS, and Sun SAM-QFS software interoperates with many different hardware and software products from third-party vendors. Depending on your environment, you might need to upgrade other software or firmware before installing or upgrading the Sun QFS, Sun SAM-FS, or Sun SAM-QFS package. Consult the README file distributed with this release for information pertaining to library model numbers, firmware levels, and other compatibility information.

---

## Step 8: Verifying the Java Runtime Environment (Optional)

If you want to use the optional GUI tools that are included with the Sun SAM-FS and Sun SAM-QFS software packages, make sure that you have the Java™ Runtime Environment (JRE) installed. If you do not have JRE software, you must download and install the JRE software yourself. Version 1.2.2 is recommended for use with the Sun SAM-FS and Sun SAM-QFS 4.0 software. You can download the JRE from [java.sun.com](http://java.sun.com).



# Sun QFS Initial Installation Procedure

---

This chapter describes the procedure for installing and configuring Sun QFS standalone software for the first time. Use this procedure if this is the initial installation of the Sun QFS standalone software package at your site. If you are upgrading Sun QFS software on an existing server, see the “Sun QFS Upgrade Procedure” on page 51.

The procedure in this chapter describes obtaining the packages, installing the software packages on your server, and configuring the software to match the hardware at your site. The main sections are as follows:

- “Step 1: Obtaining the Release Files” on page 26
- “Step 2: Adding the Packages” on page 27
- “Step 3: Setting Up PATH and MANPATH Variables” on page 28
- “Step 4: Licensing the Sun QFS Software” on page 29
- “Step 5: Configuring the Sun QFS File System” on page 29
- “Step 6: Creating the samfs.cmd File (Optional)” on page 40
- “Step 7: Creating the Mount Point and Updating the /etc/vfstab File” on page 41
- “Step 8: Initializing the File System” on page 42
- “Step 9: Mounting the File System” on page 43
- “Step 10: Sharing the File System With NFS Client Systems (Optional)” on page 45
- “Step 11: Mounting the File System on the NFS Client Systems (Optional)” on page 46
- “Step 12: Establishing Periodic Dumps Using qfsdump(1M)” on page 47

In addition, this chapter describes how to initialize your Sun QFS file system and how to check the status of your system. For most of the procedures in this chapter, you must have superuser (root) access.

---

# Step 1: Obtaining the Release Files

You can obtain the Sun QFS software package from the Sun Download Center or on a CD-ROM. The Sun Download Center is located at the following URL:

<http://sunwww.central/download/>

Contact your authorized service provider (ASP) or your Sun sales representative if you have questions on obtaining the software in one of these ways.

After the release, upgrade patches are available from the following URL:

<http://www.sunsolve.sun.com>



---

**Caution** – If you have not read the README file delivered with this release, please do so before continuing. You can access the README file for this release at any time from one of the documentation websites described in this manual's preface. It is available as the *Sun QFS*, *Sun SAM-FS*, and *Sun SAM-QFS README File*. After your software is installed, the content of the README file is located in `/opt/SUNWsamfs/doc/README`.

---

## ▼ To Install from a CD-ROM

### 1. Log in as root.

The Sun QFS file system uses the Sun Solaris operating environment (OE) packaging utilities for adding and removing software. You must be logged in as superuser (`root`) to make changes to software packages. The `pkgadd(1M)` utility prompts you to confirm various actions necessary to install the Sun QFS package.

### 2. Insert the CD into the CD drive.

The system should automatically detect the CD's presence. If it does not, issue commands to stop and start the Sun Solaris Volume Manager and to change to the directory that contains the Sun QFS software package.

For example:

```
# /etc/init.d/volmgt stop
# /etc/init.d/volmgt start
# volcheck
# cd /cdrom/cdrom0
```

On the CD, the Sun QFS package resides in the `/cdrom/cdrom0` directory organized by Sun Solaris version.

---

## Step 2: Adding the Packages

1. Use the `pkgadd(1M)` command to add the `SUNWqfs` package.

For example:

```
# pkgadd -d SUNWqfs
```

2. Use the `pkgadd(1M)` command to add one or more localized packages. (Optional)

Perform this step only if you want to install the packages localized for Chinese, French, or Japanese. To install these packages, enter one or more of the following commands:

```
# pkgadd -d SUNWcqfs
# pkgadd -d SUNWfqfs
# pkgadd -d SUNWjqfs
```

3. Reboot the server.

For example:

```
# reboot
```

If you have added new equipment that should be recognized by the host system, use the following `reboot(1M)` command:

```
# reboot -- -r
```

Changes associated with adding the Sun QFS system call number to the `/etc/name_to_sysnum` file are enabled at this time.

---

**Note** – Failure to reboot the system at this time prevents the file system from being mounted.

---

---

## Step 3: Setting Up PATH and MANPATH Variables

### ▼ To Set Up PATH and MANPATH Variables

1. **For users who need to access the Sun QFS user commands (for example, `sls(1)`), add `/opt/SUNWsamfs/bin` to the users' PATH variables.**
2. **For users who need to access the Sun QFS man pages, add `/opt/SUNWsamfs/man` to the MANPATH variable.**
3. **For users, such as superusers, who need to access the administrator commands, add `/opt/SUNWsamfs/sbin` to the PATH variable.**
4. **In the Bourne or Korn shells, edit the `.profile` file, change the PATH and MANPATH variables, and export the variables.**

For example:

```
PATH=$PATH:/opt/SUNWsamfs/bin:/opt/SUNWsamfs/sbin
MANPATH=$MANPATH:/opt/SUNWsamfs/man
export PATH MANPATH
```

5. **In the C shell, edit the `.login` and `.cshrc` files.**

For example, the `path` statement in your `.cshrc` file might look like the following:

```
set path = ($path /opt/SUNWsamfs/bin /opt/SUNWsamfs/sbin)
```

For example, the `MANPATH` statement in your `.login` file might look like the following:

```
setenv MANPATH /usr/local/man:opt/SUNWspro:/$OPENWINHOME/\
share/man:/usr/share/man:/opt/SUNWsamfs/man
```

---

## Step 4: Licensing the Sun QFS Software

A license key is required to run the Sun QFS software. For information on license keys, see “Step 6: Verifying the Software License” on page 23.

The Sun QFS file system uses an encrypted license key. The license key consists of an encoded alphanumeric string.

### ▼ To License the Sun QFS Software

1. **Create the `/etc/opt/SUNWsamfs/LICENSE.4.0` file.**
2. **Starting in column one, place the license key you have obtained from your ASP or from Sun Microsystems on the first line in the `/etc/opt/SUNWsamfs/LICENSE.4.0` file.**

The key must start in column one. No other keywords, host IDs, comments, or other information can appear in the `/etc/opt/SUNWsamfs/LICENSE.4.0` file. The license becomes effective when the Sun QFS file system is mounted.

---

## Step 5: Configuring the Sun QFS File System

Each Sun QFS environment is unique. The system requirements and hardware used differ from site to site. It is up to you, the system administrator at your site, to set up the specific configuration for your Sun QFS environment.

The topology of the equipment managed by the Sun QFS file system is defined in the master configuration file, `/etc/opt/SUNWsamfs/mcf`. This file specifies the devices and file systems included in the environment. Each piece of equipment is assigned a unique equipment identifier in the `mcf` file.

To configure Sun QFS devices, create an `mcf` file in `/etc/opt/SUNWsamfs/mcf` that contains a line for each device and family set in your configuration. The `mcf` contains information that enables you to identify the disk slices to be used and to organize them into Sun QFS file systems.

There are examples of `mcf` files in `/opt/SUNWsamfs/examples`.



**TABLE 3-1 Sun QFS `mcf` File Fields**

Field	Description
Family Set	<i>Required.</i> The Family Set organizes all devices with the same family set name together as a Sun QFS file system.
Device State	<i>Optional.</i> If specified, this field should contain either the keyword <code>on</code> or a dash character ( <code>-</code> ). Enter a state for the device for when the Sun QFS file system is initialized.
Additional Parameters	<i>Optional.</i> This field is used only if you are running the Sun QFS shared file system. The Sun QFS file system must be configured and tested on a host system prior to configuring the Sun QFS shared file system. For information on configuring the Sun QFS shared file system, see the <i>Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide</i> .

For more information on this file, see the `mcf(4)` man page. There is an example of an `mcf` file located in `/opt/SUNWsamfs/examples/mcf`.



**Caution** – Make sure you specify disk partitions that are not in use on your system. Do not use overlapping partitions. If a Sun QFS file system attempts to use a partition that is already in use, the software issues a message to indicate that the device is busy.

If you give the wrong partition names, you risk damaging user or system data. This is true when creating any type of file system. The risk is greatest if the partition named contains a UFS file system that is not mounted currently.

The following example shows file system entries in an `mcf` file:

```
#
# Sun QFS file system configuration
#
# Equipment      Equip Equip Fam   Dev   Additional
# Identifier     Ord  Type  Set   State Parameters
# -----
qfs1             1    ma   qfs1
/dev/dsk/c1t0d0s0 11   mm   qfs1  on
/dev/dsk/c1t1d0s4 12   mr   qfs1  on
/dev/dsk/c1t2d0s4 13   mr   qfs1  on
/dev/dsk/c1t3d0s4 14   mr   qfs1  on
```

## ▼ To Reinitialize the mcf File

Reinitialization of the `mcf` file is not needed at this point in the configuration process. Be aware, however, that if you change the `mcf` file after the Sun QFS file system is in use, you must convey the new `mcf` specifications to the Sun QFS software. For information on reinitializing the `mcf` file, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*.

## Configuration Example 1

CODE EXAMPLE 3-1 shows output from the Sun Solaris `format(1M)` command. It reports that the disks are partitioned as follows.

### CODE EXAMPLE 3-1 `format(1M)` Command Output

```
1. c1t0d0 <SEAGATE-ST15230W-0168 cyl 3974 alt 2 hd 19 sec 111>
/iommu@0,10000000/sbus@0,10001000/QLGC,isp@1,10000/sd@0,0
Current partition table (original) :
Total disk cylinders available: 3974 + 2 (reserved cylinders)
Part    Tag          Flag      Cylinders    Size      Blocks
0       unassigned   wm        0-3499       3.52GB   (3500/0/0)
1       unassigned   wm        3500-3972    487.09MB (473/0/0)
2       backup       wu        0-3973       4.00GB   (3974/0/0)
3       unassigned   wm        0             0         (0/0/0)
4       unassigned   wm        0             0         (0/0/0)
5       unassigned   wm        0             0         (0/0/0)
6       unassigned   wm        0             0         (0/0/0)
7       unassigned   wm        0             0         (0/0/0)
2. c1t1d0 <SEAGATE-ST15230W-0168 cyl 3974 alt 2 hd 19 sec 111>
/iommu@0,10000000/sbus@0,10001000/QLGC,isp@1,10000/sd@1,0
Current partition table (original):
Total disk cylinders available: 3974 + 2 (reserved cylinders)
Part    Tag          Flag      Cylinders    Size      Blocks
0       unassigned   wm        1000-3973    2.99GB   (2974/0/0)
1       unassigned   wu        0             0         (0/0/0)
2       backup       wu        0-3973       4.00GB   (3974/0/0)
3       unassigned   wm        0             0         (0/0/0)
4       unassigned   wm        0             0         (0/0/0)
5       unassigned   wm        0-999        1.01GB   (1000/0/0)
6       unassigned   wm        0             0         (0/0/0)
7       unassigned   wm        0             0         (0/0/0)
```



One file system (qfs1) is placed on slice 0 of disk c1t0d0 and slice 0 of c1t1d0. Another file system (qfs2) is created on slice 1 of disk c1t0d0 and slice 5 of disk c1t1d0.

## ▼ To Write the mcf File

Begin writing the mcf file for this configuration example by defining the file system and its disk partitions, as follows:

### 1. Make an ma entry for the first file system.

The name of this file system (qfs1) is used later when writing the /etc/vfstab entry for the file system and making the file system.

### 2. Make an mm entry listing the partition(s) that comprise the metadata for the qfs1 file system.

### 3. Make a series of mr entries listing the partitions that comprise the file data for the qfs1 file system.

### 4. Make similar entries for the second (qfs2) file system.

The resulting mcf file is as follows:

```
# Disk cache configuration for 2 file systems: qfs1, qfs2
# Equipment      Eq   Eq   Fam.  Dev.  Additional
# Identifier     Ord  Type Set   State Parameters
#-----
#
qfs1              1   ma  qfs1
/dev/dsk/c2t0d0s0 11  mm  qfs1  on
/dev/dsk/c1t0d0s0 12  mr  qfs1  on
/dev/dsk/c1t1d0s0 13  mr  qfs1  on
#
#
qfs2              20  ma  qfs2
/dev/dsk/c2t0d0s1 21  mm  qfs2  on
/dev/dsk/c1t0d0s1 22  mr  qfs2  on
/dev/dsk/c1t1d0s5 23  mr  qfs2  on
```

## Configuration Example 2

The server in this example has a StorageTek Clarion RAID device with four StorageTek OPENstorage 9153 disk drives. Each drive has 34 gigabytes of storage.

The Sun Solaris `format(1M)` command reports that the disks are partitioned as follows:

```
# format
Searching for disks...done

AVAILABLE DISK SELECTIONS:
 0. c0t0d0 <SUN4.2G cyl 3880 alt 2 hd 16 sec 135>
    /sbus@1f,0/SUNW,fas@e,8800000/sd@0,0
 1. c0t1d0 <SEAGATE-ST39140WC-1206 cyl 9004 alt 2 hd 8 sec 246>
    /sbus@1f,0/SUNW,fas@e,8800000/sd@1,0
 2. c2t4d0 <STK-OPENstorage9153-0205 cyl 17338 alt 2 hd 64 sec 64>
    /pseudo/rdnexus@2/rdriver@4,0
 3. c2t4d1 <STK-OPENstorage9153-0205 cyl 17338 alt 2 hd 64 sec 64>
    /pseudo/rdnexus@2/rdriver@4,1
 4. c2t2d2 <STK-OPENstorage9153-0205 cyl 34977 alt 2 hd 64 sec 64>
    /pseudo/rdnexus@2/rdriver@4,2
 5. c2t4d3 <STK-OPENstorage9153-0205 cyl 34977 alt 2 hd 64 sec 64>
    /pseudo/rdnexus@2/rdriver@4,3
 6. c3t2d0 <SEAGATE-ST15230W-0168 cyl 3974 alt 2 hd 19 sec 111>
    /sbus@1f,0/QLGC,isp@2,10000/sd@2,0
```

One file system named `qfs1` is created on disks `c2t4d0`, `c2t4d1`, `c2t4d2`, and `c2t4d3`. Each disk is partitioned identically, with slice 0 consuming the entire disk. The following is an example of a partition map for these disks.

Part	Tag	Flag	Cylinders	Size	Blocks
----	---	----	-----	----	-----
0	usr	wm	0-17377	33.86GB	(17337/0/0) 71012352
1	unassigned	wm	0	0	(0/0/0)
2	backup	wu	0-17377	33.86GB	(17337/0/0) 71012352
3	unassigned	wm	0	0	(0/0/0)
4	unassigned	wm	0	0	(0/0/0)
5	unassigned	wm	0	0	(0/0/0)
6	unassigned	wm	0	0	(0/0/0)
7	unassigned	wm	0	0	(0/0/0)

The file system entries in the `mcf` file are as follows:

```
# Sun QFS file system configuration example
#
# Equipment      Equip Equip Fam   Dev   Additional
# Identifier     Ord  Type Set   State Parameters
# -----
qfs1             10   ma   qfs1
/dev/dsk/c1t1d0s0 11   mm   qfs1 on
/dev/dsk/c2t4d0s0 12   mr   qfs1 on
/dev/dsk/c2t4d1s0 13   mr   qfs1 on
/dev/dsk/c2t4d2s0 14   mr   qfs1 on
/dev/dsk/c2t4d3s0 15   mr   qfs1 on
```

In the preceding `mcf` file, the lines are as follows:

Line 1 defines a Sun QFS file system. The name of this file system, `qfs1`, is used later when writing the `/etc/vfstab` entry for the file system and when creating the file system.

Line 2 shows an `mm` device type entry for the metadata device. Note that this entry is not part of the RAID device described previously. A separate disk is used for caching inode information, leaving the RAID for high-speed data accesses.

Lines 3, 4, 5, and 6 are the data devices using the `mr` device type.

## Configuration Example 3

This example illustrates a Sun QFS file system. If there is a low-latency device available, such as a solid-state disk, use that for the metadata. Round-robin allocation is used on four disk drives.

The following assumptions are used:

- The metadata device is a single partition (`s1`) used on controller 0, LUN 0.
- The data devices consist of four disks attached to controller 1. Each disk is on a separate target (1-4).

### ▼ To Configure the System

This example introduced the round-robin data layout. For more information on data layout, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*.

### 1. Write the `mcf` file.

The following is a sample `mcf` file for a round-robin disk configuration:

```
# Sun QFS disk cache configuration - Round-robin mcf sample
#
# Equipment      Eq   Eq   Fam.  Dev.  Additional
# Identifier     Ord  Type Set   State Parameters
#-----
qfs1             1   ma   qfs1
/dev/dsk/c0t0d0s1 11  mm   qfs1  on
/dev/dsk/c1t1d0s1 12  mr   qfs1  on
/dev/dsk/c1t2d0s1 13  mr   qfs1  on
/dev/dsk/c1t3d0s1 14  mr   qfs1  on
/dev/dsk/c1t4d0s1 15  mr   qfs1  on
```

---

**Note** – For completeness, this example includes information on modifying the `/etc/vfstab` system file and on using the `sammkfs(1M)` command to initiate the file system. These steps are described in more detail later in this procedure.

---

### 2. Modify the `/etc/vfstab` file.

The `/etc/vfstab` is edited.

To explicitly set round-robin on the file system, set the `stripe=0` mount parameter as follows:

```
qfs1 - /qfs samfs - yes stripe=0
```

### 3. Run the `sammkfs(1M)` command.

Initialize the Sun QFS file system by using the `sammkfs(1M)`. The default DAU is 64 kilobytes, but the following example sets the DAU size to 128 kilobytes:

```
# sammkfs -a 128 qfs1
```

## Configuration Example 4

This example illustrates a Sun QFS file system that again separates the metadata onto a low-latency disk. File data is striped to four disk drives.

The following assumptions are used:

- The metadata device is a single partition (s6) used on controller 0, LUN 0.
- The data devices consist of four disks attached to controller 1. Each disk is on a separate LUN (1-4).

## ▼ To Configure the System

### 1. Write the `mcf` file.

Write the `mcf` file using the disk configuration assumptions. The following is a sample `mcf` file for a striped disk configuration:

```
# Sun QFS disk cache configuration - Striped Disk mcf sample
#
# Equipment      Eq   Eq   Fam.  Dev.  Additional
# Identifier     Ord  Type Set   State Parameters
#-----
qfs1             10   ma   qfs1
/dev/dsk/c0t1d0s6 11   mm   qfs1   on
/dev/dsk/c1t1d0s6 12   mr   qfs1   on
/dev/dsk/c1t2d0s6 13   mr   qfs1   on
/dev/dsk/c1t3d0s6 14   mr   qfs1   on
/dev/dsk/c1t4d0s6 15   mr   qfs1   on
```

---

**Note** – For completeness, this example includes information on modifying the `/etc/vfstab` system file and on initializing the file system using the `sammkfs(1M)` command. These steps are described in more detail later in this procedure.

---

### 2. Modify the `/etc/vfstab` file.

Set the stripe width using the `stripe=` option. The following example sets the stripe width equal to one disk allocation unit (DAU):

```
qfs1 - /qfs samfs - yes stripe=1
```

This setting stripes file data across all four of the `mr` data drives with a stripe width of one disk allocation unit (DAU). Note that the DAU is the allocation unit you set when you initialize the file system.

### 3. Run the `sammkfs(1M)` command.

Initialize the Sun QFS file system by using the `sammkfs(1M)` command. The following examples set the DAU size to 128 kilobytes:

```
# sammkfs -a 128 qfs1
```

With this striped disk configuration, any file written to this file system is striped across all of the devices in increments of 128 kilobytes. Files less than the aggregate stripe width times the number of devices still use 128 kilobytes of disk space. Files larger than 128 kilobytes have space allocated for them as needed in total space increments of 128 kilobytes. Metadata is written to device 11 only.

## Configuration Example 5

Striped groups allow you to group RAID devices together for very large files. Normally, a DAU is represented by one bit in the bitmaps. With striped groups, however, there is only one DAU per striped group. This method of writing huge DAUs across RAID devices saves bitmap space and system update time. Striped groups are useful for writing very large files to a group of RAID devices.

---

**Note** – A DAU is the minimum disk space allocated. The minimum disk space allocated in a striped group is as follows:

*allocation\_unit X number of disks in the group*

Writing a single byte of data fills the entire striped group. The use of striped groups is for very specific applications. Make sure that you understand the effects of using striped groups with your file system.

---

The devices within a striped group must be the same size. It is not possible to increase the size of a striped group. You can add additional striped groups, however.

This example configuration illustrates a Sun QFS file system that separates the metadata onto a low-latency disk. Two striped groups are set up on four drives. The following assumptions are used:

- The metadata device is a single partition (s6) used on controller 0, LUN 0.
- The data devices consist of four disks (two groups of two identical disks) attached to controller 1. Each disk is on a separate LUN (1-4).

## ▼ To Configure the System

### 1. Write the `mcf` file.

Write the `mcf` file by using the disk configuration assumptions. The following is a sample `mcf` file for a striped group configuration:

```
# Sun QFS disk cache configuration - Striped Groups mcf sample
#
# Equipment      Eq   Eq   Fam.  Dev.  Additional
# Identifier     Ord  Type Set   State Parameters
#-----
qfs1             10   ma   qfs1
/dev/dsk/c0t1d0s6 11   mm   qfs1   on
/dev/dsk/c1t1d0s4 12   g0   qfs1   on
/dev/dsk/c1t2d0s4 13   g0   qfs1   on
/dev/dsk/c0t3d0s4 14   g1   qfs1   on
/dev/dsk/c0t4d0s4 15   g1   qfs1   on
```

---

**Note** – For completeness, this example includes information on modifying the `/etc/vfstab` system file and on initializing the file system by using the `sammkfs(1M)` command. These steps are described in more detail later in this procedure.

---

### 2. Modify the `/etc/vfstab` file.

Set the stripe width by using the `stripe=` option. This sample sets the stripe width equal to zero, which essentially specifies a round-robin allocation from striped group `g0` to striped group `g1`:

```
qfs1 - /qfs samfs - yes stripe=0
```

### 3. Run the `sammkfs(1M)` command.

Initialize the Sun QFS file system by using the `sammkfs(1M)` command. The `-a` option is not used with striped groups because the DAU is equal to the size of an allocation, or the size, of each group.

```
# sammkfs qfs1
```

In this example, there are two striped groups, `g0` and `g1`. With `stripe=0` in `/etc/vfstab`, devices 12 and 13 are striped; devices 14 and 15 are striped; and files are round robined around the two striped groups. You are actually treating a striped group as a bound entity. That is, the configuration of a striped group, once it is created, cannot be changed.

You cannot change these groups without issuing another `sammkfs(1M)` command.

---

## Step 6: Creating the `samfs.cmd` File (Optional)

You can create the `/etc/opt/SUNWsamfs/samfs.cmd` file as the place from which mount parameters are read. Creating this file can be beneficial if you are configuring multiple Sun QFS systems with multiple mount parameters.

The mount parameters can be provided in the `samfs.cmd` file, in the `/etc/vfstab` file, and on the `mount(1M)` command. Specifications in the `/etc/vfstab` file override the directives in the `samfs.cmd` file, and options to the `mount(1M)` command override specifications in the `/etc/vfstab` file.

Certain features can be managed more easily from a `samfs.cmd` file. These features include the following:

- Striping.
- Quotas.
- Readahead, which specifies the number of bytes that are read ahead when performing paged I/O.
- Writebehind, which specifies the number of bytes that are written behind when performing paged I/O.
- Qwrite, which enables simultaneous reads and writes to the same file from different threads.

For more information on the `samfs.cmd` file, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*, or see the `samfs.cmd(4)` man page. For more information on the `/etc/vfstab` file, see “Step 7: Creating the Mount Point and Updating the `/etc/vfstab` File” on page 41. For more information on the `mount(1M)` command, see the `mount_samfs(1M)` man page.



---

# Step 7: Creating the Mount Point and Updating the `/etc/vfstab` File

## 1. Edit the `/etc/vfstab` file and create an entry for each Sun QFS file system.

An example entry follows:

```
qfs1 - /qfs1 samfs - yes stripe=1
```

TABLE 3-2 shows the various fields and their content.

**TABLE 3-2** Fields in the `/etc/vfstab` File

Field	Field Title and Contents
1	Device to mount. The name of the Sun QFS file system to mount. This must be the same name as the Family Set name specified in the <code>mcf</code> file.
2	Device to <code>fsck(1M)</code> . Must be a dash (-) character. The dash indicates that there are no options. This prevents the system from performing an <code>fsck(1M)</code> on the Sun QFS file system. For more information on this process, see the <code>fsck(1M)</code> man page.
3	Mount point. For example, <code>/qfs1</code> .
4	File system type. Must be <code>samfs</code> .
5	<code>fsck(1M)</code> pass. Must be a dash (-) character. A dash indicates that there are no options.
6	Mount at boot. Specifying <code>yes</code> in this field causes the Sun QFS file system to be automatically mounted at boot time. Specifying <code>no</code> in this field indicates that you do not want to automatically mount the file system. For information on the format of these entries, see the <code>mount_samfs(1M)</code> man page.
7	Mount parameters. A list of comma-separated parameters (with no spaces) that are used in mounting the file system. For example, <code>stripe=1</code> specifies a stripe width of one DAU. For a list of available mount options, see the <code>mount_samfs(1M)</code> man page.

## 2. Create the mount point.

The example in this step assumes that `/qfs1` is the mount point of the `qfs1` file system. You can select a different name and substitute it for `/qfs1`, if you want. For example:

```
# mkdir /qfs1
```

**3. Change the permissions, owner, or group owner of the /qfs1 directory when it is not mounted. (Optional)**

This is done on a UFS file system. For example:

```
# chmod 555 /qfs1
# chown root /qfs1
# chgrp other /qfs1
```

---

**Note** – If you configured multiple mount points, repeat these steps for each mount point, using a different mount point (such as /qfs2) and Family Set name (such as qfs2) each time.

---

---

## Step 8: Initializing the File System

### ▼ To Initialize a File System

- Use the `sammkfs(1M)` command and the Family Set names that you have defined to create a file system for each Family Set.

For example, the following command creates a file system for Family Set name `qfs1`:

```
# sammkfs -a 128 qfs1
```

At this point, the system generates a message similar to the following:

```
# sammkfs qfs1
Building 'qfs1' will destroy the contents of devices:
    /dev/dsk/c1t0d0s0
    /dev/dsk/c3t1d0s6
    /dev/dsk/c3t1d1s6
    /dev/dsk/c3t2d0s6
Do you wish to continue? [y/N]
```

Enter `y` in response to this message to continue the file system creation process.



---

**Caution** – Running `sammkfs(1M)` creates a new file system. It removes all references to the data currently contained in the partition associated with the file system in the `/etc/opt/SUNWsamfs/mcf` file.

---

## Step 9: Mounting the File System

The `mount(1M)` command mounts a file system. For information on the `mount(1M)` command, see the `mount_samfs(1M)` man page.

The `mount(1M)` command mounts a Sun QFS file system and reads the `/etc/vfstab` configuration file. For more information on the `mount(1M)` command, see the `mount_samfs(1M)` man page. For more information on the `/etc/vfstab` file, see the `vfstab(4)` man page.

Sun QFS file systems can be mounted either automatically at boot time or manually. This step shows both methods.

### ▼ To Mount the File System Automatically

- **Edit the `/etc/vfstab` file and change the Mount at Boot field, which is the sixth field in the file, to `yes`.**

The following example entry in the `/etc/vfstab` file specifies that the `qfs1` file system should be mounted at system startup.

```
qfs1 - /qfs1 samfs - yes stripe=1
```

The previous line causes `/etc/rc1.d/S01MOUNTFSYS` to mount the `qfs1` file system at system startup.

Proceed to “To Confirm that a File System is Mounted and Set Permissions” on page 44.

### ▼ To Mount the File System Manually

1. **Edit the `/etc/vfstab` file and change the Mount at Boot field, which is the sixth field in the file, to `no`. (Optional)**

The advantage to making an `/etc/vfstab` entry is that it allows you to provide mount parameters in the `/etc/vfstab` file. When the file system is mounted, the `mount(1M)` command reads the mount parameters from the `/etc/vfstab` file and you do not have to specify them on the command line.

The following example entry in the `/etc/vfstab` file specifies that the `qfs1` file system should not be mounted automatically at system startup.

```
qfs1 - /qfs1 samfs - no stripe=1
```

## 2. Issue the `mount(1M)` command to mount the file system after system startup.

If there is an entry for this file system in the `/etc/vfstab` file, issue the `mount(1M)` command and specify the file system mount point as the argument. For example:

```
# mount /qfs1
```

If there is no entry for this file system in the `/etc/vfstab` file, issue the `mount(1M)` command and specify the file system type, file system name, and the file system mount point as arguments. For example:

```
# mount -F samfs qfs1 /qfs1
```

## ▼ To Confirm that a File System is Mounted and Set Permissions

### 1. Issue the `mount(1M)` command with no arguments.

Examine its output to see whether the file system is mounted. For example:

```
# mount
<<< information deleted >>>
/qfs on qfs6 read/write/setuid/dev=8001b1 on Mon Jan 14 12:21:03 2002
<<< information deleted >>>
```

### 2. Issue the `chmod(1)` and `chown(1)` commands to change the permissions and ownership of the file system's root directory. (Optional)

If this is the first time the file system has been mounted, it is typical to perform this step. For example:

```
# chmod 755 /qfs
# chown root:other /qfs
```

---

## Step 10: Sharing the File System With NFS Client Systems (Optional)

Perform this step if you want the Sun QFS file system to be NFS shared.

The Sun Solaris `share(1M)` command must be run to make the file system available for mounting by remote systems. The `share(1M)` commands are typically placed in the `/etc/dfs/dfstab` file and are executed automatically by the Sun Solaris OE when you enter `init(1M)` state 3.

### ▼ To NFS Share the File System

1. **Use an editor to add a `share(1M)` command to the `/etc/dfs/dfstab` file.**

For example, add a line like the following:

```
share -F nfs -o rw=client1:client2 -d "QFS" /qfs1
```

2. **Use the `ps(1)` command to determine whether or not `nfs.server` is running.**

Issue the following commands:

```
# ps -ef | grep nfsd
# ps -ef | grep mountd
```

3. **If `nfs.server` is not running, enter the following command to start `nfs.server`:**

```
# /etc/init.d/nfs.server start
```

**4. If you want to NFS share the file system immediately, you must type the `share(1M)` command at a `root` shell prompt. (Optional)**

If there are no NFS shared file systems when the Sun Solaris OE boots, the NFS server is not started. You must change to run level 3 after adding the first share entry to this file. For example:

```
# init 3
# who -r
.          run-level 3  Dec 12 14:39      3    2    2
# share
-          /qfs    -    "QFS"
```

Some NFS mount parameters can affect the performance of an NFS mounted Sun QFS file system. You can set these parameters in the `/etc/vfstab` file as follows:

- `timeo = n`. This value sets the NFS timeout to *n* tenths of a second. The default is 11 tenths of a second. For performance purposes, Sun Microsystems recommends using the default value. You can increase or decrease the value appropriately to your system.
- `rsz = n`. This value sets the read buffer size to *n* bytes. In NFS 2, change the default value (8192) to 32768. In NFS 3, retain the default value of 32768.
- `wsz = n`. This value sets the write buffer size to *n* bytes. In NFS 2, change the default value (8192) to 32768. In NFS 3, retain the default value of 32768.

For more information on these parameters, see the `mount_nfs(1M)` man page.

---

## Step 11: Mounting the File System on the NFS Client Systems (Optional)

Perform this step if you have shared the file system with NFS client systems.

**1. On the client systems, mount the server's Sun QFS file system at a convenient mount point.**

In the following example, `server:/qfs1` is mounted on `/qfs1`, and information is entered into the `/etc/vfstab` file:

```
server:/qfs1 - /qfs1  nfs - no intr,timeo=60
```

## 2. Enter the `mount(1M)` command.

For example:

```
# mount /qfs1
```

The automounter can also do this, if it is preferred. Follow your site procedures for adding `server:/qfs1` to your automounter maps.

---

# Step 12: Establishing Periodic Dumps Using `qfsdump(1M)`

File systems are made up of directories, files, and links. The Sun QFS file system keeps track of all the files in the `.inodes` file. The `.inodes` file resides on a separate metadata device. All file data is stored on the data devices.

It is important to periodically use the `qfsdump(1M)` command to create a dump file of metadata and file data. The `qfsdump(1M)` command saves the relative path information for each file contained in a complete file system or in a portion of a file system. This protects your data in the event of a disaster.

Dump files should be created at least once a day, but the frequency depends on your site's requirements. By dumping file system data on a regular basis, old files and file systems can be restored or moved from one file system to another, or even from one server to another.

The following are some guidelines to be used when creating dump files:

- The `qfsdump(1M)` command dumps file names, inode information, and data. This command creates full dumps of specified files and directories. An incremental dump is not available. Because of these factors, a `qfsdump(1M)` dump file can be very large. The `qfsdump(1M)` command does not have any tape management, size estimations, or incremental dump facilities as does `ufsdump(1M)`. In addition, the `qfsdump(1M)` command does not support volume overflow, so you need to weigh space considerations and make sure that the size of the file system does not exceed the size of the dump media.
- The `qfsdump(1M)` command dumps all the data of a sparse file, and the `qfsrestore(1M)` command restores all the data. These commands do not, however, preserve file qualities that enable sparse files to be characterized as sparse. This can lead to files occupying more space on dump files and on restored file systems than anticipated.

- The `qfsdump(1M)` command must be issued on a mounted file system. Inconsistencies can arise as new files are being created on disk. Dumping file systems during a quiet period (a time when files are not being created or modified) is a good idea and minimizes these inconsistencies.
- Ensure that you dump metadata and data for all Sun QFS file systems. Look in `/etc/vfstab` for all file systems of type `samfs`.

You can run the `qfsdump(1M)` command manually or automatically. Even if you implement this command to be run automatically, you might need to run it manually from time to time depending on your site's circumstances. In the event of a disaster, you can use the `qfsrestore(1M)` command to recreate your file system. You can also restore a single directory or file. For more information on these commands, see the `qfsdump(1M)` man page and see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS Disaster Recovery Guide*.

For more information on creating dump files, see the `qfsdump(1M)` man page. The following sections describe procedures for issuing this command both manually and automatically.

## ▼ To Run the `qfsdump(1M)` Command Automatically

1. **Make an entry in `root`'s `crontab` file so that the `cron` daemon runs the `qfsdump(1M)` command periodically.**

For example:

```
10 0 * * * (cd /qfs1; /opt/SUNWsamfs/sbin/qfsdump -f /dev/rmt/0cbn)
```

This entry executes the `qfsdump(1M)` command at 10 minutes after midnight. It uses the `cd(1)` command to change to the mount point of the `qfs1` file system, and it executes the `/opt/SUNWsamfs/sbin/qfsdump` command to write the data to tape device `/dev/rmt/0cbn`.

2. **Using the previous step as a guide, make similar `crontab` file entries for each file system. (Optional)**

Perform this step if you have more than one Sun QFS file system.

Make sure you save each dump file in a separate file.

## ▼ To Run the `qfsdump(1M)` Command Manually

1. **Login as superuser.**



2. Use the `cd(1)` command to go to the directory that contains the mount point for the file system.

For example:

```
# cd /qfs1
```

3. Create a dump file by issuing the `qfsdump(1M)` command and writing the output to a file system outside of the one you are dumping.

For example:

```
# qfsdump -f /save/qfs/dump_file
```



# Sun QFS Upgrade Procedure

---

This chapter describes upgrading a server to a new release of the Sun QFS software. Use this procedure if you are upgrading your Sun QFS file system.

You must perform all the steps in this chapter as superuser (`root`).

The main sections in this chapter are as follows:

- “Step 1: Obtaining the Release Files” on page 51
- “Step 2: Backing Up Each File System” on page 53
- “Step 3: Unsharing the File Systems (Optional)” on page 551
- “Step 4: Unmounting the File Systems” on page 55
- “Step 5: Removing Existing Sun QFS Software” on page 57
- “Step 6: Adding the Packages” on page 58
- “Step 7: Updating the License Keys” on page 58
- “Step 8: Verifying the mcf File” on page 59
- “Step 9: Modifying the `/etc/vfstab` File (Optional)” on page 60
- “Step 10: Reinitializing and Restoring the File Systems (Optional)” on page 60
- “Step 11: Checking the File System (Optional)” on page 61
- “Step 12: Mounting the File System (Optional)” on page 62
- “Step 13: Recompiling API-Dependent Applications (Optional)” on page 62

---

## Step 1: Obtaining the Release Files

You can obtain the Sun QFS software from the Sun Download Center or on a CD-ROM. The Sun Download Center is located at the following URL:

`http://sunwww.central/download/`

Contact your authorized service provider (ASP) or your Sun sales representative if you have questions on obtaining the software in one of these ways.

After the release, upgrade patches are available from the following URL:



---

**Caution** – If you have not read the README file delivered with this release, please do so before continuing. You can access the README file for this release at any time from one of the documentation websites described in this manual's preface. It is available as the *Sun QFS*, *Sun SAM-FS*, and *Sun SAM-QFS README File*. After your software is installed, the content of the README file is located in `/opt/SUNWsamfs/doc/README`.

---

## ▼ To Install from a CD-ROM

### 1. Log in as root.

The Sun QFS file system uses the Sun Solaris operating environment (OE) packaging utilities for adding and removing software. You must be logged in as superuser (`root`) to make changes to software packages. The `pkgadd(1M)` utility prompts you to confirm various actions necessary to install the package.

### 2. Insert the CD into the CD drive.

The system should automatically detect the CD's presence. If it does not, issue commands to stop and start the Sun Solaris Volume Manager and to change to the directory that contains the Sun QFS software package.

For example:

```
# /etc/init.d/volmgt stop
# /etc/init.d/volmgt start
# volcheck
# cd /cdrom/cdrom0
```

On the CD, the Sun QFS package resides in the `/cdrom/cdrom0` directory organized by Sun Solaris version.

---

## Step 2: Backing Up Each File System

### ▼ To Back Up Each File System

**1. Log in as the `root` user (Optional)**

If you have not already logged in as `root`, do so now.

**2. Use the `boot(1M)` command to boot the system in single-user mode.**

Use the following command:

```
# boot -s
```

**3. Use the `mount(1M)` command to mount the Sun QFS file system.**

For example:

```
# mount /qfs1
```

**4. Use the `qfsdump(1M)` command to back up the file data and metadata of each Sun QFS file system.**

The `qfsdump(1M)` command dumps file names, inode information, and file data. The destination of the `qfsdump(1M)` output (generally a file) must be as large or larger than the Sun QFS file system you are backing up. The destination location must have enough space (disk or tape) to hold the amount of file data and metadata you are dumping. For more information on using the `qfsdump(1M)` command, see “Step 12: Establishing Periodic Dumps Using `qfsdump(1M)`” on page 47 or see the `qfsdump(1M)` man page.

The location to which you dump each file system should be outside of the Sun QFS file system. For more information, see the `qfsdump(1M)` man page.

---

**Note** – You must back up your file system now if you plan to use the following Sun QFS 4.0 features:

- Access Control Lists (ACLs)
- Sun QFS shared file system
- md devices in Sun QFS or Sun SAM-QFS (ma) file systems
- Dual-sized disk allocation units (DAUs) on mm devices

In order to use any of these features, you need to reinitialize the file system. Reinitializing the file system is described in “Step 10: Reinitializing and Restoring the File Systems (Optional)” on page 60 of this installation process. After the file system is reinitialized, by using the `sammkfs(1M)` command, you can use the `qfsrestore(1M)` command to restore files to the new file system from the dump file created in this installation step.

---

For example, assume that you have a file system named `qfs1` (mounted at `/qfs1`) that you want to back up. Your choices are as follows:

**a. You can write the `qfsdump(1M)` output as a file to a file system or a tape device.**

For example, to write to a tape in device `/dev/rmt/1cbn`, use the following commands:

```
# cd /qfs1
# qfsdump -f /dev/rmt/1cbn
```

**b. You can write the `qfsdump(1M)` output to a file in a UFS file system**

For example, you can use the following commands:

```
# cd /qfs1
# qfsdump -f /save/qfs/qfs1.bak
```

**c. You can initialize a new Sun QFS file system, using a Sun QFS 4.0 or later release, and perform the `qfsrestore(1M)` directly into that new Sun QFS file system.**

This alternative is applicable only if you already have the Sun QFS software installed and operational as a file system somewhere in your environment. Pursuing this alternative assumes that you want to use the features included in the Sun QFS 4.0 release.

For example, assume that you want to write the dump file into a second Sun QFS file system called `qfs2` (mounted at `/qfs2`). Make sure that the `qfs2` file system has been initialized using Sun QFS release 4.0, or later. You can accomplish this by issuing the following commands:

```
# mount /qfs2
# cd /qfs1
# qfsdump -f - | (cd /qfs2; qfsrestore -f -)
```

**5. Repeat these steps for each Sun QFS file system in your environment.**

For more information on backing up your file systems, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS Disaster Recovery Guide*.

---

## Step 3: Unsharing the File Systems (Optional)

You must complete this step if your Sun QFS file systems are NFS shared file systems.

### ▼ To Unshare the File Systems

- **Use the `unshare(1M)` command on the Sun QFS file system.**

For example, the following command unshares the `qfs1` file system:

```
# unshare /qfs1
```

---

## Step 4: Unmounting the File Systems

There are several ways to unmount a file system. Any of the following methods can accomplish this task. The easiest method is presented first. After the file system is unmounted, you can proceed to “Step 5: Removing Existing Sun QFS Software” on page 57.

## ▼ To Unmount Using the `umount(1M)` Command

- **Using the `umount(1M)` command, unmount each Sun QFS file system.**

If you are unmounting a file system from a Sun Solaris 8 or later OE, you can use the `-f` option to the `umount(1M)` command. The `-f` option forces a file system to unmount.

## ▼ To Unmount Using the `fuser(1M)`, `kill(1)`, and `umount(1M)` Commands

If using `umount(1M)` to unmount is not successful, it might be because you or another user are using files or because you or another user have changed to directories in the file system.

1. **Use the `fuser(1M)` command to determine whether or not any processes are still busy.**

For example, the following command queries the `qfs1` file system:

```
# fuser -uc /qfs1
```

2. **If any processes are still busy, use the `kill(1M)` command to terminate them.**
3. **Using the `umount(1M)` command, unmount each Sun QFS file system.**

## ▼ To Unmount by Editing the `/etc/vfstab` File and Rebooting

1. **Edit the `/etc/vfstab` file.**

For all Sun QFS file systems, change the Mount at Boot field from `yes` or `delay` to `no`.

2. **Reboot your system.**



---

# Step 5: Removing Existing Sun QFS Software

The following section describes how to remove software from a release prior to 4.0.

## ▼ To Remove Software from a Release Prior to 4.0

1. Use the `pkginfo(1)` command to determine which Sun QFS software packages are installed on your system.

For example:

```
# pkginfo | grep LSC
```

2. Use the `pkgrm(1M)` command to remove the existing Sun QFS software.

You must remove all existing Sun QFS packages before installing the new packages. If you are using any optional Sun QFS packages, you should make sure that you remove these packages before removing the main `LSCqfs` package. The install script prompts you to confirm several of the removal steps.

The following example command removes the `LSCdoc` package and the `LSCqfs` package:

```
# pkgrm LSCdoc LSCqfs
```

The `LSCqfs` package must be the last package removed.

---

**Note** – If you are upgrading from a QFS release prior to the Sun QFS 4.0 release, you must remove both the `LSCdoc` and `LSCqfs` packages, in that order. When you install the new Sun QFS 4.0 package, you will install only a `SUNWqfs` package.

---

---

## Step 6: Adding the Packages

The Sun QFS software package uses the Sun Solaris packaging utilities for adding and deleting software. The `pkgadd(1M)` command prompts you to confirm various actions necessary to upgrade the Sun QFS package.

On the CD-ROM, the Sun QFS packages and all optional products reside in the `/cdrom/cdrom0` directory organized by Sun Solaris version.

### ▼ To Add the Packages

1. **Issue the `pkgadd(1M)` command to upgrade the `SUNWqfs` package.**

Answer `yes` to each question.

For example:

```
# pkgadd -d SUNWqfs
```

2. **Use the `pkgadd(1M)` command to add one or more localized packages. (Optional)**

Perform this step only if you want to install the packages localized for Chinese, French, or Japanese. To install these packages, enter one or more of the following commands:

```
# pkgadd -d SUNWcqfs
# pkgadd -d SUNWfqfs
# pkgadd -d SUNWjqfs
```

---

## Step 7: Updating the License Keys

A license key is required to run the Sun QFS software. For information on license keys, see “Step 6: Verifying the Software License” on page 23.

The Sun QFS file system uses an encrypted license key. The license key consists of an encoded alphanumeric string.

## ▼ To License the Sun QFS Software

1. **Verify whether the license file exists.**

The license file is as follows:

```
/etc/opt/SUNWsamfs/LICENSE.4.0
```

2. **If the `/etc/opt/SUNWsamfs/LICENSE.4.0` file does not exist, create it.**
3. **Starting in column one, place the license key you have obtained from your ASP or from Sun Microsystems on the first line in the `/etc/opt/SUNWsamfs/LICENSE.4.0` file.**

The key must start in column one. No other keywords, host IDs, comments, or other information can appear in the `/etc/opt/SUNWsamfs/LICENSE.4.0` file. The license becomes effective when the Sun QFS file system is mounted.

---

## Step 8: Verifying the `mcf` File

The topology of the equipment managed by the Sun QFS file system is defined in the master configuration file, `/etc/opt/SUNWsamfs/mcf`. This file specifies the devices and file systems included in the environment. Each piece of equipment is assigned a unique Equipment Identifier in the `mcf` file.

## ▼ To Verify the `mcf` File

1. **Issue the `cd(1)` command to change to the `/etc/opt/SUNWsamfs` directory.**

This is the directory that contains your `mcf` file.

2. **Verify that an `mcf` file exists.**

The correct location for this file is as follows:

```
/etc/opt/SUNWsamfs/mcf
```

3. **Issue the `sam-fsd(1M)` command to check the `mcf` file for errors.**

For example:

```
# /usr/lib/fs/samfs/sam-fsd
```

---

**Note** – For information on file system design considerations, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*.

---

## ▼ To Reinitialize the `mcf` File

Reinitialization of the `mcf` file is not needed at this point in the configuration process. Be aware, however, that if you change the `mcf` file after the Sun QFS file system is in use, you must convey the new `mcf` specifications to the Sun QFS software. For information on reinitializing the `mcf` file, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*.

---

## Step 9: Modifying the `/etc/vfstab` File (Optional)

If you modified the `/etc/vfstab` file in “Step 4: Unmounting the File Systems” on page 55, you must complete this step.

## ▼ To Modify the `/etc/vfstab` File

- **Edit this file again, and change the Mount at Boot field for all Sun QFS file systems from `no` to `yes`.**

---

## Step 10: Reinitializing and Restoring the File Systems (Optional)

You must use the Sun QFS 4.0 `sammkfs(1M)` command to reinitialize your file systems if you want to use all of the Sun QFS 4.0 features. The features that require you to reinitialize your file systems are noted in “Step 2: Backing Up Each File System” on page 53.

In this step, you reinitialize your file systems and restore the saved data from “Step 2: Backing Up Each File System” on page 53 into the new file systems. To accomplish this, use the `sammkfs(1M)` and `qfsrestore(1M)` commands on each file system.

## ▼ To Reinitialize and Restore the File Systems

1. Use the `sammkfs(1M)` command to initialize a new Sun QFS file system.

If you want to use all the Sun QFS 4.0 features, issue the `sammkfs(1M)` command without any options. The following example `sammkfs(1M)` command reinitializes a file system named `qfs1` with Sun QFS 4.0 feature capabilities.

```
# sammkfs qfs1
```

For more information on the options to the `sammkfs(1M)` command, see the `sammkfs(1M)` man page.

2. Use the `qfsrestore(1M)` command to restore the dumped data into the new file system.

For example, the following commands assume that you have a file system named `qfs1` (mounted at `/qfs1`) that you want to back up from files dumped to `qfs1.bak`, which exists outside of the Sun QFS file system:

```
# cd /qfs1
# qfsrestore -f /save/qfs/qfs1.bak
```

---

**Note** – If you do not want to use all of the Sun QFS 4.0 features, use the `-P` option to the `sammkfs(1M)` command. This creates a version 1 superblock. For more information on the options to the `sammkfs(1M)` command, see the `sammkfs(1M)` man page.

---

---

## Step 11: Checking the File System (Optional)

If you did not perform “Step 10: Reinitializing and Restoring the File Systems (Optional)” on page 60, you are encouraged to complete this step.

- Use the `samfsck(1M)` command to check your existing file systems for inconsistencies.

Do this for each Sun QFS file system.

---

## Step 12: Mounting the File System (Optional)

If you have *not* modified the `/etc/vfstab` file to have `yes` or `delay`, you must perform this step.

- Use the `mount(1M)` command to mount the file systems and continue operation with the upgraded Sun QFS software.

In the following example, `qfs1` is the name of the file system to be mounted:

```
# mount qfs1
```

---

## Step 13: Recompiling API-Dependent Applications (Optional)

If you are running applications that use the Sun QFS application programming interface (API), you need to complete this step.

Because file headers, the calling sequence, and other elements of the API can change from release to release, you should recompile all applications that depend on the API at this time.



---

**Caution** – Failure to recompile API-dependent applications at this point can cause your applications to generate unexpected results.

---

# Sun SAM-FS and Sun SAM-QFS Initial Installation Procedure

---

This chapter describes the procedure for installing and configuring the Sun SAM-FS and Sun SAM-QFS software for the first time. Use this procedure if this is the initial installation of the Sun SAM-FS or Sun SAM-QFS software package at your site.

If you are upgrading Sun SAM-FS or Sun SAM-QFS software on an existing server, see “Sun SAM-FS and Sun SAM-QFS Upgrade Procedure” on page 111.

The procedure in this chapter describes copying and installing the software packages onto your server and configuring the software to match the hardware at your site. You must have superuser (`root`) access to perform most of the steps described in this chapter.

The main sections of this chapter are as follows:

- “Step 1: Obtaining the Release Files” on page 64
- “Step 2: Adding the Administrator Group (Optional)” on page 65
- “Step 3: Adding the Packages” on page 66
- “Step 4: Editing the `st.conf` and `samst.conf` Files” on page 67
- “Step 5: Rebooting the System” on page 72
- “Step 6: Setting Up `PATH` and `MANPATH` Variables” on page 72
- “Step 7: Licensing the Sun SAM-FS and Sun SAM-QFS Software” on page 73
- “Step 8: Configuring System Logging” on page 74
- “Step 9: Configuring the Environment” on page 76
- “Step 10: Setting Up Default Values (Optional)” on page 90
- “Step 11: Creating the `samfs.cmd` File (Optional)” on page 91
- “Step 12: Creating the Mount Point and Updating the `/etc/vfstab` File” on page 91
- “Step 13: Initializing the File System” on page 93
- “Step 14: Mounting the File System” on page 94
- “Step 15: Checking Drive Order” on page 96
- “Step 16: Labeling Tapes or Optical Disks (Optional)” on page 100
- “Step 17: Configuring the Archiver (Optional)” on page 101
- “Step 18: Enabling Disk Archiving (Optional)” on page 102

- “Step 19: Sharing the File System With NFS Client Systems (Optional)” on page 105
- “Step 20: Mounting the File System on NFS Client Systems (Optional)” on page 106
- “Step 21: Writing Periodic Dump Files By Using `samfsdump(1M)`” on page 108
- “Step 22: Enabling Automatic Rotating of Log and Trace Files (Optional)” on page 110

---

## Step 1: Obtaining the Release Files

You can obtain the Sun SAM-FS and Sun SAM-QFS software from the Sun Download Center or on a CD-ROM. The Sun Download Center is located at the following URL:

<http://sunwww.central/download/>

Contact your authorized service provider (ASP) or your Sun sales representative if you have questions on obtaining the software in one of these ways.

After the release, upgrade patches are available from the following URL:

<http://www.sunsolve.sun.com>



---

**Caution** – If you have not read the `README` file delivered with this release, please do so before continuing. You can access the `README` file for this release at any time from one of the documentation websites described in this manual’s preface. It is available as the *Sun QFS*, *Sun SAM-FS*, and *Sun SAM-QFS README File*. After your software is installed, the content of the `README` file is located in `/opt/SUNWsamfs/doc/README`.

---

### ▼ To Install from a CD-ROM

#### 1. Log in as root.

The Sun SAM-FS and Sun SAM-QFS software uses the Sun Solaris operating environment (OE) packaging utilities for adding and removing software. You must be logged in as superuser (`root`) to make changes to software packages. The `pkgadd(1M)` utility prompts you to confirm various actions necessary to install the packages.



## 2. Insert the CD into the CD drive.

The system should automatically detect the CD's presence. If it does not, issue the following commands to stop and start the Sun Solaris Volume Manager and to change to the directory that contains the Sun SAM-FS or Sun SAM-QFS software packages.

For example:

```
# /etc/init.d/volmgt stop
# /etc/init.d/volmgt start
# volcheck
# cd /cdrom/cdrom0
```

On the CD, the Sun SAM-FS and Sun SAM-QFS packages reside in the `/cdrom/cdrom0` directory organized by Sun Solaris version.

---

## Step 2: Adding the Administrator Group (Optional)

By default, the Sun SAM-FS and Sun SAM-QFS administrator commands can be executed by a `root` user only. However, during installation you can supply an administrator group name. The `pkgadd(1M)` process prompts you for this group name during Sun SAM-FS or Sun SAM-QFS installation.

Members of the administrator group can execute all administrator commands except for `star(1M)`, `samfsck(1M)`, `samgrowfs(1M)`, `sammkfs(1M)`, and `samd(1M)`. The administrator commands are located in `/opt/SUNWsamfs/sbin`.

You can also define an operator group that can access only the GUI tools, which are `libmgr(1M)`, `samtool(1M)`, `robottool(1M)`, `previewtool(1M)`, and `devicetool(1M)`. This group can be defined in the `/etc/opt/SUNWsamfs/defaults.conf` file as described later in “Step 10: Setting Up Default Values (Optional)” on page 90 and in the `defaults.conf(4)` man page.

You can add or remove the administrator group after installing the package by running the `set_admin.sh(1M)` command. This action performs the same function that occurs when you select an administrator group during the package install. You must be logged in as superuser (`root`) to use the `set_admin.sh(1M)` command. You can also undo the effect of this selection and make the programs in `/opt/SUNWsamfs/sbin` executable only by a root user. For more information on this command, see the `set_admin.sh(1M)` man page.

## ▼ To Add the Administrator Group

1. Choose a group name or select a group that already exists within your environment.
2. Use the `groupadd(1M)` command, or edit the `/etc/group` file.

The following is an entry from the group file designating an administrator group for the Sun SAM-FS or Sun SAM-QFS software. In this example, the `samadm` group consists of both the `adm` and `operator` users.

```
samadm: :1999:adm,operator
```

---

## Step 3: Adding the Packages

The Sun SAM-FS and Sun SAM-QFS software uses the Sun Solaris packaging utilities for adding and deleting software. You must be logged in as superuser (`root`) to make changes to software packages. The `pkgadd(1M)` utility prompts you to confirm various actions necessary to install the packages.

## ▼ To Add the Packages

1. Issue the `pkgadd(1M)` command to add the `SUNWsamfs` package.

For example:

```
# pkgadd -d SUNWsamfs
```

2. Enter `all` as the answer to the first question, and enter `yes` or `y` as the answer to each of the other questions.

When you install `SUNWsamfs`, you are asked if you want to define an administrator group. Select `y` to accept the default (no administrator group) or select `n` if you want to define an administrator group. You can also reset permissions on certain commands later by using the `set_admin.sh(1M)` command. For more information on this command, see the `set_admin.sh(1M)` man page.

### 3. Use the `pkgadd(1M)` command to add one or more localized packages. (Optional)

Perform this step only if you want to install the packages localized for Chinese, French, or Japanese. To install these packages, enter one or more of the following commands:

```
# pkgadd -d SUNWcsamf
# pkgadd -d SUNWfsamf
# pkgadd -d SUNWjsamf
```

---

## Step 4: Editing the `st.conf` and `samst.conf` Files

Some tape devices require you to make changes to the `st.conf` file. These changes are needed in order to enable the Sun SAM-FS and Sun SAM-QFS software to work with these devices. You must edit the `st.conf` file if you want certain drives, including the following, to work within the Sun SAM-FS or Sun SAM-QFS environment:

- DLT 2000, 2200, 2500, 2700, 4000, 4500, 4700, 7000, 8000
- StorageTek 9940 and 9840; StorageTek RedWood SD-3; and StorageTek TimberLine 9490
- IBM 3590 Magstar, IBM 3570
- Sony DTF-2, Sony DTF-1, Sony Advanced Intelligent Tape (AIT), SDX-500C, SDX-300C
- Fujitsu M8100

Perform the steps in this section if you want any of the preceding drives, or any other devices not already present in the Sun Solaris kernel's `st` driver, to operate within your Sun SAM-FS or Sun SAM-QFS environment, you need to complete the steps in this section.

The steps in this section show how to read lines from the `/opt/SUNWsamfs/examples/st.conf_changes` file into the `/kernel/drv/st.conf` file.

### ▼ To Add a New Device Type

1. **Examine the** `/opt/SUNWsamfs/examples/st.conf_changes` **file.**

Decide if you want any of the devices in this file to be under the control of Sun SAM-FS or Sun SAM-QFS. If so, go on to the next step in this procedure.

Devices that are not to be under Sun SAM-FS or Sun SAM-QFS control do not need to be considered.

2. **Copy your existing `st.conf` to a backup file.**
3. **Use an editor to open your `st.conf` file and add the pertinent lines from the `/opt/SUNWsamfs/examples/st.conf_changes` file.**

## Example 1

The following is an example of a `/kernel/drv/st.conf` file that has been modified to add support in the Sun Solaris kernel for both the StorageTek 9840 tape drive and the DLT 7000 tape drive:

```
tape-config-list =
"STK 9840", "STK 9840 Fast Access", "CLASS_9840",
"QUANTUM DLT7000", "DLT 7000 tape drive", "dlt7-tape";
CLASS_9840 = 1,0x36,0,0xd679,1,0x00,0;
dlt7-tape = 1,0x36,0,0xd679,4,0x82,0x83,0x84,0x85,3;
```

The preceding file contains four names paired with values. These are called *name=value* pairs, and the following sections describe each one.

### The First Pair

The first pair is a device triplet. It consists of one *name* specification and, in this example, two *value* triplets.

```
tape-config-list =
"STK 9840", "STK 9840 Fast Access", "CLASS_9840",
"QUANTUM DLT7000", "DLT 7000 tape drive", "dlt7-tape";
```

This pair has the following format:

```
name = " value " ;
```

As this example shows, multiple *value* triplets can be specified for a single *name*. In this example, two sets of triplets follow the *name* specification. The elements of this format consist of a quoted, comma-separated string in a 3-element triplet format.

- Each element in the triplet must be enclosed in quotation marks (" ").

- Each element must be separated by a comma (,).
- More than one triplet can be specified for a single *name*.
- The final triplet in the specification must be followed by a semicolon (;).
- Each triplet contains the following three elements:
  - Element 1 contains the exact SCSI inquiry string returned from the device by means of the channel.
  - Element 2 contains a comment string for logging and text-based reporting.
  - Element 3 contains a *name* string that refers to another *name=value* pair elsewhere in this `st.conf` file.
- The final triplet must be followed by a semicolon (;).

## The Second and Third Pairs

The second and third pairs refer to the third element in each of the device triplets previously defined in the `st.conf` file.

```
CLASS_9840 = 1,0x36,0,0x1d679,1,0x00,0;
dlt7-tape = 1,0x36,0,0xd679,4,0x82,0x83,0x84,0x85,3;
```

These *name=value* pairs have the following format:

- A name as defined previously in the `st.conf` file, which must match the third element of a previously defined *name="value"* device triplet.
- A comma-separated list of hexadecimal values that identifies proper `st` driver interaction with a particular device as specified in the `st(7D)` man page.
- A terminal semicolon (;). Do not use a comma (,).

## Example 2

Errors can occur if the `st.conf` file is not configured properly during Sun SAM-FS or Sun SAM-QFS software installation. The following examples show typical error messages and provides suggestions for problem resolution.

The following message is found in the `sam-log` file:

```
May 18 12:38:18 baggins genu-30[374]: Tape device 31 is default
type. Update `/kernel/drv/st.conf'.
```

Corresponding messages are found in the device log for an associated drive. These messages are as follows:

```
1999/05/18 12:34:27*0000 Initialized. tp
1999/05/18 12:34:28*1002 Device is QUANTUM , DLT7000
1999/05/18 12:34:28*1003 Serial CX901S4929, rev 2150
1999/05/18 12:34:28*1005 Known as Linear Tape(lt)
1999/05/18 12:34:32 0000 Attached to process 374
1999/05/18 12:38:18 1006 Slot 1
1999/05/18 12:38:18 3117 Error: Device is type default. Update
/kernel/drv/st.conf
```

The preceding messages indicate that the appropriate changes have not been made to `/kernel/drv/st.conf`.

## ▼ To Add a Target Device or LUN

The procedure in this section shows how to add a target device or LUN for either a SCSI-attached library or a library attached through a Fibre Channel interface.

Note that in some cases, SCSI drives can use a target number greater than 6 or a LUN greater than 0. This occurs, for example, with DLT 2700 devices, which use a LUN of 1. In this case, you must edit both the `/kernel/drv/samst.conf` file and the `/kernel/drv/st.conf` file.

### 1. Use `vi(1)` or another editor to open the `/kernel/drv/st.conf` file. (Optional)

Perform this step only if you are adding device support for a SCSI-attached device.

Add or uncomment the following line for each target/LUN combination, making the appropriate substitutions. For example, the following lines apply to target 4, LUN 1:

```
name="st" class="scsi" target=4 lun=1;
```

### 2. Exit the editor.

### 3. Use `vi(1)` or another editor to open the `/kernel/drv/samst.conf` file.

The edits you need to make in the `/kernel/drv/samst.conf` file differ depending on whether the device support being added uses a SCSI attachment or a Fibre Channel interface.

- a. For a SCSI-attached device, un-comment or add the appropriate lines for each device.

For example:

```
name="samst" class="scsi" target=4 lun=1;
```

- b. For a library device attached through a Fibre Channel interface, add a line for each device.

For a library device attached directly through a Fibre Channel interface, the world-wide name used should be the world-wide name of the library device. This line has the following format:

```
name="samst" parent="fp" lun=1 fc-port-wwn="500104f00041182b";
```

For a library device attached through a Fibre-Channel-to-SCSI bridge device, the world-wide name used should be the world-wide name of the bridge device. This line has the following format:

```
name="samst" parent="fp" lun=1 fc-port-wwn="100000e00221b1a2";
```

4. Save your changes.

5. Exit the editor.

6. If you have added new devices since running `pkgadd(1M)`, run the `samdev(1M)` or `devfsadm(1M)` command to create the device entries in `/dev/samst`.

In a Sun Solaris 7 OE, enter the following command:

```
# /opt/SUNWsamfs/sbin/samdev
```

In a Sun Solaris 8 or 9 OE, enter the following command:

```
# /usr/sbin/devfsadm -i samst
```

---

## Step 5: Rebooting the System

---

**Note** – Failure to reboot the system at this time can cause the `st` and `samst` modules to remain unconfigured.

---

### ▼ To Reboot the System

- **Reboot the server by issuing the `touch(1)` and `init(1M)` commands.**

For example:

```
# touch /reconfigure
# init 6
```

Changes to the `st.conf`, `samst.conf`, and the `/etc/name_to_sysnum` files are enabled at this time.

---

## Step 6: Setting Up `PATH` and `MANPATH` Variables

### ▼ To Set Up `PATH` and `MANPATH` Variables

1. **For users who need to access the Sun SAM-FS or Sun SAM-QFS user commands (for example, `sls(1)`), add `/opt/SUNWsamfs/bin` to the users' `PATH` variables.**
2. **For users who need to access the Sun SAM-FS or Sun SAM-QFS man pages, add `/opt/SUNWsamfs/man` to the `MANPATH` variable.**
3. **For users, such as superusers, who need to access the administrator commands, add `/opt/SUNWsamfs/sbin` to the `PATH` variable.**



- 4. In the Bourne or Korn shells, edit the `.profile` file, change the `PATH` and `MANPATH` variables, and export the variables.**

For example:

```
PATH=$PATH:/opt/SUNWsamfs/bin:/opt/SUNWsamfs/sbin
MANPATH=$MANPATH:/opt/SUNWsamfs/man
export PATH MANPATH
```

- 5. In the C shell, edit the `.login` and `.cshrc` files.**

For example, the path statement in your `.cshrc` file might look like the following:

```
set path = ($path /opt/SUNWsamfs/bin /opt/SUNWsamfs/sbin)
```

For example, the `MANPATH` statement in your `.login` file might look like the following:

```
setenv MANPATH /usr/local/man:opt/SUNWspro:/$OPENWINHOME/\
share/man:/usr/share/man:/opt/SUNWsamfs/man
```

---

## Step 7: Licensing the Sun SAM-FS and Sun SAM-QFS Software

License keys are required to run the Sun SAM-FS and Sun SAM-QFS software. For information on license keys, see “System Requirements” on page 11.

The Sun SAM-FS and Sun SAM-QFS environments use encrypted license keys. The license keys consist of encoded alphanumeric strings. You receive one or more license keys depending on the system configuration and the products being licensed.

### ▼ To License the Sun SAM-FS and Sun SAM-QFS Software

- 1. Create the `/etc/opt/SUNWsamfs/LICENSE.4.0` file.**

2. Starting in column one, place the license key you have obtained from your ASP or from Sun Microsystems on the first line in the `/etc/opt/SUNWsamfs/LICENSE.4.0` file.

The key must start in column one. No other keywords, host IDs, comments, or other information can appear in the `/etc/opt/SUNWsamfs/LICENSE.4.0` file.

---

**Note** – The license becomes effective the next time the `sam-initd` daemon is started.

---

3. View the current license settings by issuing the `samcmd(1M)` command with its `l` argument, as follows.

```
# samcmd l
```

This is the `l` (letter “ell” as in *license*) argument.

The license keys allow the system to run indefinitely unless one of the following conditions is present:

- You were issued a temporary license. When a temporary license expires, the system is no longer able to load or unload cartridges, or to archive, stage, or release files.
- You have exceeded the number of slots allowed for the license. If you exceed the number of slots for which the system is licensed, you cannot import or label media. Access continues unaffected for files already on disk.
- You have changed the hardware with which the software must interoperate. These types of changes include changes to drives, automated libraries, and servers. Licenses are assigned to a specific `hostid` and are not transferable.

---

## Step 8: Configuring System Logging

The Sun SAM-FS and Sun SAM-QFS systems log errors, cautions, warnings, and other messages using the standard Sun Solaris `syslog(3)` interface. By default, the Sun SAM-FS and Sun SAM-QFS facility is `local7`.

## ▼ To Enable Logging

### 1. Open the `/etc/syslog.conf` file in an editor.

Read in the line from the following file:

```
/opt/SUNWsamfs/examples/syslog.conf_changes
```

The line is similar, if not identical, to the following line:

```
local7.debug /var/adm/sam-log
```

---

**Note** – The preceding entry is all one line and has a TAB character (not a space) between the fields.

---

This step assumes that you want to use `local7`, which is the default. If you set logging to something other than `local7` in the `/etc/syslog.conf` file, you need to edit the `defaults.conf(4)` file and reset it there, too. For more information, see the `defaults.conf(4)` man page.

### 2. Use the following commands to append the logging line from

`/opt/SUNWsamfs/examples/syslog.conf_changes` to your `/etc/syslog.conf` file:

```
# cp /etc/syslog.conf /etc/syslog.conf.orig
# cat /opt/SUNWsamfs/examples/syslog.conf_changes >> /etc/syslog.conf
```

### 3. Create an empty log file and send the `syslogd` a HUP signal.

The following command sequence creates a log file in `/var/adm/sam-log` and sends the HUP to `syslogd`:

```
# touch /var/adm/sam-log
# pkill -HUP syslogd
```

For more information, see the `syslog.conf(4)` and `syslogd(1M)` man pages.

### 4. Use the `log_rotate.sh(1M)` command to enable log file rotation. (Optional)

Log files can become very large, and the `log_rotate.sh(1M)` command can help in managing log files. For more information, see the `log_rotate.sh(1M)` man page.

---

## Step 9: Configuring the Environment

Each Sun SAM-FS and Sun SAM-QFS software environment is unique. The system requirements and hardware differ from site to site. The Sun SAM-FS and Sun SAM-QFS environments support a wide variety of tape and optical devices, automated libraries, and disk drives. It is up to you, the system administrator at your site, to set up the specific configuration for your environment.

The topology of the equipment managed by the Sun SAM-FS or Sun SAM-QFS file system is defined in the master configuration file, `/etc/opt/SUNWsamfs/mcf`. This file specifies the devices, automated libraries, and file systems included in the environment. Each piece of equipment is assigned a unique equipment identifier in the `mcf` file.

---

**Note** – For information on file system design considerations, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*.

---

To configure Sun SAM-FS or Sun SAM-QFS devices, create the `/etc/opt/SUNWsamfs/mcf` file. It must contain a line for each device and family set in your configuration. The `mcf` file contains information that enables you to perform the following tasks:

- Identify the disk devices to be used and organize them into one or more Sun SAM-FS or Sun SAM-QFS file systems.
- Identify the drives to be used and, optionally, associate them with the automated libraries to which they are attached.

---

**Note** – The instructions for creating the `mcf` file differ depending on whether you are creating a Sun SAM-FS or Sun SAM-QFS environment.

If you are installing the Sun SAM-FS software, all configuration instructions are contained in this section.

If you are installing the Sun SAM-QFS software, the instructions for library and drive configuration are contained in this section. For information on configuring the file system portion of the Sun SAM-QFS file system, see the “Sun QFS Initial Installation Procedure” on page 25.

---

When you create the `mcf` file, delimit the fields in each line with spaces or tabs. Comment lines entered into this file must start with a pound sign (#) in column 1. Some fields are optional, so use a dash (-) to indicate omitted fields.

The following format shows the fields of each line entry in the `mcf` file:

```
#
# Sun SAM-QFS file system configuration
#
# Equipment      Equip Equip Fam   Dev   Additional
# Identifier     Ord  Type  Set   State Parameters
# -----      -
```

The `mcf` file can contain both comment lines and lines that pertain to a device. The types of lines that can pertain to a device are as follows:

- Family Set parent identifiers and family set devices
- Family Set member devices
- Standalone devices

TABLE 5-1 shows the information to be contained in each field and whether or not the field is a required or optional field.

**TABLE 5-1** `mcf(4)` File Fields

Field	Description
Equipment Identifier	<p><i>Required.</i> This field specifies the physical device with which to interact, as follows:</p> <ul style="list-style-type: none"> <li>• If the device is a file system, this is the file system name.</li> <li>• If the device is a member device, this field is the <code>/dev/dsk</code> entry.</li> <li>• If the device is an automated library or optical drive, this field is the <code>/dev/samst</code> entry. If you are using a network-attached automated library, see the information about managing automated libraries in the <i>Sun SAM-FS and Sun SAM-QFS Storage and Archive Management Guide</i>.</li> <li>• If the device is a tape drive, it is the <code>/dev/rmt/ncbn</code> entry.</li> </ul>
Equipment Ordinal	<p><i>Required.</i> This field allows each device to be identified by a unique number. All devices and parent identifiers must be assigned a unique Equipment Ordinal. Enter a unique integer from 1 to 65535. The number selected affects the order in which devices are displayed in the user interfaces. Lower numbers are displayed first.</p>
Equipment Type	<p><i>Required.</i> This field provides information that the software uses to determine how to interact with a particular device. Enter the two- or three-character mnemonic for the device type. Most equipment can use the generic equipment types of <code>od</code> (optical disk), <code>tp</code> (tape), and <code>rb</code> (robot). For specific Equipment Types, see the <code>mcf(4)</code> man page.</p>

**TABLE 5-1** mcf(4) File Fields (Continued)

Field	Description
Family Set	<p><i>Required for most devices.</i> A Family Set parent line identifies groups of devices configured to work together as a group. For a parent device, enter a descriptive name for the Family Set. The Family Set names bind members and parents together, as follows:</p> <ul style="list-style-type: none"> <li>• If the device is a member device that is associated with a Family Set parent device (that is, a file system or automated library), enter the Family Set name for the parent device.</li> <li>• If the device is a standalone device such as a manually loaded drive, use the dash (-) to indicate that this field is omitted.</li> </ul>
Device State	<p><i>Optional.</i> Enter a state for the device for when the file system is initialized. This state could be <code>on</code>, <code>off</code>, <code>unavail</code>, <code>down</code>, or a dash (-) for default behavior.</p>
Additional Parameters	<p><i>Required for some devices.</i> The content of the Additional Parameters field varies by device type, as follows:</p> <ul style="list-style-type: none"> <li>• If the device is a disk, this field is optional. If this field contains information, the content must identify the <code>/dev/rdisk</code> entry. This is similar to the <code>/dev/dsk</code> entry in the Equipment Identifier field.</li> <li>• If the device is an automated library, this field is optional. If it contains information, the content can be an alternate path to the library's media catalog file or it can be the default path to the library catalog file (<code>/var/opt/SUNWsamfs/catalog/family_set_name</code>).</li> </ul> <p>For tape and magneto-optical devices, no entry is required in this field.</p>

The following `mcf` entries define a StorageTek 9738 automated library with two 9840 drives:

# Equipment	Eq	Eq	Family	Dev	Additional
# Identifier	Ord	Ty	Set	St	Parameters
#					
/dev/samst/c0t03u0	50	s9	9738	on	
/dev/rmt/0cbn	51	sg	9738	on	
/dev/rmt/1cbn	52	sg	9738	on	

In the preceding example, the library catalog is written to the default location, `/var/opt/SUNWsamfs/catalog/9738`.

For more information about this file, see the `mcf(4)` man page. There is an example `mcf` file located in `/opt/SUNWsamfs/examples/mcf`.

## ▼ To Reinitialize the `mcf` File

Reinitialization of the `mcf` file is not needed at this point in the configuration process. Be aware, however, that if you change the `mcf` file after the Sun SAM-FS or Sun SAM-QFS software is in use, you must enter commands to convey the new `mcf` specifications to the system. For information on reinitializing the `mcf` file, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*.

## Example Sun SAM-FS Configuration

Assume that the following equipment is to be included in a Sun SAM-FS configuration:

- Two Seagate ST15230W 4-gigabyte disk drives used as cache for the file system
- One StorageTek 9730 30-slot automated library that contains two DLT tape drives
- One manually loaded DLT 2000 drive
- One HP Model C1710T magneto-optical automated library containing two HP Model C1716 magneto-optical drives
- One manually loaded HP Model C1716 magneto-optical drive

This equipment is connected to three SCSI buses with the following SCSI targets:

- The server's internal, single-ended, SCSI bus with targets shown in TABLE 5-2.

TABLE 5-2 Targets for Server's Internal Single-ended SCSI Bus

SCSI Target	Equipment
2	Manually loaded magneto-optical drive
3	The Sun Solaris internal hard disk
4	Manually loaded DLT drive

- A differential SCSI bus connected to the HP Model C1710T automated library and file system disks with targets shown in TABLE 5-3.

TABLE 5-3 Targets for SCSI Bus Connected to the HP Model C1710T Automated Library

SCSI Target	Equipment
0 and 1	Seagate 4-gigabyte disks

**TABLE 5-3** Targets for SCSI Bus Connected to the HP Model C1710T Automated Library

SCSI Target	Equipment
2	HP C1710T automated library
5	First optical drive
6	Second optical drive

- A differential SCSI bus connected to the StorageTek 9730 automated library and tape drives with targets shown in TABLE 5-4.

**TABLE 5-4** Targets for SCSI Bus Connected to the StorageTek 9730 Automated Library

SCSI Target	Equipment
0	StorageTek 9730 automated library
1	First DLT 7000 drive
2	Second DLT 7000 drive

## Example Sun SAM-FS Disk Cache Configuration

CODE EXAMPLE 5-1 shows the output from the Sun Solaris `format(1M)` command. It reports how the disks are partitioned.

**CODE EXAMPLE 5-1** `format(1M)` Command Example

```
1. c1t0d0 <SEAGATE-ST15230W-0168 cyl 3974 alt 2 hd 19 sec 111>
/iommu@0,10000000/sbus@0,10001000/QLGC,isp@1,10000/sd@0,0
Current partition table (original) :
Total disk cylinders available: 3974 + 2 (reserved cylinders)
Part   Tag          Flag      Cylinders   Size          Blocks
0      root          wm        0-3499     3.52GB       (3500/0/0)
1      unassigned   wm        3500-3972  487.09MB     (473/0/0)
2      backup       wu        0-3973     4.00GB       (3974/0/0)
3      unassigned   wm        0          0             (0/0/0)
4      unassigned   wm        0          0             (0/0/0)
5      unassigned   wm        0          0             (0/0/0)
6      unassigned   wm        0          0             (0/0/0)
7      unassigned   wm        0          0             (0/0/0)
2. c1t1d0 <SEAGATE-ST15230W-0168 cyl 3974 alt 2 hd 19 sec 111>
/iommu@0,10000000/sbus@0,10001000/QLGC,isp@1,10000/sd@1,0
Current partition table (original):
Total disk cylinders available: 3974 + 2 (reserved cylinders)
```



**CODE EXAMPLE 5-1** format(1M) Command Example (Continued)

Part	Tag	Flag	Cylinders	Size	Blocks
0	root	wm	1000-3973	2.99GB	(2974/0/0)
1	unassigned	wu	0	0	(0/0/0)
2	backup	wu	0-3973	4.00GB	(3974/0/0)
3	unassigned	wm	0	0	(0/0/0)
4	unassigned	wm	0	0	(0/0/0)
5	unassigned	wm	0-999	1.01GB	(1000/0/0)
6	unassigned	wm	0	0	(0/0/0)
7	unassigned	wm	0	0	(0/0/0)

One Sun SAM-FS file system (`samfs1`) is to be placed on partition 0 of disk `c1t0d0` and partition 5 of `c1t1d0`. Another file system (`samfs2`) is to be created on partition 1 of disk `c1t0d0` and partition 0 of disk `c1t1d0`.

The following procedure explains how to begin writing the `mcf` file for this example configuration by defining the file systems and their disk partitions.

## ▼ To Write the `mcf` File

### 1. Make an `ms` (mass storage) entry for the first file system.

An `ms` entry is the Equipment Identifier for a Sun SAM-FS file system. The name of this file system (`samfs1`) is used later when writing the `/etc/vfstab` entry for the file system and creating the file system. Note that the name as specified in the Equipment Identifier field must be the same as the Family Set name for the file system.

### 2. Make a series of `md` (magnetic disk) entries listing the partitions that comprise the `samfs1` file system member devices.

### 3. Make similar entries for the second (`samfs2`) file system.

The `mcf` file looks like this:

```
# Disk cache configuration for 2 file systems: samfs1, samfs2
#
# Equipment      Eq   Eq   Fam.  Dev.  Additional
# Identifier     Ord  Type Set   State Parameters
#-----
samfs1          10   ms  samfs1
/dev/dsk/c1t0d0s0 11   md  samfs1  on
/dev/dsk/c1t1d0s5 12   md  samfs1  on
#
samfs2          20   ms  samfs2
/dev/dsk/c1t1d0s0 21   md  samfs2  on
/dev/dsk/c1t0d0s1 22   md  samfs2  on
```



---

**Caution** – If you give the wrong partition names, you risk damaging user or system data. This is true when initializing any type of file system. Make sure you specify only disk partitions that are not already in use on your system. Do not use overlapping partitions.

---

## Identifying Peripherals Using the `/var/adm/messages` File

When your system boots, a series of messages are written to `/var/adm/messages`. These messages identify the Sun Solaris hardware path to each of the peripherals on your system. To display information from the latest system reboot, search backward from the end of the file.

Each peripheral has three lines, as follows (note that the third line wraps to the next line in this example and that the sixth field, `samst2`, indicates that these lines are associated with each other):

```
# tail -200 /var/adm/messages | more
Aug 23 11:52:54 baggins unix: samst2: Vendor/Product ID = HP          C1716T
Aug 23 11:52:54 baggins unix: samst2 at esp0: target 2 lun 0
Aug 23 11:52:54 baggins unix: samst2 is
/iommu@0,10000000/sbus@0,10001000/espdma@5,8400000/esp@5,8800000/samst@2,0
```

---

**Note** – For readability, the preceding output, and many other outputs that are wider than 80 characters, have been wrapped for inclusion in this manual.

---

The first line displays the vendor and product information that the SCSI peripheral reported to the Sun Solaris kernel.

The second line displays the SCSI bus, SCSI target, and LUN of the peripheral.

The third line displays the peripheral's hardware path. This path is reflected in the `/devices` directory. Symbolic links (symlinks) to the `/devices` directory are set up in the `/dev/samst` and `/dev/rmt` directories.

Matching the symbolic link to the correct peripheral is the key to configuring a Sun SAM-FS or Sun SAM-QFS environment. Use the `ls(1)` command with the `-l` option in both the `/dev/samst` and `/dev/rmt` directories to display the path name of the peripheral.

Optionally, you can set up the device down notification script at this point. The `dev_down.sh(4)` man page contains information about setting up this script, which sends email to `root` when a device is marked down or `off`. For more information, see the `dev_down.sh(4)` man page.

## Configuring a Manually Loaded Magneto-optical Drive

The HP Model C1716T is target 2 on the internal SCSI bus.

### ▼ To Configure the Drive

**1. Examine the `/var/adm/messages` file to find the messages for these devices.**

The following information is located in the block of lines in `/var/adm/messages` associated with this device (note that the third line wraps to the next line in this example):

```
Aug 23 11:52:54 baggins unix: samst2: Vendor/Product ID = HP      C1716T
Aug 23 11:52:54 baggins unix: samst2 at esp0: target 2 lun 0
Aug 23 11:52:54 baggins unix: samst2 is
/iommu@0,10000000/sbus@0,10001000/espdma@5,8400000/esp@5,8800000/samst@2,0
```

**2. Issue the `cd(1)` command to change to the `/dev/samst` directory.**

**3. Use the `ls(1)` and `grep(1)` commands to find the correct symbolic link.**

For example, use the following `ls(1)` command:

```
# ls -l | grep "samst@2"
```

The preceding `ls(1)` command searches for a symbolic link that points to the following hardware path:

```
lrwxrwxrwx  1 root      other          88 Aug 23 12:27 c0t2u0 ->
/devices/iommu@0,10000000/sbus@0,10001000/espdma@5,8400000/esp@5
,8800000/samst@2,0:a,raw
```

The Sun `samst` driver uses the name `/dev/samst/c0t2u0` when referencing the device.

4. Use an editor to open the `/etc/opt/SUNWsamfs/mcf` file.
5. Add an entry for the drive to the `mcf` file.

Add the following entry in `/etc/opt/SUNWsamfs/mcf`:

```
/dev/samst/c0t2u0 30 od - on
```

This entry contains the device name (`/dev/samst/c0t2u0`), a unique Equipment Ordinal (30), the Equipment Type of the drive (`od`), a dash (`-`) to indicate that a Family Set name is not associated with the drive, and the device state (`on`).

## Configuring a Magneto Optical Library

The HP C1710T automated library has three SCSI devices: the robotic mechanism and the two magneto optical drives that the automated library loads and unloads.

### ▼ To Configure the Library

1. Examine the `/var/adm/messages` file to find the messages for these devices.

```
Aug 23 11:52:56 baggins unix: samst16: Vendor/Product ID = HP      C1710T
Aug 23 11:52:56 baggins unix: samst16 at QLGC,isp0: target 2 lun 0
Aug 23 11:52:56 baggins unix: samst16 is
/iommu@0,10000000/sbus@0,10001000/QLGC,isp@1,10000/samst@2,0

Aug 23 11:52:56 baggins unix: samst19: Vendor/Product ID = HP      C1716T
Aug 23 11:52:56 baggins unix: samst19 at QLGC,isp0: target 5 lun 0
Aug 23 11:52:56 baggins unix: samst19 is
/iommu@0,10000000/sbus@0,10001000/QLGC,isp@1,10000/samst@5,0

Aug 23 11:52:56 baggins unix: samst20: Vendor/Product ID = HP      C1716T
Aug 23 11:52:56 baggins unix: samst20 at QLGC,isp0: target 6 lun 0
Aug 23 11:52:56 baggins unix: samst20 is
/iommu@0,10000000/sbus@0,10001000/QLGC,isp@1,10000/samst@6,0
```

2. Issue the `cd(1)` command to change to the `/dev/samst` directory.
3. Use `ls(1)` and `grep(1)` commands to find the correct symbolic links.

Use `ls(1)` commands, as follows, to search for the three symbolic links that point to the `/devices` files with the same Sun Solaris hardware paths shown in the `/var/adm/messages` file:

```
# ls -l | grep "samst@2"
lrwxrwxrwx  1 root  other          74 Aug 23 12:27 c1t2u0 ->
/devices/iommu@0,10000000/sbus@0,10001000/QLGC,isp@1,10000/samst@2,0:a,raw
# ls -l | grep "samst@5"
lrwxrwxrwx  1 root  other          74 Aug 23 12:27 c1t5u0 ->
/devices/iommu@0,10000000/sbus@0,10001000/QLGC,isp@1,10000/samst@5,0:a,raw
# ls -l | grep "samst@6"
lrwxrwxrwx  1 root  other          74 Aug 23 12:27 c1t6u0 ->
/devices/iommu@0,10000000/sbus@0,10001000/QLGC,isp@1,10000/samst@6,0:a,raw
```

**4. Use an editor to open the `/etc/opt/SUNWsamfs/mcf` file.**

**5. Add entries for the library and drives to the `/etc/opt/SUNWsamfs/mcf` file.**

For example:

```
/dev/samst/c1t2u0 50 rb hp30 on
/dev/samst/c1t5u0 51 od hp30 on
/dev/samst/c1t6u0 52 od hp30 on
```

The first line defines the automated library itself. It contains the `/dev/samst` name for the device (`/dev/samst/c1t2u0`) followed by a unique Equipment Ordinal (50), the Equipment Identifier (`rb`, for a generic SCSI-attached library), the Family Set identifier specified on all devices associated with this library (`hp30`), and the Device State (`on`).

The two remaining lines define the drives inside the library. They are similar to the manually loaded drives defined in the previous section except that instead of a dash, they include the Family Set name of the library where they reside (`hp30`).

---

**Note** – The order of drives as specified in the `mcf` file must match the logical order of the drives in a SCSI-attached automated library. The first drive defined in the `mcf` must be the first logical drive in the library, and so on. For more information, see your hardware documentation for logical orientation of drives. Incorrect configuration can cause cartridges to be mounted in the wrong drives, which will lead to total inoperability of this software.

---

# Configuring a Manually Loaded DLT Drive

When configuring DLT drives, be sure to add the DLT definitions to the `/kernel/drv/st.conf` file (see “Step 4: Editing the `st.conf` and `samst.conf` Files” on page 67). DLT drives are not part of the standard Sun Solaris configuration, and they are not recognized if configured incorrectly.

## ▼ To Configure the Drive

### 1. Examine the `/var/adm/messages` file to find the messages for these devices.

The following lines from the `/var/adm/messages` file refer to the manual DLT drive:

```
Aug 23 11:52:54 baggins unix: samst4: Vendor/Product ID = DEC      DLT2000
Aug 23 11:52:54 baggins unix: samst4 at esp0: target 4 lun 0
Aug 23 11:52:54 baggins unix: samst4 is
/iommu@0,10000000/sbus@0,10001000/espdma@5,8400000/esp@5,8800000/samst@4,0
```

### 2. Issue the `cd(1)` command to change to the `/dev/samst` directory.

### 3. Use the `ls(1)` and `grep(1)` commands to search for the symbolic links that point to the `/devices` files with the same Sun Solaris hardware paths shown in the `/var/adm/messages` file.

For example:

```
# ls -l | grep "samst@4"
lrwxrwxrwx  1 root  other      88 Aug 23 12:27 c0t4u0 ->
/devices/iommu@0,10000000/sbus@0,10001000/espdma@5,8400000/esp@5,8800000/samst
@4,0:a,raw
```

For tape devices (automated tape libraries and tape drives), you can leave the Additional Parameters field empty. The system finds the proper `/dev/samst/*` symbolic link by using the Sun Solaris `st` driver.

---

**Note** – The Additional Parameters field is required if the Equipment Identifier field is not in the form `/dev/rmt/*` (the standard `st` device driver). In this case, the Additional Parameters field should be specified using the path to the `samst` special file (for example, `/dev/samst/cntnun`). This is true, for example, for Ampex libraries.

---

For a tape device, there is another symbolic link located in `/dev/rmt`. This symbolic link is the name that the Sun Solaris `st` driver (see `st(7)`) uses when referencing the device. There are many symbolic links in `/dev/rmt` that point to the hardware path. Each link has various combinations of the option letters `c`, `b`, and `n`. When making the `mcf` entry, always use the `b` and `n` options. If the drive supports compression, and if you want compression in the hardware, use `cbn` as the prefix. The symbolic link is as follows:

```
lrwxrwxrwx  1 root      other          85 Aug 15 11:37 /dev/rmt/0cbn ->
../../../../devices/iommu@0,10000000/sbus@0,10001000/espdma@5,8400000/esp@5,8800000
st@4,0:cbn
```

4. Use an editor to open the `/etc/opt/SUNWsamfs/mcf` file.
5. Add the `/etc/opt/SUNWsamfs/mcf` entry.

For example:

```
/dev/rmt/0cbn 40 tp - on
```

The first entry on the line is the `st` driver name for the device (`/dev/rmt/0cbn`), followed by a unique Equipment Ordinal (40), the Equipment Type (`tp` for a generic tape), a dash (-) to indicate that a Family Set name is not associated with the manually mounted device, and the Device State (`on`).

## Configuring a DLT Library

The last piece of equipment to define is the STK 9730 automated library. This automated library has three SCSI devices: the robotic mechanism and the two DLT 7000 tape drives that the robot loads and unloads.

## ▼ To Configure the Library

### 1. Examine the `/var/adm/messages` to find the messages for these devices.

The `/var/adm/messages` file is as follows:

```
Aug 23 12:08:41 baggins unix: samst98: Vendor/Product ID = STK      9730
Aug 23 12:08:41 baggins unix: samst98 at QLGC,isp2:
Aug 23 12:08:41 baggins unix: target 0 lun 0
Aug 23 12:08:41 baggins unix: samst98 is
/iommu@f,e0000000/sbus@f,e0001000/QLGC,isp@1,10000/samst@0,0
Aug 23 12:08:41 baggins unix: samst99: Vendor/Product ID = QUANTUM DLT7000
Aug 23 12:08:41 baggins unix: samst99 at QLGC,isp2:
Aug 23 12:08:41 baggins unix: target 1 lun 0
Aug 23 12:08:41 baggins unix: samst99 is
/iommu@f,e0000000/sbus@f,e0001000/QLGC,isp@1,10000/samst@1,0
Aug 23 12:08:41 baggins unix: samst100: Vendor/Product ID = QUANTUM DLT7000
Aug 23 12:08:41 baggins unix: samst100 at QLGC,isp2:
Aug 23 12:08:41 baggins unix: target 2 lun 0
Aug 23 12:08:41 baggins unix: samst100 is
/iommu@f,e0000000/sbus@f,e0001000/QLGC,isp@1,10000/samst@2,0
```

### 2. Issue the `cd(1)` command to change to the `/dev/samst` directory.

### 3. Use the `ls(1)` and `grep(1)` commands to search for the symbolic links that point to the `/devices` files with the same Sun Solaris hardware paths shown in the `/var/adm/messages` file.

For example:

```
# ls -l | grep "samst@0"
lrwxrwxrwx  1 root          44 Aug 23 09:09 c2t0u0 ->
/devices/iommu@f,e0000000/sbus@f,e0001000/QLGC,isp@1,10000/samst@0,0:a,raw
# ls -l | grep "samst@1"
lrwxrwxrwx  1 root          44 Aug 23 09:09 c2t1u0 ->
/devices/iommu@f,e0000000/sbus@f,e0001000/QLGC,isp@1,10000/samst@1,0:a,raw
# ls -l | grep "samst@2"
lrwxrwxrwx  1 root          44 Aug 23 09:09 c2t2u0 ->
/devices/iommu@f,e0000000/sbus@f,e0001000/QLGC,isp@1,10000/samst@2,0:a,raw
```

### 4. A tape device is involved, so find a symbolic link in `/dev/rmt` that points to the tape devices.



Note in the following that the automated library does not have this additional link:

```
lrwxrwxrwx  1 root          44 Aug 23 09:09 0cbn ->
../..../devices/iommu@f,e0000000/sbus@f,e0001000/QLGC,isp@1,10000/st@1,0:cbn
lrwxrwxrwx  1 root          44 Aug 23 09:09 1cbn ->
../..../devices/iommu@f,e0000000/sbus@f,e0001000/QLGC,isp@1,10000/st@2,0:cbn
```

Again, there are multiple symbolic links in the directory that point to the same hardware path. To enable hardware compression, choose the one with the `cbn` suffix. Had the drive not supported hardware compression, the symbolic link whose name ended with `bn` would have been the correct choice.

**5. Use an editor to open the `/etc/opt/SUNWsamfs/mcf` file.**

**6. Add the `/etc/opt/SUNWsamfs/mcf` entries.**

For example:

```
/dev/samst/c2t0u0 60 rb 9730 on
/dev/rmt/0cbn    61 tp 9730 on
/dev/rmt/1cbn    62 tp 9730 on
```

The first line defines the automated library and includes the `/dev/samst` name (`/dev/samst/c2t0u0`). It also contains a unique Equipment Ordinal (60), the Equipment Type (`rb`, for the generic robot Equipment Type), a Family Set name for the robot and the drive (9730), and the Device State (`on`).

The second line defines the first DLT tape drive inside the library. These entries refer to the Equipment Identifier for this tape device (`/dev/rmt/0cbn`), the Equipment Ordinal for the device (61), the Equipment Type (`tp`), the Family Set Name (9730), and the Device State (`on`).

The third line defines the second DLT tape drive inside the automated library. These entries refer to the Equipment Identifier for this tape device (`/dev/rmt/1cbn`), the Equipment Ordinal for the device (62), the Equipment Type (`tp`), the Family Set name (9730), and the Device State (`on`).

**7. Add the DLT definitions to the `/kernel/drv/st.conf` file. (Optional)**

Perform this step if you are configuring DLT drives.

This is shown in “Step 4: Editing the `st.conf` and `samst.conf` Files” on page 67. DLT drives are not part of the standard Sun Solaris configuration.

TABLE 5-5 shows the completed mcf file.

**TABLE 5-5** Completed mcf File

# Equipment # Identifier #	Eq Ord	Eq Type	Family Set	Dev Sta	Additional Parameters
samfs1	10	ms	samfs1		
/dev/dsk/c1t0d0s0	11	md	samfs1	on	
/dev/dsk/c1t1d0s5	12	md	samfs1	on	
#					
samfs2	20	ms	samfs2		
/dev/dsk/c1t1d0s0	21	md	samfs2	on	
/dev/dsk/c1t0d0s1	22	md	samfs2	on	
#					
/dev/samst/c0t2u0	30	od	-	on	
#					
/dev/rmt/0cbn	40	tp	-	on	
#					
/dev/samst/c1t2u0	50	rb	hp30	on	
/dev/samst/c1t5u0	51	od	hp30	on	
/dev/samst/c1t6u0	52	od	hp30	on	
#					
/dev/samst/c2t0u0	60	rb	9730	on	
/dev/rmt/0cbn	61	tp	9730	on	
/dev/rmt/1cbn	62	tp	9730	on	

---

## Step 10: Setting Up Default Values (Optional)

The `/opt/SUNWsamfs/examples/defaults.conf` file contains default settings for certain parameters in the Sun SAM-FS and Sun SAM-QFS environment. These settings can be changed after the initial installation. To determine if you want to change any default settings now, examine the `defaults.conf(4)` man page.

### ▼ To Set Up Default Values

1. Read the `defaults.conf(4)` man page and examine this file to determine which, if any, of the defaults should be changed.

2. **Copy the example `/opt/SUNWsamfs/examples/defaults.conf` file to its functional location.**

Its functional location is as follows:

```
/etc/opt/SUNWsamfs/defaults.conf
```

3. **Edit the file.**

Remove the comment characters from the entries to be enabled. Comment characters are preceded by a pound character (#).

---

## Step 11: Creating the `samfs.cmd` File (Optional)

The `/etc/opt/SUNWsamfs/samfs.cmd` file can be created as the place from which mount parameters are read. Creating this file can be beneficial if you are configuring multiple Sun SAM-FS or Sun SAM-QFS file systems with multiple mount parameters.

The mount parameters can be provided in the `samfs.cmd` file, in the `/etc/vfstab` file, and on the `mount(1M)` command. Specifications in the `/etc/vfstab` file override the directives in the `samfs.cmd` file. Options to the `mount(1M)` command override specifications in the `/etc/vfstab` file.

For more information about the `samfs.cmd` file, see the `samfs.cmd(4)` man page or see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*. For more information about the `/etc/vfstab` file, see "Step 12: Creating the Mount Point and Updating the `/etc/vfstab` File" on page 91. For more information on the `mount(1M)` command, see the `mount_samfs(1M)` man page.

---

## Step 12: Creating the Mount Point and Updating the `/etc/vfstab` File

The example in this step assumes that `/sam` is the mount point of the `samfs1` file system. You can select a different name and substitute it for `/sam`.

## ▼ To Create the Mount Point and Update the /etc/vfstab File

### 1. Edit the /etc/vfstab file and make an entry for each Sun SAM-FS and Sun SAM-QFS file system.

An example entry, showing the header fields, is as follows:

#DEVICE	DEVICE	MOUNT	FS	FSCK	MOUNT	MOUNT
#TO MOUNT	TO FSCK	POINT	TYPE	PASS	AT BOOT	PARAMETERS
#						
samfs1	-	/sam	samfs	-	yes	high=80,low=60

TABLE 5-6 shows the various fields in the /etc/vfstab file and their content.

**TABLE 5-6** /etc/vfstab File Fields

Field	Field Title	Content
1	Device to Mount	The name of the Sun SAM-FS or Sun SAM-QFS file system to mount.
2	Device to fsck(1M)	A dash (-) indicates that there are no options. This prevents the system from performing an fsck(1M) on a Sun SAM-FS or Sun SAM-QFS file system. For more information about this process, see the fsck(1M) or samfsck(1M) man page.
3	Mount Point	For example, /sam.
4	File System Type	Must be samfs.
5	fsck(1M) Pass	A dash (-) indicates that there are no options.
6	Mount at Boot	Specifying yes in this field requests that the Sun SAM-FS or Sun SAM-QFS file system be automatically mounted at boot time. Specifying no in this field indicates that you do not want to automatically mount the file system. For information about the format of these entries, see the mount_samfs(1M) man page.
7	Mount Parameters	A list of comma-separated parameters (with no spaces) that are used in mounting the file system. Mount specifications can be provided in the samfs.cmd file, in the /etc/vfstab file, and on the mount(1M) command. Specifications in the /etc/vfstab file override the directives in the samfs.cmd file. Options to the mount(1M) command override specifications in the /etc/vfstab file. For a list of available mount options, see the mount_samfs(1M) man page.

## 2. Create the mount point.

For example:

```
# mkdir /sam
```

## 3. Change the permissions, owner, or group owner of the /sam directory when it is not mounted. (Optional)

This prevents writing into the mount point directory when the file system is offline for maintenance. For example:

```
# chmod 555 /sam
# chown root:other /sam
```

---

**Note** – If you configured multiple mount points, repeat these steps for each mount point, using a different mount point (such as /sam2) and family set name (such as samfs2) each time.

---

---

# Step 13: Initializing the File System

This step shows how to use the `sammkfs(1M)` command and the Family Set names that you have defined to initialize a file system for each Family Set.

---

**Note** – One tuning parameter, the disk allocation unit (DAU), is set at this time. You cannot reset this parameter without reinitializing the file system. For information about how the DAU affects tuning, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide* or see the `sammkfs(1M)` man page.

---

## ▼ To Initialize the File System

- Use the `sammkfs(1M)` command to initialize the file system.

For example, the following command initializes a file system with the Family Set name `samfs1`:

```
# sammkfs samfs1
total data kilobytes      = 31842048
total data kilobytes free = 31841680
```

The actual numbers returned vary from file system to file system.



---

**Caution** – Running the `sammkfs(1M)` command initializes a new file system. It removes all data currently contained in the partitions associated with the file system in the `/etc/opt/SUNWsamfs/mcf` file.

---

## Step 14: Mounting the File System

The `mount(1M)` command mounts a file system. For information on the `mount(1M)` command, see the `mount_samfs(1M)` man page.

The `mount(1M)` command mounts a Sun SAM-FS or Sun SAM-QFS file system and reads the `/etc/vfstab` configuration file. For more information on the `mount(1M)` command, see the `mount_samfs(1M)` man page. For more information on the `/etc/vfstab` file, see the `vfstab(4)` man page.

Sun SAM-FS or Sun SAM-QFS file systems can be mounted either automatically at boot time or manually. This step shows both methods.

### ▼ To Mount the File System Automatically

- **Edit the `/etc/vfstab` file and change the `Mount at Boot` field, which is the sixth field in the file, to `yes`.**

The following example entry in the `/etc/vfstab` file specifies that the `samfs1` file system should be mounted at system startup.

```
samfs1 - /samfs1 samfs - yes -
```

The previous line causes `/etc/rc1.d/S01MOUNTFSYS` to mount the `samfs1` file system at system startup.

Proceed to “To Confirm that a File System is Mounted and Set Permissions” on page 95.

## ▼ To Mount the File System Manually

1. **Edit the `/etc/vfstab` file.**
2. **Change the Mount at Boot field, which is the sixth field in the file, to `no`.**

The advantage to making an `/etc/vfstab` entry is that it allows you to provide mount parameters in the `/etc/vfstab` file. When the file system is mounted, the `mount(1M)` command reads the mount parameters from the `/etc/vfstab` file and you do not have to specify them on the command line.

The following example entry in the `/etc/vfstab` file specifies that the `samfs1` file system should not be mounted automatically at system startup.

```
samfs1 - /samfs1 samfs - no trace
```

3. **Issue the `mount(1M)` command to mount the file system after system startup.**

If there is an entry for this file system in the `/etc/vfstab` file, issue the `mount(1M)` command and specify the file system mount point as the argument. For example:

```
# mount samfs1
```

## ▼ To Confirm that a File System is Mounted and Set Permissions

1. **Issue the `mount(1M)` command with no arguments.**

Examine its output to see whether the file system is mounted. For example:

```
# mount
<<< information deleted >>>
/samfs1 on /samfs1 read/write/setuid/dev=8001b1 on Mon Jan 14 12:21:03 2002
<<< information deleted >>>
```

2. **Issue the `chmod(1)` and `chown(1)` commands to change the permissions and ownership of the file system’s root directory. (Optional)**

If this is the first time the file system has been mounted, it is typical to perform this step. For example:

```
# chmod 755 /samfs1
# chown root:other /samfs1
```

---

## Step 15: Checking Drive Order

The drive order check procedure differs depending on whether your automated library has a front panel and whether it has tape or magneto-optical drives. Use one of the following procedures to check the drive order of each library:

- “To Check the Drive Order of Tape or Magneto-Optical Libraries With a Front Panel” on page 96
- “To Check the Drive Order of Tape Libraries Without a Front Panel” on page 97
- “To Check the Drive Order of Magneto-Optical Libraries Without a Front Panel” on page 98

### ▼ To Check the Drive Order of Tape or Magneto-Optical Libraries With a Front Panel

Follow this procedure to check the order of tape and magneto-optical drive devices for libraries with a front panel.

1. **Start the Sun SAM-FS or Sun SAM-QFS software by mounting a file system or by using the `samd start` command.**

2. **Verify the order of the drives.**

If the automated library contains more than one drive, the drives defined in the `mcf` file must be listed in the same order as the drives viewed by the automated library’s controller. The drive order that is recognized by the controller can be different from the order of the devices as reported in the `/var/adm/messages` file.

3. **Verify the order in which the drives are recognized by the automated library’s controller.**

Check the SCSI target IDs or world wide numbers displayed by the control panel of the automated library. For optical drives, read the SCSI target IDs displayed on the control panel for your automated library. The order in which the drive targets are reported should be the order in which they are configured in the `mcf` file.



To determine whether the drives become active when loaded with a cartridge, you can visually inspect the drives or you can use the `samu(1M)` utility's `r` display.

Refer to your hardware maintenance manual for instructions on identifying and setting target addresses.

## ▼ To Check the Drive Order of Tape Libraries Without a Front Panel

### 1. Start the Sun SAM-FS or Sun SAM-QFS software.

You can do this by mounting a file system or by using the `samd start` command.

### 2. Verify the order of the drives.

If your automated library contains more than one drive, the drives defined in the `mcf` file must be listed in the same order as the drives viewed by the library controller. The drive order that is recognized by the media changer controller can be different from the order of the devices as reported in the `/var/adm/messages` file. Make sure you check *each* drive in a library.

Make the drive state unavailable to the Sun SAM-FS or Sun SAM-QFS file system. You can do this by issuing the following `samcmd(1M)` command:

```
# samcmd unavail eq
```

For more information about the `samcmd(1M)` command's format, see the `samcmd(1M)` man page.

### 3. Load a cartridge into the drive by using the `samload(1M)` command.

Two possible formats for this command are as follows:

```
# samload mediatype.vsn eq
```

or:

```
# samload eq:slot[:partition] eq
```

For more information about the `samload(1M)` command's format, see the `samload(1M)` man page.

#### 4. Determine if the correct drive responds while under Sun SAM-FS or Sun SAM-QFS control.

Enter the following information, where *X* is the raw tape device entry in the `mcf` file:

```
# mt -f /dev/rmt/X status
```

The following example of a status message indicates that a tape is in the drive:

```
# mt -f /dev/rmt/0 status
DLT 7000 tape drive tape drive:
  sense key(0x2)= Not Ready   residual= 0   retries= 0
  file no= 0   block no= 0
```

If the tape did not load or the drive did not return a status, the drive might not be listed in the proper order in the `mcf`. Make sure the order is correct in the `mcf` file, and repeat this test. If you change any information in the `mcf` file, you must reinitialize the `mcf` file. For information on reinitializing the `mcf` file, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*.

## ▼ To Check the Drive Order of Magneto-Optical Libraries Without a Front Panel

### 1. Start the Sun SAM-FS or Sun SAM-QFS software.

You can do this by mounting a file system or by using the `samcmd start` command.

### 2. Verify the order of the drives.

If your automated library contains more than one drive, the drives defined in the `mcf` file must be listed in the same order as the drives viewed by the library controller. The drive order that is recognized by the media changer controller can be different from the order of the devices as reported in the `/var/adm/messages` file.

Make sure you check *each* drive in a library.

Make the drive state unavailable to the Sun SAM-FS or Sun SAM-QFS file system. You can do this by issuing the following `samcmd(1M)` command:

```
# samcmd unavail eq
```

For more information about the `samcmd(1M)` command's format, see the `samcmd(1M)` man page.

### 3. Load a cartridge into the drive by using the `samload(1M)` command.

Two possible formats for this command are as follows:

```
# samload mediatype . vsn eq
```

or:

```
# samload eq:slot[:partition] eq
```

For more information about the `samload(1M)` command's format, see the `samload(1M)` man page.

### 4. Determine if the correct drive reponds while under Sun SAM-FS or Sun SAM-QFS control.

Enter the following information at the system prompt:

```
# /bin/dd if=device_path bs=2k iseek=3374 of=/tmp/foo count=10
```

In the `dd(1M)` command, `device_path` is the `samst` device entry in the `mcf` file.

CODE EXAMPLE 5-2 shows a status message that indicates that an optical cartridge is in the selected device:

#### CODE EXAMPLE 5-2 `dd(1M)` Showing a Cartridge in a Drive

```
# dd if=/dev/samst/c0t3u0 bs=2k iseek=3374 of=/tmp/junk count=10
10+0 records in
10+0 records out
```

CODE EXAMPLE 5-3 shows a status message that indicates that an optical cartridge is not in the selected device:

#### CODE EXAMPLE 5-3 `dd(1M)` Showing a Cartridge in a Drive

```
# dd if=/dev/samst/c0t5u0 bs=2k iseek=3374 of=/tmp/junk1 count=10
read: I/O error
0+0 records in
0+0 records out
```

If the optical cartridge did not load or if the device returned messages like those in CODE EXAMPLE 5-3, the drives might not be listed in the correct order in the `mcf` file. Make sure the order is correct in the `mcf` file, repeat this test. If you change any

information in the `mcf` file, you must reinitialize the `mcf` file. For information on reinitializing the `mcf` file, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*.

---

## Step 16: Labeling Tapes or Optical Disks (Optional)

If you have standalone tape or optical devices, or if your automated library has no barcode reader, you must perform this step.

To prepare cartridges, use the `tplabel(1M)` command for tapes or use the `odlabel(1M)` command for optical disks. These commands create a label on the cartridge that can be used in the Sun SAM-FS and Sun SAM-QFS environment.

The `tplabel(1M)` command has the following format:

```
# tplabel -new -vsn new_vsn eq: slot
```

where:

<i>new_vsn</i>	The new volume serial name.
<i>eq</i>	The Equipment Ordinal of the automated library or manually loaded drive being addressed as defined in the <code>mcf</code> file.
<i>slot</i>	The number of a storage slot in an automated library as recognized in the library catalog. This argument is not applicable for manually loaded drives.

The `odlabel(1M)` command has the following format:

```
# odlabel -new -vsn new_vsn eq: slot: partition
```

where:

<i>new_vsn</i>	The new volume serial name.
<i>eq</i>	The Equipment Ordinal of the automated library or manually loaded drive being addressed as defined in the <code>mcf</code> file.
<i>slot</i>	The number of a storage slot in an automated library as recognized in the library catalog. This argument does not apply to manually loaded drives.
<i>partition</i>	A side of a magneto-optical disk. The <i>partition</i> must be 1 or 2.

Cartridges are ready to be used after these commands are issued. Both the `tplabel(1M)` and the `odlabel(1M)` commands accept a `-old` option that can be used to relabel previously labeled cartridges. For more information about these commands, see the `tplabel(1M)` and `odlabel(1M)` man pages.

**Example 1.** The following command labels a tape.

```
# tplabel -vsn TAPE01 -new 50:0
```

**Example 2.** The following command labels one side of an optical disk.

```
# odlabel -vsn OPTIC01 -new 30:1:1
```

---

## Step 17: Configuring the Archiver (Optional)

By default, the archiver automatically archives all files under all Sun SAM-FS and Sun SAM-QFS mount points. The administrator is not required to take action. The archiver archives to all VSNs in all configured automated libraries.

If your site has additional requirements, you need to set up the archiver command file, `archiver.cmd`. Archiving commences at the end of this installation procedure. If you do not want the archiver to automatically be operating at the end of this installation procedure, you can insert a `wait` directive in the `archiver.cmd` file.

For additional information, see the `archiver.cmd(4)` man page and see the information on the archiver in the *Sun SAM-FS and Sun SAM-QFS Storage and Archive Management Guide*.

---

## Step 18: Enabling Disk Archiving (Optional)

*Disk archiving* is the process of writing archive copies of file data to online disk in another file system. The file system to which the archive copies are written can be any UNIX file system. The destination file system does not have to be a Sun SAM-FS or Sun SAM-QFS file system, but the Sun Solaris host system to which archive files are written must have at least one Sun SAM-FS or Sun SAM-QFS file system installed on it.

Disk archiving differs from traditional archiving in several ways. For example, no automated libraries or removable media cartridges are used. You can, however, specify that one set of archive copies be written to disk and another set be written to other archive media. For a more complete description of disk archiving, see the *Sun SAM-FS and Sun SAM-QFS Storage and Archive Management Guide*.

If you plan to enable disk archiving, you must complete the following procedures for enabling disk archiving on the client and on the server.

### ▼ To Enable Disk Archiving on the Client

#### 1. Log on to the client system.

This is the system upon which the source files reside.

#### 2. Use the `cd(1)` command to change to the `/etc/opt/SUNWsamfs` directory in the Sun SAM-FS or Sun SAM-QFS file system.

#### 3. Edit the `archiver.cmd` file to add disk archive sets.

If you did not configure an `archiver.cmd` file in “Step 17: Configuring the Archiver (Optional)” on page 101, you will create the `archiver.cmd` file in this step.

CODE EXAMPLE 5-4 shows a fragment from an `archiver.cmd` file that defines disk archive sets.

#### CODE EXAMPLE 5-4 `/etc/opt/SUNWsamfs/archive.cmd` on the Client

```
# This is the part of the archiver.cmd file that defines
# disk archive sets.
#
params
```

**CODE EXAMPLE 5-4** /etc/opt/SUNWsamfs/archive.cmd on the Client

```
# This is the part of the archiver.cmd file that defines
archset1.1 -disk_archive disk01
archset2.1 -disk_archive disk02
endparams
```

For more information on specifying archive sets, see the `archiver.cmd(4)` man page or see the *Sun SAM-FS and Sun SAM-QFS Storage and Archive Management Guide*.

**4. Use vi(1) or another editor to create a file named `diskvols.conf`.**

CODE EXAMPLE 5-5 shows an example `diskvols.conf` file:

**CODE EXAMPLE 5-5** Example `diskvols.conf` File on the Client

```
# This is file sourceserver:/etc/opt/SUNWsamfs/diskvols.conf
# on the client.
#
# VSN_name [host_name:] path
#
disk01 otherserver:/sam/archset1
disk02 otherserver:/sam/archset2
```

CODE EXAMPLE 5-5 shows a `diskvols.conf` file that archives files from two archive sets. The disk volumes named `disk01` and `disk02` reside in a file system on the server system named `otherserver`.

As CODE EXAMPLE 5-5 shows, the `diskvols.conf` file can contain comment lines that begin with a pound character (`#`), and it must contain data in two fields: the VSN name field and the path field. The host name field can be left blank if you are

archiving to a file system that resides on the same host system as the source files, but if specified, it must be followed by a colon character (:). TABLE 5-7 shows the information that must appear in this file.

**TABLE 5-7** Format of the `diskvols.conf` File

Field Name	Content
VSN Name	A unique alphanumeric name for the disk VSN to receive the archive copies. Can be up to 31 characters long.
Host Name	The name of the server to which archive copies are written. If you are archiving to disk on another server, you must specify the name of the destination server to receive the archive copies. If a host name is specified, it must be followed by a colon. If you are archiving to a file system that resides on the same server as the source file system, you do not need to specify the host name.
Path	The full path, relative to the mount point, to the directory to receive the archive files. This directory must be in place before archiving can commence, and the destination file system must be mounted.

For more information about the `diskvols.conf` file, see the `diskvols.conf(4)` man page.

## ▼ To Enable Disk Archiving on the Server

- 1. Log on to the server system.**

This is the system to which the archive copies will be written.

- 2. Create directories in the file system to which the archive copies will be written.**

- 3. Use the `cd(1)` command to change to the `/etc/opt/SUNWsamfs` directory in the Sun SAM-FS or Sun SAM-QFS file system.**

- 4. Use `vi(1)` or another editor to create a file named `diskvols.conf`.**

This file contains the `clients` and `endclients` directives and names the client system upon which the files to be archived reside.



For more information on disk archiving, see the *Sun SAM-FS and Sun SAM-QFS Storage and Archive Management Guide*.

**CODE EXAMPLE 5-6** Example `diskvols.conf` File on the Server

```
# This is
# file destination_server:/etc/opt/SUNWsamfs/diskvols.conf
# on the server
#
clients
sourceserver
endclients
```

---

## Step 19: Sharing the File System With NFS Client Systems (Optional)

Perform this step if you want the Sun SAM-FS or Sun SAM-QFS file system to be NFS shared.

The Sun Solaris `share(1M)` command must be run to make the file system available for mounting by remote systems. The `share(1M)` commands are typically placed in the `/etc/dfs/dfstab` file and are executed automatically by the Sun Solaris OE when you enter `init(1M)` state 3.

### ▼ To NFS Share the File System

1. **Use an editor to add a `share(1M)` command to the `/etc/dfs/dfstab` file.**

For example, add a line like the following:

```
share -F nfs -o rw=client1:client2 -d "SAM-FS" /samfs1
```

2. **Use the `ps(1)` command to determine whether or not `nfs.server` is running.**

Issue the following commands:

```
# ps -ef | grep nfsd
# ps -ef | grep mountd
```

### 3. Start the NFS server. (Optional)

Perform this step if `nfs.server` is not running.

Enter the following command to start `nfs.server`:

```
# /etc/init.d/nfs.server start
```

### 4. Type the `share(1M)` command at a `root` shell prompt. (Optional)

Perform this step if you want to NFS share the file system immediately.

If there are no NFS shared file systems when the Sun Solaris OE boots, the NFS server is not started. You must change to run level 3 after adding the first `share` entry to this file. For example:

```
# init 3
# who -r
.          run-level 3  Dec 12 14:39      3    2    2
# share
-          /samfs1 -   "SAM-FS"
```

Some NFS mount parameters can affect the performance of an NFS mounted Sun SAM-FS or Sun SAM-QFS file system. You can set these parameters in the `/etc/vfstab` file as follows:

- `timeo = n`. This value sets the NFS timeout to  $n$  tenths of a second. The default is 11 tenths of a second. For performance purposes, Sun Microsystems recommends using the default value. You can increase or decrease the value appropriately to your system.
- `rsize = n`. This value sets the read buffer size to  $n$  bytes. In NFS 2, change the default value (8192) to 32768. In NFS 3, retain the default value of 32768.
- `wsiz = n`. This value sets the write buffer size to  $n$  bytes. In NFS 2, change the default value (8192) to 32768. In NFS 3, retain the default value of 32768.

For more information on these parameters, see the `mount_nfs(1M)` man page.

---

## Step 20: Mounting the File System on NFS Client Systems (Optional)

Perform this step if you have shared the file system with NFS client systems.

On the client systems, mount the server's Sun SAM-FS or Sun SAM-QFS file system at a convenient mount point.

## ▼ To Mount the File System on Clients

1. Enter a line similar to the following into your `/etc/vfstab` file:

```
server:/sam - /sam nfs - yes hard,intr,timeo=60
```

In this example, `server : /sam` is mounted on `/sam`, and information is entered into the `/etc/vfstab` file.

2. Issue the `mount(1M)` command and include the name of the file system to be mounted.

For example:

```
client# mount /sam
```

The automounter can also do this, if you prefer. Follow your site procedures for adding `server : /sam` to your automounter maps.

---

**Note** – It is strongly recommended that clients mount the file system with the `hard` option. At times, there might be a significant delay in the Sun SAM-FS or Sun SAM-QFS file system's response to NFS client requests. This can occur in a situation, for example, when a requested file resides on a cartridge that must be loaded into a DLT tape drive, when all tape drives are full, or when drives are slow. If the `hard` option is not specified, the NFS client can receive an error instead of retrying the operation until it is completed.

If you use the `soft` option, make sure you set the value of `retrans` to a large number such as 120 (the default is 5). This sets the number of NFS retransmissions occurring at the `time=n` interval.

---

---

## Step 21: Writing Periodic Dump Files By Using `samfsdump(1M)`

Periodically, the server should create a metadata dump file by using the `samfsdump(1M)` command. The `samfsdump(1M)` command supports dumping unarchived data. The `-u` option of the `samfsdump(1M)` command causes unarchived data to be interspersed with the metadata normally contained in a `samfsdump(1M)` dump.

When using the `samfsdump(1M)` command, please note the following:

- The `samfsdump(1M)` command dumps file names and inode information, not data. That is, the dump file does not include the archive data stored in your file system. The dump file does include the inode and directory structure information necessary to quickly locate the data on your archive media. This information is necessary for recovering from a file system failure. For more information on this, see the `samfsdump(1M)` man page.
- You can use the `-u` option to the `samfsdump(1M)` command to dump metadata and file data for files that have not yet been archived. A `samfsdump(1M)` dump taken using the `-u` option can be very large. The `samfsdump(1M)` command does not have any tape management or estimations as does `ufsdump(1M)`. You need to weigh the tradeoffs of space and unarchived data when using the `-u` option. For more information about these commands, see the `samfsdump(1M)` and `ufsdump(1M)` man pages.
- You can use the `samfsrestore(1M)` command to restore the metadata dump file after initializing the file system if a failure occurs.

For more information about using the `samfsdump(1M)` command, see the `samfsdump(1M)` man page. Also see the information on metadata, disaster preparation, and recovery in the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS Disaster Recovery Guide*.

The following sections describe procedures for issuing this command both automatically and manually.

## ▼ To Run the `samfsdump(1M)` Command Automatically

1. **Make an entry in the root user's crontab file so the cron daemon runs the `samfsdump(1M)` command periodically.**

Example 1:

```
0 0 * * * find /csd.directory/sam -type f -mtime +7 \  
-print | xargs -l1 rm -f; cd /sam; \  
/opt/SUNWsamfs/sbin/samfsdump -f \  
/csd.directory/sam/'date +%y%m%d'
```

This example crontab entry uses a Sun SAM-FS file system mounted on `/sam`. Replace `/csd.directory` with an existing directory of your choice. This entry causes the commands to be executed each day at midnight. First, the old dumps are renamed and a new dump is created in `/csd.directory/sam/yymmdd`. After that, `cron(1M)` emails the `samfsdump(1M)` output to root.

2. **Using the previous step as a guide, make similar crontab entries for each file system. (Optional)**

If you have multiple Sun SAM-FS or Sun SAM-QFS file systems, make similar entries for each. Make sure you save each dump in a separate file.

## ▼ To Run the `samfsdump(1M)` Command Manually

1. **Log in as superuser.**
2. **Use the `cd(1)` command to go to the directory that contains the mount point for the file system.**

For example:

```
# cd /samfs.mt.pt
```

In this example, `samfs.mt.pt` is a Sun SAM-FS mount point.

3. **Create a dump file by issuing the `samfsdump(1M)` command and writing the output to a file system outside of the one you are dumping.**

For example:

```
# samfsdump -T -u -f /dumpster/dump.file
```

In this example, `dump.file` is the newly created dump structure.

---

## Step 22: Enabling Automatic Rotating of Log and Trace Files (Optional)

Perform this step if you want to enable log and trace file rotation.

Certain log and trace files can get very large. The `log_rotate.sh(1M)` script rotates the log and trace files generated by the Sun SAM-FS and Sun SAM-QFS software systems. This script can be enabled at any time, but it is sometimes convenient to enable it at installation time. To enable log rotating, see the `log_rotate.sh(1M)` man page for instructions.

# Sun SAM-FS and Sun SAM-QFS Upgrade Procedure

---

This chapter explains how to upgrade a server to a new release of the Sun SAM-FS or Sun SAM-QFS software. Use this procedure if you are upgrading your Sun SAM-FS or Sun SAM-QFS environment.

You must perform all the steps in this chapter as superuser (root).

The main sections in this chapter are as follows:

- “Step 1: Obtaining the Release Files” on page 111
- “Step 2: Backing Up Each Sun SAM-FS and Sun SAM-QFS File System” on page 113
- “Step 3: Stopping the Sun SAM-FS or Sun SAM-QFS File System” on page 114
- “Step 5: Unmounting the File Systems” on page 116
- “Step 6: Removing Existing Sun SAM-FS or Sun SAM-QFS Software” on page 117
- “Step 7: Adding the Packages” on page 118
- “Step 8: Updating the License Keys” on page 119
- “Step 9: Verifying System Files” on page 120
- “Step 10: Modifying the /etc/vfstab File (Optional)” on page 121
- “Step 11: Reinitializing and Restoring the File Systems (Optional)” on page 122
- “Step 12: Checking the File System (Optional)” on page 123
- “Step 13: Mounting the File Systems (Optional)” on page 123
- “Step 14: Verifying the archiver.cmd File” on page 124
- “Step 15: Recompiling API-Dependent Applications (Optional)” on page 124

---

## Step 1: Obtaining the Release Files

You can obtain the Sun SAM-FS and Sun SAM-QFS software from the Sun Download Center or on a CD-ROM. The Sun Download Center is located at the following URL:

<http://sunwww.central/download/>

Contact your authorized service provider (ASP) or your Sun sales representative if you have questions on obtaining the software in one of these ways.

After the release, upgrade patches are available from the following URL:

<http://www.sunsolve.sun.com>



---

**Caution** – If you have not read the README file delivered with this release, please do so before continuing. You can access the README file for this release at any time from one of the documentation websites described in this manual's preface. It is available as the *Sun QFS*, *Sun SAM-FS*, and *Sun SAM-QFS README File*. After your software is installed, the content of the README file is located in `/opt/SUNWsamfs/doc/README`.

---

## ▼ To Install From a CD-ROM

### 1. Log in as root.

The Sun SAM-FS and Sun SAM-QFS software uses the Sun Solaris operating environment (OE) packaging utilities for adding and removing software. You must be logged in as superuser (`root`) to make changes to software packages. The `pkgadd(1M)` utility prompts you to confirm various actions necessary to install the packages.

### 2. Insert the CD into the CD drive.

The system should automatically detect the CD's presence. If it does not, issue commands to stop and start the Sun Solaris Volume Manager and to change to the directory that contains the Sun QFS software package.

```
# /etc/init.d/volmgt stop
# /etc/init.d/volmgt start
# volcheck
# cd /cdrom/cdrom0
```

On the CD, the Sun QFS package resides in the `/cdrom/cdrom0` directory organized by Sun Solaris version.



---

## Step 2: Backing Up Each Sun SAM-FS and Sun SAM-QFS File System

If you do not have current backup files for each of your Sun SAM-FS and Sun SAM-QFS file systems, create them now using the `samfsdump(1M)` command.

Perform this step as a precautionary measure if you suspect that your current `samfsdump(1M)` file is incorrect or outdated.

---

**Note** – You must back up your file system now if you plan to use the following Sun SAM-FS or Sun SAM-QFS 4.0 features:

- Access Control Lists (ACLs)
- Sun QFS shared file system
- `md` devices in Sun QFS or Sun SAM-QFS (`ma`) file systems
- Dual-sized disk allocation units (DAUs) on `mm` devices

In order to use any of these features, you need to reinitialize the file system. Reinitializing the file system is described in “Step 11: Reinitializing and Restoring the File Systems (Optional)” on page 122 of this installation process. After the file system is reinitialized, by using the `sammkfs(1M)` command, you can use the `samfsrestore(1M)` command to restore files to the new file system from the dump file created in this installation step.

---

### ▼ To Back Up File Systems

#### 1. Make sure that all files are archived.

For example, assume that `sam1` is the mount point of the file system. You can complete this step by entering a command similar to the following:

```
# sfind /sam1 ! -archived
```

Examine this command’s output. The files in this output are those that have not been archived. If you want any of these files to appear in the dump file, archive them now before you proceed to the next step. Alternatively, you can use the `-u` option to the `samfsdump(1M)` command to dump unarchived data if you suspect some files have not yet been archived. The `-u` option can create very large dump files, however, so you need to weigh space considerations when using this option.

2. **Back up each Sun SAM-FS or Sun SAM-QFS file system's metadata by using `samfsdump(1M)`.**

The location to which you dump each file system's metadata should be outside the Sun SAM-FS or Sun SAM-QFS file system.

The following example assumes that you have a file system mounted at `/sam1` that you want to back up to `samfs1.dump`, which exists outside of the Sun file systems:

```
# cd /sam1
# samfsdump -f /csd_dump_dir/samfs1.dump
```

The `samfsdump(1M)` command dumps file names and inode information, not data. For more information, see the `samfsdump(1M)` man page.

You must back up the metadata information for each file system, so repeat the preceding steps for each file system in your Sun SAM-FS and Sun SAM-QFS environment.

For more information about backing up your file systems, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS Disaster Recovery Guide*.

---

## Step 3: Stopping the Sun SAM-FS or Sun SAM-QFS File System

### ▼ To Stop the File System

1. **Use the `samcmd(1M)` command to idle the drives in your system.**

To idle the drives, enter the following for each removable media drive `eq` configured in your `mcf` file:

```
# samcmd idle eq
```

Enter the `samcmd idle` command for each removable media drive `eq` configured in your `mcf` file.

You can also idle the drives by using the `samu(1M)` operator utility or by using either the `robottool(1M)` or `libmgr(1M)` graphical user interface (GUI) tools. For more information about the `samcmd(1M)` command, see the `samcmd(1M)` man page.

## 2. Stop the archiver.

Use an editor to open the `/etc/opt/LSCsamfs/archiver.cmd` file and add a `wait` directive near the top of this file. The purpose of the `wait` directive is to stop the archiver.

## 3. Issue the `samd(1M)` stop command to stop all operations.

Make sure to idle the drives in your Sun SAM-FS or Sun SAM-QFS environment before you issue the `samd stop` command. This enables the archiver, stager, and other processes to complete current operations.

For example:

```
# samd stop
```

---

# Step 4: Unsharing the File Systems (Optional)

You must complete this step if your Sun SAM-FS or Sun SAM-QFS file systems are NFS shared file systems.

## ▼ To Unshare the File Systems

- Use the `unshare(1M)` command on the Sun SAM-FS or Sun SAM-QFS file system.

For example, the following command unshares the `samqfs1` file system:

```
# unshare samqfs1
```

---

## Step 5: Unmounting the File Systems

There are several ways to unmount a file system. Any of the following methods can accomplish this task. The easiest method is presented first. After the file system is unmounted, you can proceed to “Step 6: Removing Existing Sun SAM-FS or Sun SAM-QFS Software” on page 117.

### ▼ To Unmount Using the `umount(1M)` Command

- **Using the `umount(1M)` command, unmount each Sun SAM-FS or Sun SAM-QFS file system.**

If you are unmounting a file system from a Sun Solaris 8 or later OE, you can use the `-f` option to the `umount(1M)` command. The `-f` option forces a file system to unmount.

### ▼ To Unmount Using the `fuser(1M)`, `kill(1)`, and `umount(1M)` Commands

If using `umount(1M)` to unmount is not successful, it might be because you or another user are using files or because you or another user have changed to directories in the file system.

1. **Use the `fuser(1M)` command to determine whether or not any processes are still busy.**

For example, the following command queries the `samqfs1` file system:

```
# fuser -uc /samqfs1
```

2. **If any processes are still busy, terminate them by using the `kill(1M)` command.**
3. **Using the `umount(1M)` command, unmount each Sun SAM-FS or Sun SAM-QFS file system.**

## ▼ To Unmount by Editing the `/etc/vfstab` File and Rebooting

1. **Edit the `/etc/vfstab` file.**

For all Sun SAM-FS or Sun SAM-QFS file systems, change the Mount at Boot field from `yes` or `delay` to `no`.

2. **Reboot your system.**

---

## Step 6: Removing Existing Sun SAM-FS or Sun SAM-QFS Software

The following section describes how to remove software from a release prior to 4.0.

## ▼ To Remove Software from a Release Prior to 4.0

1. **Use the `pkginfo(1)` command, as follows, to determine which Sun SAM-FS and Sun SAM-QFS software packages are installed on your system.**

```
# pkginfo | grep LSC
```

2. **Use the `pkgrm(1M)` command to remove the existing Sun SAM-FS or Sun SAM-QFS software.**

You must remove all existing Sun SAM-FS and Sun SAM-QFS packages before installing the new packages. If you are using any optional Sun SAM-FS or Sun SAM-QFS packages, you should make sure that you remove these packages before you remove the main `LSCsamfs` package. The install script prompts you to confirm several of the removal steps.

The following example removes all of the SAM-FS and SAM-QFS 3.5.0 packages:

```
# pkgrm LSCibm LSCstk LSCdst LSCsony LSCgui LSCjre LSCdoc LSCmigkit \  
LSCtools LSCremote LSCsamfs
```

The `LSCsamfs` package must be the last package removed.

As part of the installation process, the existing master configuration file and the catalog files are copied to `/etc/opt/SUNWsamfs/samfs.old.date`.

---

**Note** – If you are upgrading from a SAM-FS or SAM-QFS release prior to the Sun SAM-FS or Sun SAM-QFS 4.0 release, you must remove any installed `LSCibm`, `LSCstk`, `LSCdst`, `LSCsony`, `LSCgui`, `LSCjre`, `LSCdoc`, `LSCmigkit`, `LSCtools` or `LSCremote` packages *prior to* removing the `LSCsamfs` package. The new Sun SAM-FS or Sun SAM-QFS 4.0 package consists of the `SUNWsamfs` package, which includes most of the packages distributed individually prior to the 4.0 release. The only package that is still available separately is the tools package, which is now available as the `SUNWsamtp` package. Contact your Sun sales representative for information on obtaining the 4.0 version of the `SUNWsamtp` package.

---

## Step 7: Adding the Packages

The Sun SAM-FS and Sun SAM-QFS software packages use the Sun Solaris packaging utilities for adding and deleting software. You must be logged in as superuser (`root`) to make changes to software packages. The `pkgadd(1M)` command prompts you to confirm various actions necessary to upgrade the packages.

During the installation, the system detects the presence of conflicting files and prompts you to indicate whether or not you want to continue with the installation. You can go to another window and copy the files you want to save to an alternate location.

On the CD-ROM, all products reside in the `/cdrom/cdrom0` directory organized by Sun Solaris version.

### ▼ To Add the Packages

1. **Run the `pkgadd(1M)` command to upgrade the `SUNWsamfs` package.**

The format of this command is as follows:

```
# pkgadd -d SUNWsamfs
```

2. **Answer `yes` to each question.**

**3. Use the `pkgadd(1M)` command to add one or more localized packages. (Optional)**

Perform this step only if you want to install the packages localized for Chinese, French, or Japanese. To install these packages, enter one or more of the following commands:

```
# pkgadd -d SUNWcsamf
# pkgadd -d SUNWfsamf
# pkgadd -d SUNWjsamf
```

---

## Step 8: Updating the License Keys

License keys are required to run the Sun SAM-FS and Sun SAM-QFS software. For information on license keys, see “Step 6: Verifying the Software License” on page 23.

The Sun SAM-FS and Sun SAM-QFS software uses encrypted license keys. The license keys consist of encoded alphanumeric strings. You receive one or more license keys depending on the system configuration and the products being licensed.

### ▼ To License the Software

**1. Verify whether the license file exists.**

The license file is as follows:

```
/etc/opt/SUNWsamfs/LICENSE.4.0
```

**2. If the `/etc/opt/SUNWsamfs/LICENSE.4.0` file does not exist, create it.**

**3. Starting in column one, place the license key you have obtained from your ASP or from Sun Microsystems on the first line in the**

**`/etc/opt/SUNWsamfs/LICENSE.4.0` file.**

The key must start in column one. No other keywords, host IDs, comments, or other information can appear in the `/etc/opt/SUNWsamfs/LICENSE.4.0` file. The license becomes effective when a Sun SAM-FS or Sun SAM-QFS file system is mounted.

**4. View the current license settings by issuing the `samcmd(1M)` command with its `l` argument, as follows.**

```
# samcmd l
```

This is the `l` (letter “ell” as in *license*) argument.

The license keys allow the system to run indefinitely unless you were issued a temporary license.

---

## Step 9: Verifying System Files

The topology of the equipment managed by the Sun SAM-FS or Sun SAM-QFS file system is defined in the master configuration file, `/etc/opt/SUNWsamfs/mcf`. This file specifies the devices, automated libraries, and file systems included in the environment. Each piece of equipment is assigned a unique Equipment Identifier in the `mcf` file.

---

**Note** – For information about file system design considerations, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*.

---

### ▼ To Verify System Files

If tracing is implemented in your `archiver.cmd` file or `stager.cmd` file, edit these files now to remove the tracing directives. All system tracing in Sun SAM-FS and Sun SAM-QFS 4.0 is implemented in the `defaults.conf` file. The presence of tracing directives in the `archiver.cmd` file or `stager.cmd` file on a 4.0 system will inhibit archiving and staging. For more information about these files, see the `archiver.cmd(4)`, `stager.cmd(4)`, and `defaults.conf(4)` man pages.

1. **Edit your `archiver.cmd` and `stager.cmd` files to identify and then remove the `trace = directives`.**
2. **Edit your `defaults.conf` file to reenale tracing.**

For information on how to enable tracing, see the `defaults.conf(4)` man page.

### ▼ To Verify the `mcf` File

1. **Issue the `cd(1)` command to change to the `/etc/opt/SUNWsamfs` directory.**

This is the directory that contains your `mcf` file.



**2. Verify that an `mcf` file exists.**

The correct location for this file is as follows:

```
/etc/opt/SUNWsamfs/mcf
```

**3. Issue the `sam-fsd(1M)` command to check the `mcf` file for errors.**

For example:

```
# sam-fsd
```

## ▼ To Reinitialize the `mcf` File

Reinitialization of the `mcf` file is not needed at this point in the configuration process. Be aware, however, that if you change the `mcf` file after the Sun SAM-FS or Sun SAM-QFS software is in use, you must enter commands to convey the new `mcf` specifications to the system. For information on reinitializing the `mcf` file, see the *Sun QFS, Sun SAM-FS, and Sun SAM-QFS File System Administrator's Guide*.

---

## Step 10: Modifying the `/etc/vfstab` File (Optional)

If you modified the `/etc/vfstab` file in “Step 5: Unmounting the File Systems” on page 116, you must complete this step.

## ▼ To Modify the `/etc/vfstab` File

- **Edit this file again, and change the Mount at Boot field for all Sun SAM-FS and Sun SAM-QFS file systems from `no` to `yes`.**

---

## Step 11: Reinitializing and Restoring the File Systems (Optional)

You must use the Sun SAM-FS or Sun SAM-QFS 4.0 `sammkfs(1M)` command to reinitialize your file systems if you want to use all of the Sun QFS 4.0 features. The features that require you to reinitialize your file systems are noted in “Step 2: Backing Up Each Sun SAM-FS and Sun SAM-QFS File System” on page 113.

In this step, you reinitialize your file systems and restore the saved data from “Step 2: Backing Up Each Sun SAM-FS and Sun SAM-QFS File System” on page 113 into the new file systems. To accomplish this, use the `sammkfs(1M)` and `samfsrestore(1M)` commands on each file system.

### ▼ To Reinitialize and Restore the File Systems

1. **Use the `sammkfs(1M)` command to initialize a new Sun SAM-FS or Sun SAM-QFS file system.**

If you want to use all the Sun QFS 4.0 features, issue the `sammkfs(1M)` command without any options. The following example `sammkfs(1M)` command reinitializes a file system named `samqfs1` with Sun SAM-QFS 4.0 feature capabilities.

```
# sammkfs samqfs1
```

For more information on the options to the `sammkfs(1M)` command, see the `sammkfs(1M)` man page.

2. **Use the `samfsrestore(1M)` command to restore the dumped data into the new file system.**

For example, the following commands assume that you have a file system named `samqfs1` (mounted at `/samqfs1`) that you want to back up from files dumped to `samqfs1.bak`, which exists outside of the Sun QFS file system:

```
# cd /samqfs1
# samfsrestore -f /save/qfs/samqfs1.bak
```

---

**Note** – If you do not want to use all of the Sun QFS 4.0 features, use the `-P` option to the `sammkfs(1M)` command. This creates a version 1 superblock. For more information on the options to the `sammkfs(1M)` command, see the `sammkfs(1M)` man page.

---

---

## Step 12: Checking the File System (Optional)

If you did not perform “Step 11: Reinitializing and Restoring the File Systems (Optional)” on page 122, you are encouraged to complete this step.

- Use the `samfsck(1M)` command to check your existing file systems for inconsistencies.

Do this for each Sun SAM-FS and Sun SAM-QFS file system.

---

## Step 13: Mounting the File Systems (Optional)

If you have *not* modified the Mount at Boot field in the `/etc/vfstab` file to say `yes` or `delay` instead of `no`, you must perform this step.

- Use the `mount(1M)` command to mount the file systems and continue operation with the upgraded software.

In the following example, `samqfs1` is the name of the file system to be mounted:

```
# mount samqfs1
```

---

## Step 14: Verifying the `archiver.cmd` File

- Use the `archiver(1M)` command with its `-l` and `-v` options to verify the validity of the `archiver.cmd` file.

For example:

```
# archiver -lv
```

If this command reports errors in the `archiver.cmd` file, correct them now. For more information on the `archiver(1M)` command, see the `sam-archiverd(1M)` man page.

---

## Step 15: Recompiling API-Dependent Applications (Optional)

If you are running applications that use the Sun SAM-FS or Sun SAM-QFS application programming interface (API), you need to complete this step.

Because file headers, the calling sequence, and other elements of the API can change from release to release, you should recompile all applications that depend on the API at this time.



---

**Caution** – Failure to recompile API-dependent applications at this point can cause your applications to generate unexpected results.

---

# Glossary

---

---

## A

- addressable storage** The storage space encompassing online, nearline, offsite, and offline storage that is user-referenced through a Sun QFS, Sun SAM-FS, or Sun SAM-QFS file system.
- archive media** The media to which an archive file is written. Archive media can be removable tape or magneto-optical cartridges in a library. In addition, archive media can be a mount point on another system.
- archive storage** Copies of file data that have been created on archive media.
- archiver** The archive program that automatically controls the copying of files to removable cartridges.
- audit (full)** The process of loading cartridges to verify their VSNs. For magneto-optical cartridges, the capacity and space information is determined and entered into the automated library's catalog.
- automated library** A robotically controlled device designed to automatically load and unload removable media cartridges without operator intervention. An automated library contains one or more drives and a transport mechanism that moves cartridges to and from the storage slots and the drives.

---

## B

**backup storage** A snapshot of a collection of files for the purpose of preventing inadvertent loss. A backup includes both the file's attributes and associated data.

**block allocation map** A bitmap representing each available block of storage on a disk and indicating whether the block is in use or free.

**block size** See DAU.

---

## C

**cartridge** A physical entity that contains media for recording data. A tape or optical disk. Sometimes referred to as *a piece of media*, *a volume*, or *the medium*.

**catalog** A record of the VSNs in an automated library. There is one catalog for each automated library, and at a site, there is one historian for all automated libraries.

**client-server** The model of interaction in a distributed system in which a program at one site sends a request to a program at another site and awaits a response. The requesting program is called the client. The program satisfying the response is called the server.

**connection** The path between two protocol modules that provides reliable stream delivery service. A TCP connection extends from a TCP module on one machine to a TCP module on the other.

---

## D

**data device** For a Sun QFS, Sun SAM-FS, or Sun SAM-QFS file system, a device or group of devices upon which file data is stored.

<b>DAU (disk allocation unit)</b>	The basic unit of online storage. Also called block size.  The Sun SAM-FS and Sun SAM-QFS file systems support both a small and a large DAU. The small DAU is 4 kilobytes (2 <sup>14</sup> or 4096 bytes). The large DAU is 16, 32, or 64 kilobytes. The available DAU size pairs are 4/16, 4/32, and 4/64.  In addition, the Sun QFS and Sun SAM-QFS file systems support a fully adjustable DAU, sized from 16 kilobytes through 65,528 kilobytes. The DAU you specify must be a multiple of 8 kilobytes.
<b>device logging</b>	A configurable feature that provides device-specific error information used to analyze device problems.
<b>device scanner</b>	Software within the Sun SAM-FS or Sun SAM-QFS file system that periodically monitors the presence of all manually mounted removable devices and that detects the presence of mounted cartridges that can be requested by a user or other process.
<b>direct access</b>	A file attribute (stage never) designating that a nearline file can be accessed directly from the archive media and need not be retrieved to disk cache.
<b>direct-attached library</b>	An automated library connected directly to a server using a SCSI interface. A SCSI attached library is controlled directly by the Sun SAM-FS or Sun SAM-QFS software by using the SCSI standard for automated libraries.
<b>direct I/O</b>	An attribute used for large block-aligned sequential I/O. The <code>setfa(1)</code> command's <code>-D</code> option is the direct I/O option. It sets the direct I/O attribute for a file or directory. If applied to a directory, the direct I/O attribute is inherited.
<b>directory</b>	A file data structure that points to other files and directories within the file system.
<b>disk allocation unit</b>	See DAU.
<b>disk buffer</b>	When using Sun SAM-Remote software, the disk buffer is a buffer on the server system that is used when archiving data from the client to the server.
<b>disk cache</b>	The disk-resident portion of the Sun SAM-FS and Sun SAM-QFS file system software. It is used to create and manage data files between online disk cache and archive media. Individual disk partitions or an entire disk can be used as disk cache.
<b>disk space thresholds</b>	An administrator-defined amount of disk space that is available to a user. This defines the range of desirable disk cache utilization. The high threshold indicates the maximum level of disk cache utilization. The low threshold indicates the minimum level of disk cache utilization. The releaser controls disk cache utilization based on these predefined disk space thresholds.

- disk striping** The process of recording a file across several disks, thereby improving access performance and increasing overall storage capacity. Also see entries for striping.
- drive** A mechanism for transferring data to and from a removable media volume.
- 

## E

- Ethernet** A local-area, packet-switched network technology. Originally designed for coaxial cable, it is now found running over shielded, twisted-pair cable. Ethernet is a 10- or 100-megabytes-per-second LAN.
- extent array** The array within a file's inode that defines where each data block assigned to the file is located on the disk.
- 

## F

- family device set** See family set.
- family set** A storage device that is represented by a group of independent physical devices, such as a collection of disks or the drives within an automated library. Also see disk cache family set.
- FDDI** Fiber distributed data interface. A 100-megabytes-per-second fiber-optic LAN.
- fibre channel** The ANSI standard that specifies high-speed serial communication between devices. Fibre channel is used as one of the bus architectures in SCSI-3.
- fibre-distributed data interface** See FDDI.
- file system** A hierarchical collection of files and directories.
- file system specific directives** Archiver and releaser directives that follow global directives, are specific to a particular file system, and begin with `fs =`. File system specific directives apply until the next `fs =` directive line or until the end of file is encountered. If multiple directives affect a file system, the file system-specific directives override the global directives.
- FTP** File Transfer Protocol. An internet protocol for transferring files between two hosts over a TCP/IP network.



---

## G

- global directives** Archiver and releaser directives that apply to all file systems and that appear before the first `fs =` line.
- grace period** For disk quotas, this is the amount of time that can elapse during which a user is allowed to create files and/or allocate storage after a user reaches their soft limit.

---

## H

- hard limit** For disk quotas, a maximum limit on file system resources (blocks and inodes) that users cannot exceed.

---

## I

- indirect block** A disk block that contains a list of storage blocks. The Sun QFS, Sun SAM-FS, and Sun SAM-QFS file systems have up to three levels of indirect blocks. A first-level indirect block contains a list of blocks used for data storage. A second-level indirect block contains a list of first-level indirect blocks. A third-level indirect block contains a list of second-level indirect blocks.
- inode** Index node. A data structure used by the file system to describe a file. An inode describes all the attributes associated with a file other than the name. The attributes include ownership, access, permission, size, and the file location on the disk system.
- inode file** A special file (`.inodes`) on the file system that contains the inode structures for all files resident in the file system. All Sun QFS, Sun SAM-FS, and Sun SAM-QFS inodes are 512 bytes long. The inode file is a metadata file, which is separated from file data in the Sun QFS and Sun SAM-QFS file systems.

---

## K

**kernel** The central controlling program that provides basic system facilities. The UNIX kernel creates and manages processes, provides functions to access the file system, provides general security, and supplies communication facilities.

---

## L

**LAN** Local area network.

**lease** In a Sun QFS shared file system, a lease grants a client host permission to perform an operation on a file for as long as the lease is valid. The metadata server issues leases to each client host. The leases are renewed as necessary to permit continued file operations.

**library** See automated library.

**library catalog** See catalog.

**LUN** Logical unit number.

---

## M

**mcf** Master configuration file. The file that is read at initialization time that defines the relationships between the devices (the topology) within a Sun QFS, Sun SAM-FS, and Sun SAM-QFS environment.

**media** Tape or optical disk cartridges.

**media recycling** The process of recycling or reusing archive media with low use (that is, archive media with few active files).

**metadata** Data about data. Metadata is the index information needed to locate the exact data position of a file on a disk. It consists of information about files, directories, access control lists, symbolic links, removable media, segmented files, and the indexes of segmented files. Metadata must be protected because if data is lost, the metadata that locates the data must be restored before the lost data can be retrieved.

- metadata device** A separate device (for example, a solid-state disk or mirrored device) upon which Sun QFS and Sun SAM-QFS file system metadata is stored. Separating file data from metadata can increase performance. In the `mcf` file, a metadata device is declared as an `mm` device within an `ma` file system.
- mirror writing** The process of maintaining two copies of a file on disjointed sets of disks to prevent loss from a single disk failure.
- mount point** The directory on which a file system is mounted.
- multireader file system** The Sun QFS multireader file system is a single-writer, multireader capability that enables you to specify a file system that can be mounted on multiple hosts. Multiple hosts can read the file system, but only one host can write to the file system. Multiple readers are specified with the `-o reader` option on the `mount(1M)` command. The single-writer host is specified with the `-o writer` option on the `mount(1M)` command. For more information on the `mount(1M)` command, see the `mount_samfs(1M)` man page.

---

## N

- name space** The metadata portion of a collection of files that identifies the file, its attributes, and its storage locations.
- nearline storage** Removable media storage that requires robotic mounting before it can be accessed. Nearline storage is usually less expensive than online storage, but it incurs a somewhat longer access time.
- network-attached automated library** A library, such as those from StorageTek, ADIC/Grau, IBM, or Sony, that is controlled using a software package supplied by the vendor. The Sun SAM-FS and Sun SAM-QFS file systems interface with the vendor software using a Sun SAM-FS or Sun SAM-QFS media changer daemon designed specifically for the automated library.
- NFS** Network file system. A Sun distributed file system that provides transparent access to remote file systems on heterogeneous networks.
- NIS** The SunOS 4.0 (minimum) Network Information Service. A distributed network database containing key information about the systems and the users on the network. The NIS database is stored on the master server and all the slave servers.

---

## O

- offline storage** Storage that requires operator intervention for loading.
- offsite storage** Storage that is remote from the server and is used for disaster recovery.
- online storage** Storage that is immediately available (for example, disk cache storage).

---

## P

- partition** A portion of a device or a side of a magneto-optical cartridge.
- preallocation** The process of reserving a contiguous amount of space on the disk cache for writing a file. This ensures that the space is contiguous. Preallocation can be performed only on zero-sized files. That is, the `setfa -l` command can be specified only for a file that is size zero. For more information, see the `setfa(1)` man page.
- prioritizing preview requests** Assigning priority to archive and stage requests that cannot be immediately satisfied.
- pseudo device** A software subsystem or driver with no associated hardware.

---

## Q

- quota** The amount of system resources that a user is allowed to consume. Quotas are not supported for removable media or disk archive resources.

---

## R

- RAID** Redundant array of inexpensive/independent disks. A disk technology that uses several independent disks to reliably store files. It can protect against data loss from a single disk failure, can provide a fault-tolerant disk environment, and can provide higher throughput than individual disks.

- recycler** A Sun SAM-FS and Sun SAM-QFS utility that reclaims space on cartridges that is occupied by expired archive copies.
- release priority** A method of calculating the release priority of a file within a file system by multiplying various weights by the corresponding file properties and then summing the results.
- releaser** A Sun SAM-FS and Sun SAM-QFS component that identifies archived files and releases their disk cache copies, thus making more disk cache space available. The releaser automatically regulates the amount of online disk storage to high and low thresholds.
- remote procedure calls** See RPC.
- removable media file** A special type of user file that can be accessed directly from where it resides on a removable media cartridge, such as magnetic tape or optical disk cartridge. also used for writing archive and stage file data.
- robot** The portion of an automated library that moves cartridges between storage slots and drives. Also called a transport.
- round robin** A data access method in which entire files are written to logical disks in a sequential fashion. When a single file is written to disk, the entire file is written to the first logical disk. The second file is written to the next logical disk, and so on. The size of each file determines the size of the I/O.
- By default, Sun QFS, Sun SAM-FS, and Sun SAM-QFS file systems implement striped data access unless striped groups are present. Files are round-robin if round robin access is specified. If the file system contains mismatched striped groups, striping is not supported and round robin is forced.
- Also see glossary entries for disk striping and striping.
- RPC** Remote procedure calls. The underlying data exchange mechanism used by NFS to implement custom network data servers.

---

## S

- samfsdump** A program that creates a control structure dump and copies all the control structure information for a given group of files. It is analogous to the UNIX `tar(1)` utility, but it does not generally copy file data.
- samfsrestore** A program that restores inode and directory information from a control structure dump.

- SCSI** Small Computer System Interface. An electrical communication specification commonly used for peripheral devices such as disk and tape drives and automated libraries.
- small computer system interface** See SCSI.
- soft limit** For disk quotas, a threshold limit on file system resources (blocks and inodes) that you can temporarily exceed. Exceeding the soft limit starts a timer. When you exceed the soft limit for the specified time (default is one week), no further system resources can be allocated until you reduce file system use to a level below the soft limit.
- staging** The process of copying a nearline or offline file from archive storage back to online storage.
- storage family set** A set of disks that are collectively represented by a single disk family device.
- storage slots** Locations inside an automated library in which cartridges are stored when not being used in a drive. If the library is direct-attached, the contents of the storage slots are kept in the automated library's catalog.
- stripe size** The number of disk allocation units (DAUs) to allocate before moving to the next device of a stripe. If `stripe=0`, the file system uses round-robin access, not striped access.
- striped group** A collection of devices within a Sun QFS or Sun SAM-QFS file system and defined in the `mcf` file as one (usually two) or more `gXXX` devices. Striped groups are treated as one logical device and are always striped with a size equal to the disk allocation unit (DAU). You can specify up to 128 striped groups within a file system, but you can specify no more than 252 total devices.
- striping** A data access method in which files are simultaneously written to logical disks in an interlaced fashion. All Sun QFS, Sun SAM-FS, and Sun SAM-QFS file systems enable you to declare either striped or round robin access for each individual file system. The Sun QFS and Sun SAM-QFS file systems enable you to declare striped groups within each file system. Also see the glossary entry for round robin.
- Sun SAM-FS** The Sun Storage and Archive Manager File System. The Sun SAM-FS software controls the access to all files stored and all devices configured in the master configuration file (`mcf`).
- Sun SAM-QFS** The Sun SAM-QFS software combines the Sun Storage and Archive Manager with the Sun QFS file system. Sun SAM-QFS offers a high-speed, standard UNIX file system interface to users and administrators in conjunction with the storage and archive management utilities. It uses many of the commands available in the Sun SAM-FS command set as well as standard UNIX file system commands.

<b>Sun SAM-Remote client</b>	A Sun SAM-Remote client is a Sun SAM-FS or Sun SAM-QFS system that establishes a Sun SAM-Remote client daemon that contains a number of pseudodevices. It might or might not have its own library devices. The client depends on a Sun SAM-Remote server for archive media for one or more archive copies.
<b>Sun SAM-Remote server</b>	The Sun SAM-Remote server is both a full-capacity Sun SAM-FS or Sun SAM-QFS storage management server and a Sun SAM-Remote server daemon that defines libraries to be shared among Sun SAM-Remote clients.
<b>superblock</b>	A data structure in the file system that defines the basic parameters of the file system. It is written to all partitions in the storage family set and identifies the partition's membership in the set.



## T

<b>tar</b>	Tape archive. A standard file/data recording format used by the Sun SAM-FS and Sun SAM-QFS software for archive images.
<b>TCP/IP</b>	Transmission Control Protocol/Internet Protocol. The internet protocols responsible for host-to-host addressing and routing, packet delivery (IP), and reliable delivery of data between application points (TCP).
<b>thresholds</b>	A mechanism for defining the desirable available storage window for online storage. Thresholds set the storage goals for the releaser. Also see disk space thresholds.
<b>timer</b>	Quota software that keeps track of the time elapsed between a user reaching a soft limit and a hard limit being imposed on the user.



## V

<b>volume</b>	A named area on a cartridge for sharing data. A cartridge has one or more volumes. Double-sided cartridges have two volumes, one on each side.
<b>volume overflow</b>	A capability that enables the system to span a single file over multiple volumes. Volume overflow is useful for sites using very large files that exceed the capacity of their individual cartridges.

**VSN** Volume serial name. If you are archiving to removable media cartridges, the VSN is a logical identifier for magnetic tape and optical disk that is written in the volume label. If you are archiving to disk cache, this is the unique name for the disk archive set.

---

## W

**WORM** Write once read many. A storage classification for media that can be written only once but read many times.



# Index

---

## SYMBOLS

- .cshrc file, 28, 73
- .inodes file, 47
- .login file, 28, 73
- .profile file, 28, 73
- /dev/dsk entry, 77
- /dev/rdsd entry, 78
- /dev/samst directory, 4
- /etc/dfs/dfstab file, 45, 105
- /etc/fs/samfs directory, 4
- /etc/group file, 66
- /etc/name\_to\_major file, 8
- /etc/name\_to\_sysnum file, 8, 9, 27, 72
- /etc/opt/SUNWsamfs directory, 4
- /etc/opt/SUNWsamfs/archiver.cmd file, 7, 101
- /etc/opt/SUNWsamfs/defaults.conf file, 8, 65
- /etc/opt/SUNWsamfs/inquiry.conf file, 5
- /etc/opt/SUNWsamfs/LICENSE.4.0 file, 7, 23, 59, 119
- /etc/opt/SUNWsamfs/mcf file, 8, 29, 59, 76, 120
- /etc/opt/SUNWsamfs/preview.cmd file, 8
- /etc/opt/SUNWsamfs/recycler.cmd file, 7
- /etc/opt/SUNWsamfs/releaser.cmd file, 7
- /etc/opt/SUNWsamfs/samfs.cmd file, 7, 40, 91
- /etc/vfstab file, 41, 56, 60, 81, 91, 92, 117, 121
- /kernel/drv/samst file, 5
- /kernel/drv/samst.conf file, 5, 70
- /kernel/drv/st.conf file, 70
- /kernel/ds/samfs file, 6
- /kernel/fs/sparcv9/samfs file, 6
- /kernel/sys/samsys file, 6
- /kernel/sys/sparcv9/samsys file, 6
- /opt/SUNWsamfs/bin directory, 4
- /opt/SUNWsamfs/client directory, 4
- /opt/SUNWsamfs/doc directory, 5
- /opt/SUNWsamfs/doc/README, 124
- /opt/SUNWsamfs/doc/README file, 2, 17, 26, 52, 64, 112
- /opt/SUNWsamfs/examples directory, 4
- /opt/SUNWsamfs/examples/defaults.conf file, 90
- /opt/SUNWsamfs/include directory, 4
- /opt/SUNWsamfs/jre directory, 4
- /opt/SUNWsamfs/lib directory, 4
- /opt/SUNWsamfs/man directory, 5
- /opt/SUNWsamfs/sbin directory, 5
- /var/adm/messages file, 82
- /var/opt/SUNWsamfs directory, 4

## A

- Additional Parameters field
  - Sun QFS, 31
  - Sun SAM-FS and Sun SAM-QFS, 78
- Administrator
  - commands, 65
  - group, 65
- API applications, 62, 124
- Archiver defaults, 101
- archiver.cmd file, 7, 101

Automated libraries, attaching, 19

## B

Backing up metadata, 48

Bourne shell, 28, 73

## C

C shell, 28, 73

CHANGES file, 2

Commands

dev\_down.sh(4), 83

format(1M), 32, 80

fsck(1M), 41, 92

groupadd(1M), 66

mount(1M), 40, 43, 62, 94, 107, 123

odlabel(1M), 100

pkgadd(1M), 2, 26, 52, 58, 64, 66, 112, 118

pkginfo(1M), 57, 117

pkgrm(1M), 57, 117

qfsdump(1M), 47, 49

qfsrestore(1M), 47

samfsdump(1M), 108, 113

samfsrestore(1M), 108

samload(1M), 97, 99

sammkfs(1M), 42, 93

set\_admin.sh(1M), 65

share(1M), 45, 105

showrev(1M), 17

syslog(3) interface, 74

tplabel, 100

ufsdump(1M), 47, 108

umount(1M), 56, 116

Configuration

adding administrator group, 65

devices, 19

files, see Files

Sun QFS, 29, 32

Sun SAM-FS and Sun SAM-QFS, 76, 79

system logging, 74

## D

defaults.conf file, 8, 65

dev\_down.sh(4) command, 83

Device State field

Sun QFS, 31

Sun SAM-FS and Sun SAM-QFS, 78

Devices

adding, 67

configuration, 19, 96, 97, 98

gXXX, 30

ma, 30

md, 30, 81

metadata, 30

mm, 30

mr, 30

ms, 81

round robin, 30

setting targets, 70

striped, 30

Sun QFS, 30

Sun SAM-FS, 67

Sun SAM-QFS, 67

supported, 18

dfstab file, 45, 105

Directories

/dev/samst, 4

/etc/fs/samfs, 4

/etc/opt/SUNWsamfs, 4

/opt/SUNWsamfs/bin, 4

/opt/SUNWsamfs/client, 4

/opt/SUNWsamfs/doc, 5

/opt/SUNWsamfs/examples, 4

/opt/SUNWsamfs/include, 4

/opt/SUNWsamfs/jre, 4

/opt/SUNWsamfs/lib, 4

/opt/SUNWsamfs/man, 5

/opt/SUNWsamfs/sbin, 5

/var/opt/SUNWsamfs, 4

created during installation, 4

Disk cache

Sun QFS configuration examples, 32

Sun SAM-FS and Sun SAM-QFS configuration  
examples, 80

Disk space needs, 15

Dump files, 47, 108, 113

## E

Equipment Identifier field

- Sun QFS, 30
- Sun SAM-FS and Sun SAM-QFS, 77

Equipment Ordinal field

- Sun QFS, 30
- Sun SAM-FS and Sun SAM-QFS, 77

Equipment Type field

- Sun QFS, 30
- Sun SAM-FS and Sun SAM-QFS, 77

## F

Family Set field

- Sun QFS, 31
- Sun SAM-FS and Sun SAM-QFS, 78

## Files

- .cshrc, 28, 73
- .inodes, 47
- .login, 28, 73
- .profile, 28, 73
- /etc/dfs/dfstab, 45, 105
- /etc/group, 66
- /etc/name\_to\_major, 8
- /etc/name\_to\_sysnum, 8, 9, 27, 72
- /etc/opt/SUNWsamfs/archiver.cmd, 7, 101
- /etc/opt/SUNWsamfs/defaults.conf, 8
- /etc/opt/SUNWsamfs/defaults.conf/, 65
- /etc/opt/SUNWsamfs/inquiry.conf, 5
- /etc/opt/SUNWsamfs/LICENSE.4.0, 7, 23, 59, 119
- /etc/opt/SUNWsamfs/mcf, 8, 29, 59, 76, 120
- /etc/opt/SUNWsamfs/preview.cmd, 8
- /etc/opt/SUNWsamfs/recycler.cmd, 7
- /etc/opt/SUNWsamfs/releaser.cmd, 7
- /etc/opt/SUNWsamfs/samfs.cmd, 7, 40, 91
- /etc/vfstab, 41, 56, 60, 81, 91, 92, 117, 121
- /kernel/drv/samst, 5
- /kernel/drv/samst.conf, 5, 70
- /kernel/drv/st.conf, 70
- /kernel/ds/samfs, 6
- /kernel/fs/sparcv9/samfs, 6
- /kernel/sys/samsys, 6
- /kernel/sys/sparcv9/samsys, 6
- /opt/SUNWsamfs/doc/README, 2, 17, 26, 52, 64, 112, 124
- /opt/SUNWsamfs/examples/defaults.conf, 90
- /var/adm/messages, 82

CHANGES, 2

- installation-created files, 5
- modified system files, 8
- site-created files, 6

format(1M) command, 32, 80

fsck(1M) command, 41, 92

## G

group file, 66

groupadd(1M) command, 66

gXXX devices, 30

## H

Hardware requirements, 19

## I

Inode files, 47

inquiry.conf file, 5

Installation

- files, see Files
- requirements, 1, 11
- Sun QFS, 25, 51
- Sun SAM-FS, 63, 111
- Sun SAM-QFS, 63, 111

## J

Java Runtime Environment (JRE), 24

JBOD devices, 1

## K

Korn shell, 28, 73

## L

LICENSE.4.0 file, 7, 23, 59, 119

Licensing

- general information, xiii, 23
- installing keys, 29, 58, 73, 119

Logfiles, 74  
LUN numbers, 70

## M

ma devices, 30  
MANPATH variable, 28, 72  
mcf file, 8, 29, 32, 59, 76, 120  
md devices, 30, 81  
Message logging, 74  
messages file, 82  
Metadata  
    backing up, 48  
    devices, 30  
    dump files, 47, 108  
    overview, 47  
mm devices, 30  
Mount  
    parameters, 41, 92  
    point, 41, 91, 92  
mount(1M) command, 40, 43, 62, 94, 107, 123  
mr devices, 30  
ms devices, 81

## N

name\_to\_major file, 8  
name\_to\_sysnum file, 8, 9, 27, 72  
NFS sharing file systems, 45, 46, 105

## O

odlabel(1M) command, 100

## P

Packages  
    SUNWqfs, 27, 51  
    SUNWsamfs, 2, 66  
Patches for Solaris, 17  
PATH variable, 28, 72  
pkgadd(1M) command, 2, 26, 52, 58, 64, 66, 112, 118  
pkginfo(1M) command, 57, 117

pkgrm(1M) command, 57, 117  
preview.cmd file, 8

## Q

qfsdump(1M) command, 47, 49  
qfsrestore(1M) command, 47

## R

RAID devices, 1  
README file, 2, 17, 26, 52, 64, 112, 124  
recycler.cmd file, 7  
Reinitializing the mcf file, 32  
Release  
    numbering, 2  
    packages, 1, 51, 64  
releaser.cmd file, 7  
Remote systems using NFS, 105  
Round-robin devices, 30

## S

samfs file, 6  
samfs file system type, 41, 48, 92  
samfs.cmd file, 7, 40, 91  
samfsdump(1M) command, 108, 113  
samfsrestore(1M) command, 108  
samload(1M) command, 97, 99  
sammkfs(1M) command, 42, 93  
samst file, 5, 77  
samst.conf file, 5, 70  
samsys file, 6  
set\_admin.sh(1M) command, 65  
share(1M) command, 45, 105  
showrev(1M) command, 17  
Solaris patches, 17  
st.conf file, 67, 70  
stripe=1 mount parameter, 41  
Striped devices, 30  
Sun QFS  
    configuration, 29

- configuration examples, 32
- devices, 30
- initial installation, 25
- upgrade, 51
- Sun SAM-FS
  - configuration, 76
  - installation, 63
- Sun SAM-QFS
  - configuration, 76
  - installation, 63
- SUNWqfs package, 27, 57
- SUNWsamfs package, 2, 66
- Superblocks, 61, 123
- syslog(3) interface, 74
- syslog.conf file, 74
- System logging, 74

## **T**

- tplabel(1M) command, 100

## **U**

- ufsdump(1M) command, 47, 108
- umount(1M) command, 56, 116

## **V**

- vfstab file, 41, 56, 60, 81, 91, 92, 117, 121

