



# SunPCi™ III 3.0 User's Guide

---

Sun Microsystems, Inc.  
4150 Network Circle  
Santa Clara, CA 95054 U.S.A.  
650-960-1300

Part No. 817-0357-10  
February 2003, Revision A

Send comments about this document to: [docfeedback@sun.com](mailto:docfeedback@sun.com)

Copyright 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Sun Microsystems, Inc. has intellectual property rights relating to technology embodied in the product that is described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the U.S. patents listed at <http://www.sun.com/patents> and one or more additional patents or pending patent applications in the U.S. and in other countries.

This document and the product to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of the product or of this document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, AnswerBook2, docs.sun.com, SunPCi, OpenBoot, Sun Blade, Sun Enterprise, SunSolve, Access1, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries.

All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

---

Copyright 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, Etats-Unis. Tous droits réservés.

Sun Microsystems, Inc. a les droits de propriété intellectuelle relatant à la technologie incorporée dans le produit qui est décrit dans ce document. En particulier, et sans la limitation, ces droits de propriété intellectuelle peuvent inclure un ou plus des brevets américains énumérés à <http://www.sun.com/patents> et un ou les brevets plus supplémentaires ou les applications de brevet en attente dans les Etats-Unis et dans les autres pays.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a.

Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, AnswerBook2, docs.sun.com, SunPCi, OpenBoot, Sun Blade, Sun Enterprise, SunSolve, Access1, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.

Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciées de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE "EN L'ÉTAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISÉE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFAÇON.



# Safety Agency Compliance Statements

Read this section before beginning any procedure. The following text provides safety precautions to follow when installing a Sun Microsystems product.

## Safety Precautions

For your protection, observe the following safety precautions when setting up your equipment:

- Follow all cautions and instructions marked on the equipment.
- Ensure that the voltage and frequency of your power source match the voltage and frequency inscribed on the equipment's electrical rating label.
- Never push objects of any kind through openings in the equipment. Dangerous voltages may be present. Conductive foreign objects could produce a short circuit that could cause fire, electric shock, or damage to your equipment.

## Symbols

The following symbols may appear in this book:



---

**Caution** – There is a risk of personal injury and equipment damage. Follow the instructions.

---



---

**Caution** – Hot surface. Avoid contact. Surfaces are hot and may cause personal injury if touched.

---



---

**Caution** – Hazardous voltages are present. To reduce the risk of electric shock and danger to personal health, follow the instructions.

---



---

**On** – Applies AC power to the system.

---

Depending on the type of power switch your device has, one of the following symbols may be used:



---

**Off** – Removes AC power from the system.

---



---

**Standby** – The On/Standby switch is in the standby position.

---

## Modifications to Equipment

Do not make mechanical or electrical modifications to the equipment. Sun Microsystems is not responsible for regulatory compliance of a modified Sun product.

## Placement of a Sun Product



---

**Caution** – Do not block or cover the openings of your Sun product. Never place a Sun product near a radiator or heat register. Failure to follow these guidelines can cause overheating and affect the reliability of your Sun product.

---



---

**Caution** – The workplace-dependent noise level defined in DIN 45 635 Part 1000 must be 70Db(A) or less.

---

## SELV Compliance

Safety status of I/O connections comply to SELV requirements.

## Power Cord Connection



---

**Caution** – Sun products are designed to work with single-phase power systems having a grounded neutral conductor. To reduce the risk of electric shock, do not plug Sun products into any other type of power system. Contact your facilities manager or a qualified electrician if you are not sure what type of power is supplied to your building.

---



---

**Caution** – Not all power cords have the same current ratings. Household extension cords do not have overload protection and are not

meant for use with computer systems. Do not use household extension cords with your Sun product.

---



**Caution** – Your Sun product is shipped with a grounding type (three-wire) power cord. To reduce the risk of electric shock, always plug the cord into a grounded power outlet.

---

The following caution applies only to devices with a Standby power switch:



**Caution** – The power switch of this product functions as a standby type device only. The power cord serves as the primary disconnect device for the system. Be sure to plug the power cord into a grounded power outlet that is nearby the system and is readily accessible. Do not connect the power cord when the power supply has been removed from the system chassis.

---

## Lithium Battery



**Caution** – On Sun CPU boards, there is a lithium battery molded into the real-time clock, SGS No. MK48T59Y, MK48TXXB-XX, MK48T18-XXXPCZ, M48T59W-XXXPCZ, or MK48T08. Batteries are not customer replaceable parts. They may explode if mishandled. Do not dispose of the battery in fire. Do not disassemble it or attempt to recharge it.

---

## Battery Pack



**Caution** – There is a sealed lead acid battery in Product Name units. Portable Energy Products No. TLC02V50. There is danger of explosion if the battery pack is mishandled or incorrectly replaced. Replace only with the same type of Sun Microsystems battery pack. Do not disassemble it or attempt to recharge it

outside the system. Do not dispose of the battery in fire. Dispose of the battery properly in accordance with local regulations.

---

## System Unit Cover

You must remove the cover of your Sun computer system unit to add cards, memory, or internal storage devices. Be sure to replace the top cover before powering on your computer system.



**Caution** – Do not operate Sun products without the top cover in place. Failure to take this precaution may result in personal injury and system damage.

---

## Laser Compliance Notice

Sun products that use laser technology comply with Class 1 laser requirements.

Class 1 Laser Product  
Luokan 1 Laserlaite  
Klasse 1 Laser Apparat  
Laser Klasse 1


## CD-ROM



**Caution** – Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

---

## GOST-R Certification Mark

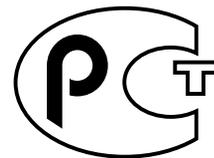

## Conformité aux normes de sécurité

Lisez attentivement la section suivante avant de commencer la procédure. Le document ci-dessous présente les consignes de sécurité à respecter au cours de l'installation d'un produit Sun Microsystems.

### Mesures de sécurité

Pour votre protection, observez les mesures de sécurité suivantes lors de l'installation de l'équipement:

- Observez tous les avertissements et consignes indiqués sur l'équipement.
- Assurez-vous que la tension et la fréquence de votre source d'alimentation électrique correspondent à la tension et à la fréquence indiquées sur l'étiquette de la tension électrique nominale du matériel.
- N'insérez en aucun cas un objet quelconque dans les orifices de l'équipement. Des tensions potentiellement dangereuses risquent d'être présentes dans l'équipement. Tout objet étranger conducteur risque de produire un court-circuit pouvant présenter un risque d'incendie ou de décharge électrique, ou susceptible d'endommager le matériel.

### Symboles

Les symboles suivants peuvent figurer dans cet ouvrage:



**Attention** – Vous risquez d'endommager le matériel ou de vous blesser. Observez les consignes indiquées.



**Attention** – Surface brûlante. Evitez tout contact. Ces surfaces sont brûlantes. Vous risquez de vous blesser si vous les touchez.



**Attention** – Tensions dangereuses. Pour réduire les risques de décharge électrique et de danger physique, observez les consignes indiquées.



**MARCHE** – Met le système sous tension alternative.

Selon le type d'interrupteur marche/arrêt dont votre appareil est équipé, l'un des symboles suivants sera utilisé:



**ARRET** – Met le système hors tension alternative.



**VEILLEUSE** – L'interrupteur Marche/Veille est sur la position de veille.

### Modifications de l'équipement

N'apportez aucune modification mécanique ou électrique à l'équipement. Sun Microsystems décline toute responsabilité quant à la non-conformité éventuelle d'un produit Sun modifié.

### Positionnement d'un produit Sun



**Attention** – N'obstruez ni ne recouvrez les orifices de votre produit Sun. N'installez jamais un produit Sun près d'un radiateur ou d'une source de chaleur. Si vous ne respectez pas ces consignes, votre produit Sun risque de surchauffer et son fonctionnement en sera altéré.



**Attention** – Le niveau de bruit inhérent à l'environnement de travail, tel qu'il est défini par la norme DIN 45 635 - section 1000, doit être inférieur ou égal à 70Db(A).

### Conformité aux normes SELV

Le niveau de sécurité des connexions E/S est conforme aux normes SELV.

### Raccordement à la source d'alimentation électrique



**Attention** – Les produits Sun sont conçus pour fonctionner avec des systèmes d'alimentation électrique monophasés avec prise de terre. Pour réduire les risques de décharge électrique, ne branchez jamais les produits Sun sur une source d'alimentation d'un autre type. Contactez le gérant de votre

bâtiment ou un électricien agréé si vous avez le moindre doute quant au type d'alimentation fourni dans votre bâtiment.

---



**Attention** – Tous les cordons d'alimentation n'ont pas la même intensité nominale. Les cordons d'alimentation à usage domestique ne sont pas protégés contre les surtensions et ne sont pas conçus pour être utilisés avec des ordinateurs. N'utilisez jamais de cordon d'alimentation à usage domestique avec les produits Sun.

---



**Attention** – Votre produit Sun est livré avec un cordon d'alimentation avec raccord à la terre (triphase). Pour réduire les risques de décharge électrique, branchez toujours ce cordon sur une source d'alimentation mise à la terre.

---

L'avertissement suivant s'applique uniquement aux systèmes équipés d'un interrupteur Veille :

---



**Attention** – L'interrupteur d'alimentation de ce produit fonctionne uniquement comme un dispositif de mise en veille. Le cordon d'alimentation constitue le moyen principal de déconnexion de l'alimentation pour le système. Assurez-vous de le brancher dans une prise d'alimentation mise à la terre près du système et facile d'accès. Ne le branchez pas lorsque l'alimentation électrique ne se trouve pas dans le châssis du système.

---

## Pile au lithium

---



**Attention** – Sur les cartes UC Sun, une batterie au lithium a été moulée dans l'horloge temps réel, de type SGS n° MK48T59Y, MK48TXXB-XX, MK48T18-XXXPCZ, M48T59W-XXXPCZ ou MK48T08. Cette batterie ne doit pas être remplacée par le client. Elle risque d'exploser en cas de

mauvaise manipulation. Ne la jetez pas au feu. Ne la démontez pas et ne tentez pas de la recharger.

---

## Bloc-batterie

---



**Attention** – Les unités Product Name contiennent une batterie étanche au plomb. Produits énergétiques portatifs n° TLC02V50. Il existe un risque d'explosion si ce bloc batterie est manipulé ou installé de façon incorrecte. Ne le remplacez que par un bloc batterie Sun Microsystems du même type. Ne le démontez pas et n'essayez pas de le recharger hors du système. Ne le jetez pas au feu. Mettez-le au rebut conformément aux réglementations locales en vigueur.

---

## Couvercle du système

Pour ajouter des cartes, de la mémoire ou des unités de stockage internes, vous devez démonter le couvercle de votre système Sun. N'oubliez pas de le remettre en place avant de mettre le système sous tension.

---



**Attention** – Ne travaillez jamais avec un produit Sun dont le couvercle n'est pas installé. Si vous ne respectez pas cette consigne, vous risquez de vous blesser ou d'endommager le système.

---

## Avis de conformité des appareils laser

Les produits Sun faisant appel à la technologie laser sont conformes aux normes de sécurité des appareils laser de classe 1.


Class 1 Laser Product  
Luokan 1 Laserlaitte  
Klasse 1 Laser Apparat  
Laser Klasse 1

## CD-ROM



**Attention** – L'utilisation de contrôles et de réglages ou l'application de procédures autres que ceux spécifiés dans le présent document peuvent entraîner une exposition à des radiations dangereuses.

## Notice de qualité GOST-R

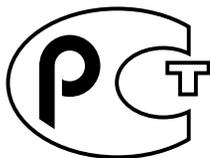

## Einhaltung sicherheitsbehördlicher Vorschriften

Lesen Sie diesen Abschnitt sorgfältig durch, bevor Sie mit dem Arbeitsablauf beginnen. Der folgende Text beschreibt Sicherheitsmaßnahmen, die bei der Installation von Sun-Produkten zu beachten sind.

### Sicherheitsmaßnahmen

Zu Ihrem eigenen Schutz sollten Sie die folgenden Sicherheitsmaßnahmen bei der Installation befolgen :

- Befolgen Sie alle auf die Geräte aufgedruckten Anweisungen und Warnhinweise.
- Beachten Sie die Geräteaufschrift, um sicherzustellen, daß Netzspannung und -frequenz mit der Gerätespannung und -frequenz übereinstimmen.
- Führen Sie niemals Gegenstände in die Geräteöffnungen ein. Es könnten elektrische Spannungsfelder vorhanden sein. Leitende Fremdkörper können Kurzschlüsse, Feuer und elektrische Schläge verursachen oder Ihr Gerät beschädigen.

### Symbole

Die folgenden Symbole werden in diesem Handbuch verwendet:



**Achtung** – Es besteht die Gefahr der Verletzung und der Beschädigung des Geräts. Befolgen Sie die Anweisungen.



**Achtung** – Heiße Oberfläche. Vermeiden Sie jede Berührung. Diese Oberflächen sind sehr heiß und können Verbrennungen verursachen.



**Achtung** – Elektrisches Spannungsfeld vorhanden. Befolgen Sie die Anweisungen, um elektrische Schläge und Verletzungen zu vermeiden.



**Ein** – Das System wird mit Wechselstrom versorgt.

Abhängig von der Art des Stromschalters Ihres Gerätes wird eventuell eines der folgenden Symbole verwendet:



**Aus** – Das System wird nicht mehr mit Wechselstrom versorgt.



**Wartezustand** – (Der Ein-/Standby-Schalter befindet sich in der Standby-Position.

### Modifikationen des Geräts

Nehmen Sie keine elektrischen oder mechanischen Gerätemodifikationen vor. Sun Microsystems ist für die Einhaltung der Sicherheitsvorschriften von modifizierten Sun-Produkten nicht haftbar.

### Aufstellung von Sun-Geräten



**Achtung** – Geräteöffnungen Ihres Sun-Produkts dürfen nicht blockiert oder abgedeckt werden. Sun-Geräte sollten niemals in der Nähe von Heizkörpern oder Heißluftklappen aufgestellt werden. Nichtbeachtung dieser Richtlinien können

Überhitzung verursachen und die Zuverlässigkeit Ihres Sun-Geräts beeinträchtigen.

---



**Achtung** – Der Geräuschpegel, definiert nach DIN 45 635 Part 1000, darf am Arbeitsplatz 70dB(A) nicht überschreiten.

---

## SELV-Richtlinien

Alle Ein-/Ausgänge erfüllen die SELV-Anforderungen.

## Netzanschlußkabel



**Achtung** – Sun-Geräte benötigen ein einphasiges Stromversorgungssystem mit eingebautem Erdleiter. Schließen Sie Sun-Geräte nie an ein anderes Stromversorgungssystem an, um elektrische Schläge zu vermeiden. Falls Sie die Spezifikationen der Gebäudestromversorgung nicht kennen, sollten Sie den Gebäudeverwalter oder einen qualifizierten Elektriker konsultieren.

---



**Achtung** – Nicht alle Netzanschlußkabel besitzen die gleiche Stromleitung. Normale Verlängerungskabel besitzen keinen Überspannungsschutz und sind nicht für den Gebrauch mit Computersystemen geeignet. Benutzen Sie keine Haushaltverlängerungskabel für Sun-Geräte.

---



**Achtung** – Ihr Sun-Gerät wurde mit einem geerdeten (dreiadrigen) Netzanschlußkabel geliefert. Stecken Sie dieses Kabel immer nur in eine geerdete Netzsteckdose, um Kurzschlüsse zu vermeiden.

---

Der folgende Hinweis bezieht sich nur auf Geräte mit Standby-Stromschalter:



**Achtung** – Der Stromschalter dieses Produkts funktioniert nur als Standby-Gerät. Das Netzanschlußkabel dient als

Hauptabschaltgerät für das System. Stellen Sie sicher, daß Sie das Netzanschlußkabel in den geerdeten Stromausgang in der Nähe des Systems einstecken. Schließen Sie das Netzanschlußkabel nicht an, wenn die Stromzufuhr vom Systemgehäuse entfernt wurde.

---

## Lithium-Batterie



**Achtung** – CPU-Karten von Sun verfügen über eine Echtzeituhr mit integrierter Lithiumbatterie, Teile-Nr. MK48T59Y, MK48TXXB-XX, MK48T18-XXXPCZ, M48T59W-XXXPCZ oder MK48T08. Batterien sollten nicht vom Kunden ausgetauscht werden. Sie können bei falscher Handhabung explodieren. Entsorgen Sie die Batterien nicht im Feuer. Entfernen Sie sie nicht und versuchen Sie auch nicht, sie wiederaufzuladen.

---

## Batterien



**Achtung** – Die Geräte Product Name enthalten auslaufsichere Bleiakkumulatoren, Produkt-Nr. TLC02V50 für portable Stromversorgung. Wenn die Batterien nicht richtig gehandhabt oder ausgetauscht werden, besteht Explosionsgefahr. Tauschen Sie Batterien nur gegen Batterien gleichen Typs von Sun Microsystems aus. Versuchen Sie nicht, die Batterien zu entfernen oder außerhalb des Geräts wiederaufzuladen. Entsorgen Sie die Batterien nicht im Feuer. Entsorgen Sie die Batterien ordnungsgemäß entsprechend den vor Ort geltenden Vorschriften.

---

## Abdeckung des Systems

Sie müssen die Abdeckung des Sun-Computersystems entfernen, um Karten, Speicher oder interne Speichergeräte hinzuzufügen. Stellen Sie sicher, daß Sie die Abdeckung wieder einsetzen, bevor Sie den Computer einschalten.



---

**Achtung** – Sun-Geräte dürfen nicht ohne Abdeckung in Gebrauch genommen werden. Nichtbeachtung dieses Warnhinweises kann Verletzungen oder Systembeschädigungen zur Folge haben.

---

## Laserrichtlinien

Alle Sun-Produkte, die Lasertechnologie nutzen, erfüllen die Laserrichtlinien der Klasse 1.

Class 1 Laser Product  
Luokan 1 Laserlaite  
Klasse 1 Laser Apparat  
Laser Klasse 1

## CD-ROM




---

**Achtung** – Die Verwendung von anderen Steuerungen und Einstellungen oder die Durchführung von Arbeitsabläufen, die von den hier beschriebenen abweichen, können gefährliche Strahlungen zur Folge haben.

---

## Verbandsmarke GOST-R

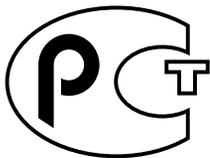

## Normativas de seguridad

Lea esta sección antes de llevar a cabo cualquier procedimiento. El texto que aparece a continuación explica las medidas de seguridad que deben tomarse durante la instalación de un producto Sun Microsystems.

## Medidas de seguridad

Por su propia seguridad, tome las medidas de seguridad siguientes al instalar el equipo::

- Siga todas los avisos y las instrucciones que aparecen impresas en el equipo.
- Cerciórese de que el voltaje y la frecuencia de la fuente de alimentación coinciden con el voltaje y frecuencia indicados en la etiqueta de clasificación eléctrica del equipo.
- No introduzca objetos de ningún tipo a través de las aberturas del equipo. Dentro pueden darse voltajes peligrosos. Los objetos conductores extraños podrían producir un cortocircuito y, en consecuencia, fuego, descargas eléctricas o daños en el equipo.

## Símbolos

Los símbolos siguientes pueden aparecer en este manual:



---

**Precaución** – Existe el riesgo de que se produzcan lesiones personales y daños en el equipo. Siga las instrucciones.

---



---

**Precaución** – Superficie caliente. Evite todo contacto. Las superficies están calientes y pueden causar lesiones personales si se tocan.

---



---

**Precaución** – Riesgo de voltajes peligrosos. Para reducir el riesgo de descargas eléctricas y de daños en la salud de las personas, siga las instrucciones.

---



---

**Encendido** – Proporciona alimentación de CA al sistema.

---

Según el tipo de interruptor de alimentación del que disponga el dispositivo, se utilizará uno de los símbolos siguientes:



---

**Apagado** – Corta la alimentación de CA del sistema.

---



---

**Espera** – El interruptor de encendido/espera está en la posición de espera.

---

## Modificaciones en el equipo

No realice modificaciones mecánicas ni eléctricas en el equipo. Sun Microsystems no se hará responsable del cumplimiento de las normas en el caso de un producto Sun que ha sido modificado.

## Lugar y colocación de un producto Sun



---

**Precaución** – No obstruya ni tape las rejillas del producto Sun. Nunca coloque un producto Sun cerca de radiadores o fuentes de calor. El incumplimiento de estas directrices puede causar un calentamiento y repercutir en la fiabilidad del producto Sun.

---



---

**Precaución** – El nivel de ruido en el lugar de trabajo, definido en el apartado 1000 de DIN 45 635, debe ser 70 Db (A) o inferior.

---

## Cumplimiento de la normativa SELV

Las condiciones de seguridad de las conexiones de E/S cumplen las normas SELV.

## Conexión del cable de alimentación



---

**Precaución** – Los productos Sun han sido diseñados para funcionar con sistemas de alimentación monofásicos que tengan un conductor neutral a tierra. Para reducir el riesgo de descargas eléctricas, no enchufe ningún producto Sun a otro tipo de sistema de alimentación. Si no está seguro del tipo de alimentación del que se dispone en el edificio, póngase en contacto con el encargado de las instalaciones o con un electricista cualificado.

---



---

**Precaución** – No todos los cables de alimentación tienen la misma clasificación de corriente. Los cables de prolongación



---

domésticos no ofrecen protección frente a sobrecargas y no están diseñados para ser utilizados con sistemas informáticos. No utilice cables de prolongación domésticos con el producto Sun.

---

---

**Precaución** – El producto Sun se suministra con un cable de alimentación (de tres hilos) con conexión a tierra. Para reducir el riesgo de descargas eléctricas, enchufe siempre el cable a una toma de corriente con conexión a tierra.

---

La precaución siguiente sólo se aplica a aquellos dispositivos que posean un interruptor de alimentación de espera:



---

**Precaución** – El interruptor de alimentación del producto funciona como dispositivo de espera solamente. El cable de alimentación actúa como el dispositivo de desconexión primario del sistema. Cerciérese de enchufar el cable de alimentación a una toma de corriente con conexión a tierra situada cerca del sistema y a la que se pueda acceder con facilidad. No conecte el cable de alimentación cuando se haya quitado la fuente de alimentación del bastidor del sistema.

---

## Batería de litio



---

**Precaución** – En la placa CPU de los productos Sun, hay una batería de litio incorporada en el reloj en tiempo real, SGS núm. MK48T59Y, MK48TXXB-XX, MK48T18-XXXPCZ, M48T59W-XXXPCZ o MK48T08. Los usuarios no deben cambiar las baterías. Podrían estallar si no se utilizan adecuadamente. No arroje la batería al fuego. No la desmonte ni intente recargarla.

---

## Paquete de baterías



---

**Precaución** – Las unidades Product Name contienen una batería de plomo sellada, Productos eléctricos portátiles núm.

---

TLC02V50. Existe el riesgo de explosión si el paquete de baterías no se utiliza correctamente o se sustituye de forma incorrecta. Sustitúyalo sólo por el mismo tipo de paquete de baterías de Sun Microsystems. No lo desmote o intente recargarlo fuera del sistema. No arroje la batería al fuego. Deshágase de las baterías correctamente siguiendo las normas locales vigentes.

---

## Cubierta de la unidad del sistema

Debe retirar la cubierta de la unidad del sistema informático Sun para añadir tarjetas, memoria o dispositivos de almacenamiento internos. Asegúrese de volver a colocar la cubierta superior antes de encender el equipo.



**Precaución** – No ponga en funcionamiento los productos Sun sin que la cubierta superior se encuentre instalada. De lo contrario, podrían producirse lesiones personales o daños en el sistema.

---

## Aviso de cumplimiento de las normas para láser

Los productos Sun que utilizan tecnología láser cumplen los requisitos para láser de Clase 1.

Class 1 Laser Product  
Luokan 1 Laserlaite  
Klasse 1 Laser Apparat  
Laser Klasse 1

## CD-ROM



**Precaución** – La utilización de controles, ajustes o la realización de los procedimientos distintos a los especificados en el presente documento podrían provocar la exposición a radiaciones peligrosas.

---

## GOST-R Certification Mark



## Nordic Lithium Battery Cautions

### Norge



**ADVARSEL** – Litiumbatteri –  
Eksplosjonsfare. Ved utskifting benyttes kun  
batteri som anbefalt av apparatfabrikanten.  
Brukt batteri returneres apparatleverandøren.

---

### Sverige



**VARNING** – Explosionsfara vid felaktigt  
batteribyte. Använd samma batterityp eller en  
ekvivalent typ som rekommenderas av  
apparattillverkaren. Kassera använt batteri  
enligt fabrikantens instruktion.

---

### Danmark



**ADVARSEL!** – Litiumbatteri –  
Eksplosionsfare ved fejlagtig håndtering.  
Udskiftning må kun ske med batteri af samme  
fabrikat og type. Levér det brugte batteri  
tilbage til leverandøren.

---

### Suomi



**VAROITUS** – Paristo voi räjähtää, jos se on  
virheellisesti asennettu. Vaihda paristo  
ainoastaan laitevalmistajan suosittelemaan  
tyyppiin. Hävitä käytetty paristo valmistajan  
ohjeiden mukaisesti.

---



# Regulatory Compliance Statements

Your Sun product is marked to indicate its compliance class:

- Federal Communications Commission (FCC) — USA
- Industry Canada Equipment Standard for Digital Equipment (ICES-003) — Canada
- Voluntary Control Council for Interference (VCCI) — Japan
- Bureau of Standards Metrology and Inspection (BSMI) — Taiwan

Please read the appropriate section that corresponds to the marking on your Sun product before attempting to install the product.

## FCC Class A Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

**Shielded Cables:** Connections between the workstation and peripherals must be made using shielded cables to comply with FCC radio frequency emission limits. Networking connections can be made using unshielded twisted-pair (UTP) cables.

**Modifications:** Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

## FCC Class B Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

**Shielded Cables:** Connections between the workstation and peripherals must be made using shielded cables in order to maintain compliance with FCC radio frequency emission limits. Networking connections can be made using unshielded twisted pair (UTP) cables.

**Modifications:** Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

## ICES-003 Class A Notice - Avis NMB-003, Classe A

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

## ICES-003 Class B Notice - Avis NMB-003, Classe B

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### VCCI 基準について

#### クラス A VCCI 基準について

クラス A VCCI の表示があるワークステーションおよびオプション製品は、クラス A 情報技術装置です。これらの製品には、下記の項目が該当します。

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

#### クラス B VCCI 基準について

クラス B VCCI の表示  があるワークステーションおよびオプション製品は、クラス B 情報技術装置です。これらの製品には、下記の項目が該当します。

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づくクラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをしてください。

## BSMI Class A Notice

The following statement is applicable to products shipped to Taiwan and marked as Class A on the product compliance label.

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。





# Declaration of Conformity

Compliance Model Number: BLPN  
Product Name: SunPCi III (2134A, X2134A)

## EMC

### USA—FCC Class B

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference that may cause undesired operation.

### European Union

This equipment complies with the following requirements of the EMC Directive 89/336/EEC:

***As Telecommunication Network Equipment (TNE) in both Telecom Centers and Other Than Telecom Centers per (as applicable):***

EN300-386 V.1.3.1 (09-2001)	Required Limits:
EN55022/CISPR22	Class B
EN61000-3-2	Pass
EN61000-3-3	Pass
EN61000-4-2	6 kV (Direct), 8 kV (Air)
EN61000-4-3	3 V/m 80-1000 MHz, 10 V/m 800-960 MHz and 1400-2000 MHz
EN61000-4-4	1 kV AC and DC Power Lines, 0.5 kV Signal Lines,
EN61000-4-5	2 kV AC Line-Gnd, 1 kV AC Line-Line and Outdoor Signal Lines, 0.5 kV Indoor Signal Lines > 10m.
EN61000-4-6	3 V
EN61000-4-11	Pass

***As Information Technology Equipment (ITE) Class B per (as applicable):***

EN55022:1998/CISPR22:1997	Class B
EN55024:1998 Required Limits:	
EN61000-4-2	4 kV (Direct), 8 kV (Air)
EN61000-4-3	3 V/m
EN61000-4-4	1 kV AC Power Lines, 0.5 kV Signal and DC Power Lines
EN61000-4-5	1 kV AC Line-Line and Outdoor Signal Lines, 2 kV AC Line-Gnd, 0.5 kV DC Power Lines
EN61000-4-6	3 V
EN61000-4-8	1 A/m
EN61000-4-11	Pass
EN61000-3-2:1995 + A1, A2, A14	Pass
EN61000-3-3:1995	Pass

## Safety

***This equipment complies with the following requirements of the Low Voltage Directive 73/23/EEC:***

EC Type Examination Certificates:

EN60950, 2nd Edition, +A1 +A2 +A3 +A4 +A11:1998

EN60950:2000, 3rd Edition,

Evaluated to all CB Countries

UL 60950 3rd Edition: 2000, CSA C22.2 No 60950-00

TÜV Rheinland Certificate No.

CB Scheme Certificate No

File: \_\_\_\_\_ Vol. \_\_\_\_\_ Sec. \_\_\_\_\_

**Supplementary Information:** This product was tested and complies with all the requirements for the CE Mark.

/S/

/S/

---

Dennis P. Symanski                      DATE

Manager, Compliance Engineering

Sun Microsystems, Inc.

4150 Network Circle, MPK15-102

Santa Clara, CA 95054 USA

Tel: 650-786-3255

Fax: 650-786-3723

---

Pamela J. Dullaghan                      DATE

Quality Program Manager

Sun Microsystems Scotland, Limited

Springfield, Linlithgow

West Lothian, EH49 7LR

Scotland, United Kingdom

Tel: +44 1 506 672 395

Fax: +44 1 506 670 011

# Contents

---

**Preface xxxv**

**1. Introducing SunPCi III 3.0 Hardware and Software 1**

Supported Microsoft Windows Operating Systems 1

SunPCi III 3.0 Features 2

    From a PC User's Perspective 3

    From a Solaris User's Perspective 4

Supported Citrix MetaFrame Software 4

Getting Help for SunPCi III Software 5

    ▼ How to View Solaris Manual Pages 5

Getting Help for Microsoft Windows Software 5

Viewing the Documentation PDF Files 6

Removing Microsoft Windows Software 7

**2. Getting Started 9**

System Requirements 10

Configuring Multiple SunPCi III Cards 11

Starting and Stopping the SunPCi III Software 11

    ▼ How to Start the SunPCi III Software 11

    ▼ How to Stop the SunPCi III Software 12

▼ Shutting Down SunPCi III Software -- Option 1	12
▼ Shutting Down SunPCi III Software -- Option 2	12
Emulated Drives and SunPCi III Software	13
Creating an Emulated Hard Drive	13
▼ How to Create a New Emulated Drive	15
▼ How to Attach an Existing Emulated Drive as a C: or D: Drive	17
Growing an Existing Emulated Hard Drive	18
Microsoft Windows Service Packs	20
<b>3. Using Multiple SunPCi III Cards</b>	<b>21</b>
Before You Begin Configuration	22
Advanced SunPCi III Multiple Card Server Configuration	22
Configuring Multiple Cards With SunPCi III Software	22
Default .ini Configuration File	22
Naming .ini Files When Using Multiple Cards	23
▼ How to Create an .ini File Using the -n Option	24
Using Cards and Emulated Drives	25
▼ How to Identify Card Names	26
▼ How to Start a Specific .ini File	26
▼ How to Start a Specific Card	27
Starting Specific Disk Image Files	28
▼ How to Start a Specific Image and a Specific Card	28
▼ How to Specify Title Bar Text for Each Card Window	29
▼ How to Update the SunPCi III Card Configuration	29
Rebinding Images and Cards	30
Multiple Card Behavior	30
Networking With Multiple Cards	30
Using the Diskette Drive With Multiple Cards	30
Using the CD-ROM Drive With Multiple Cards	31

<b>4. Networking With SunPCi III Hardware and Software</b>	<b>33</b>
Networking With SunPCi III Hardware and Software	33
Setting Up Networking With SunPCi III Hardware and Software	35
▼ How to Set TCP/IP Properties	35
▼ How to Set Up Physical Ethernet Networking	36
▼ How to Set Up Virtual Ethernet Networking	36
<b>5. Using Windows XP Professional</b>	<b>39</b>
Installing Windows XP Professional	40
Installation Notes	40
▼ How to Perform a Custom Installation	41
▼ How to Reinstall Windows XP Professional	42
Upgrading to Windows XP Professional	43
Upgrade Notes	43
Upgrading Windows NT4 WS to Windows XP Professional	43
Before You Begin the Upgrade	44
▼ How to Upgrade Windows NT4 WS to Windows XP Professional	44
Upgrading Windows 2000 Professional to Windows XP Professional	45
Before You Begin the Upgrade	45
▼ How to Upgrade Windows 2000 Professional to Windows XP Professional	45
Upgrading Windows 98 to Windows XP Professional	47
Before You Begin the Upgrade	47
▼ How to Upgrade Windows 98 to Windows XP Professional	48
Installing Japanese Windows XP Professional	48
▼ How to Perform an Automatic Installation	49
▼ How to Perform a Manual Installation	50
Configuring Virtual Ethernet Networking for Windows XP Professional	51
▼ How to Remove a Static IP Address	52

- ▼ How to Add a Virtual Network Adapter 52
  - ▼ How to Configure the Network for Windows XP Professional 54
  - ▼ How to Reconfigure the Network Adapter for Physical Ethernet 55
  - ▼ How to Configure External Video Drivers for Windows XP Professional 57
  - ▼ How to Configure Windows XP Professional for External Video Use 59
  - ▼ How to Configure External Video Back to the System Monitor 60
- 6. Using Windows 2000 Professional or Windows 2000 Server 61**
- Installing Windows 2000 62
    - Installation Notes 62
      - ▼ How to Perform a Custom Installation 63
      - ▼ How to Reinstall Windows 2000 64
  - Upgrading Windows NT to Windows 2000 65
    - Upgrade Notes 65
  - Upgrading Windows NT4 WS to Windows 2000 Professional 65
    - Before You Begin the Upgrade 66
      - ▼ How to Upgrade Windows NT4 WS to Windows 2000 Professional 66
  - Upgrading Windows NT4 TS to Windows 2000 Server 67
    - Before You Begin the Upgrade 67
      - ▼ How to Upgrade Windows NT4 TS to Windows 2000 Server 68
  - Configuring Virtual Ethernet Networking for Windows 2000 69
    - ▼ How to Remove a Static IP Address 70
    - ▼ How to Add a Virtual Network Adapter 71
    - ▼ How to Configure the Network for Windows 2000 72
    - ▼ How to Reconfigure the Network Adapter for Physical Ethernet 74
    - ▼ How to Configure External Video Drivers for Windows 2000 75
    - ▼ How to Configure Windows 2000 for External Video Use 77
    - ▼ How to Configure External Video Back to the System Monitor 78

- ▼ How to Configure the MouseKeys Accessibility Option 79
- 7. Using Windows NT Workstation, Windows NT Server, or Windows NT 4.0 Terminal Server 81**
  - Installing Windows NT 82
    - Installation Notes 82
      - ▼ How to Perform a Custom Installation 83
      - ▼ How to Reinstall Windows NT 84
    - Configuring Virtual Ethernet Networking for Windows NT 85
      - ▼ How to Install the SunNDIS Adapter 85
      - ▼ How to Remove the SunNDIS Adapter 86
      - ▼ How to Configure External Video for Windows NT 87
      - ▼ How to Configure External Video Back to the System Monitor 89
- 8. Using Windows 98 93**
  - Installing Windows 98 94
    - Installation Notes 94
      - ▼ How to Reinstall Windows 98 94
    - Configuring Networking for Windows 98 94
      - ▼ Configuring Physical Ethernet Networking for Windows 98 95
      - ▼ Configuring Virtual Ethernet Networking for Windows 98 96
      - ▼ How to Configure External Video for Windows 98 97
      - ▼ How to Configure External Video Back to the System Monitor 98
- 9. Installing and Configuring Server Software 99**
  - Using SunFSD for Mapping Between Solaris and Microsoft Windows 100
    - ▼ How to Enable SunFSD Mapping 101
    - ▼ How to Disable SunFSD Mapping 102

<b>10. Using Drives and Configuring Peripheral Devices</b>	<b>103</b>
Using a Diskette Drive With SunPCi III Software	103
Using a CD/DVD Drive With SunPCi III Software	104
▼ How to Mount a CD-ROM Drive	105
▼ How to Eject a CD From a CD-ROM Drive	106
Connecting Peripheral Devices	106
Using the LED Indicator	107
Connecting Audio Devices	107
Connecting the USB Device	108
Connecting the Ethernet Device	108
Connecting the External Video	108
Connecting Additional USB and 1394 Firewire Devices	109
Connecting the Firewire Device	110
Connecting Serial and Parallel Port Devices	111
Connecting a Serial Device	112
▼ How to Configure a Serial Mouse for an External Monitor	112
<b>11. Using SunPCi III Software</b>	<b>113</b>
The <code>sunpci</code> Command and Its Options	114
SunPCi III Menus	117
File Menu	117
Options Menu	118
Updating Intel Drivers	118
Automatic Update of Intel Drivers	119
▼ How to Manually Update Intel Drivers for an Existing Windows NT, Windows 2000, or Windows XP Professional C: Drive	119
▼ How to Manually Update Intel Drivers for an Existing Windows 98 C: Drive	120
Boot@Boot Support	121
SunPCi Daemon	122

Virtual Network Computing (VNC)	122
Configuring and Using Boot@Boot Support	124
Configuring Boot@Boot Support for VNC	124
Preparing SunPCi III Cards for Boot@Boot Support	126
Configuring SunPCi III Cards for Boot@Boot Support	127
Listing Boot@Boot Sessions	128
Disabling Boot@Boot Support for VNC or for SunPCi III cards	129
Shutting Down a VNC or SunPCi III Session	129
Shutting Down the SunPCi Daemon Process	130
Making Manual Changes to the Boot@Boot Configuration	130
Using an X Server Other Than Xvnc	131
▼ How to Interact With VNC From a Remote Client	132
Extended Drives and SunPCi III Software	132
File System Drives	133
Network Drives	133
▼ How to Access Solaris Files and Directories in Windows 98	133
▼ How to Map a Drive Letter to a Directory With a Long Path in Windows 98	134
Installing Windows 98 Applications on Extended Drives	135
▼ How to Access Solaris Files and Directories in Windows XP Professional, Windows 2000, or Windows NT	136
Using the Copy and Paste Commands	137
▼ How to Configure Japanese Copy and Paste Between Microsoft Windows and Solaris	137
Printing From Microsoft Windows Using Solaris Printers	138
▼ How to Set Up a Solaris Printer From Microsoft Windows	139
Avoid Using Screen Savers	140

<b>A. Troubleshooting</b>	<b>141</b>
Support for Issues	141
SunPCi III Hardware Issues	142
Hardware Error Messages	143
Mouse Issues	144
Diskette Drive Issue	144
CD-ROM Drive Issues	145
Setting Up Your CD-ROM Drive	146
Video Display Issues	146
24-Bit Display on Sun Blade 100	146
External Video Resolutions	147
External Monitors and Windows NT	148
Power Management Message Issue	148
USB and Firewire Connection Issues	149
SunPCi III Software Issues	149
Installation Error Message	150
Software Startup Error Messages	151
Emulated Hard Drive Issues	152
FAT16 File System Limitation Issue	153
File System Compatibility Issue	154
Partitioning a Large Emulated Drive File System for Windows NT4 TS	155
Emulated Drives and Windows XP Professional, Windows 2000, and Windows NT Issues	155
How to Back Up an Emulated C: Drive	156
Using Multiple Microsoft Windows Operating Systems	156
Creating Bootable Partitions	157
Solaris Stale Links Issue	157
Missing Master.ini File After Factory Installation	157
Sun Blade Workstations and Sun Enterprise Servers Issues	158

Multiple Cards and Microsoft Windows Issue	158
Configuring Virtual Networking Using SunPCi III Software	159
Xinerama Display Issue	159
Installing Microsoft Windows From CD-ROM	159
Application Installation to Solaris File System Issues	159
Displaying Shortname Tails	160
System Clock and Daylight Savings Time Issue	160
Japanese Copy and Paste Issue	161
Networking and SunFSD Issues	161
Installing Applications on SunFSD	161
Extended Drive (SunFSD) Issues	161
Network Startup Is Slow After Configuration	162
Cannot Connect to Other Systems	162
Installing Applications From a SunFSD Source Directory	163
Installing Applications Into a SunFSD Target Directory	163
Network Neighborhood Issue	164
Software Appears to Hang When Browsing Network Drives	164
Network Drive Issue	165
Installing Additional Printers on Slow Networks	166
Windows XP Professional and Windows 2000 Issues	166
Custom Display Mode Issue	167
Double Mouse Pointer Issue	168
File System Drive Issues	169
Microsoft DirectDraw Performance Issue	170
Troubleshooting Windows XP Professional and Windows 2000 Issues	171
EZ CD Creator Issue	171
No Mouse Input After Booting Into Safe Mode	172
Incorrect Path Name After Adding D: Drive	172

CD-ROM Drive Issues	172
Cannot Unmap SunFSD Drives	172
RealPlayer 6.0 Attempts Installation of New CD-ROM Drivers	173
Windows Media Player 8 and 9 and Audio CD Issue	173
Windows Media Player 8 and 9 and Virtual CD-ROM Issue	174
Windows NT Issues	174
External Video Issue	175
Installing Applications to Network Drives	175
Recovering From the Windows NT Autorun Option	175
File System Drive Issues	175
Creating Windows NT Repair Disks	176
Using the Windows NT Repair Disks	177
Service Packs and Serial Mouse Message	178
Using UNC Path Names to Locate Files	179
Directory Enumeration Issue	179
Installing Citrix MetaFrame on Windows NT4 TS	179
External CD-RW Drive Issue	180
Office 2000 Installation Might Freeze on Windows NT4 TS Edition	180
Windows 98 Issues	180
Standby Option Not Available	181
Removing the CD From the CD-ROM Drive Before Installation Completes	181
McAfee 6.0 Installation Issue	181
Backspace Key Issue	181
No Splash Screen After Fresh Installation	182
Microsoft Windows Application Issues	182
Troubleshooting Microsoft Windows Applications	183
Troubleshooting Microsoft Windows Applications and SunFSD Issues	185
Installation and SunFSD on Windows XP Professional	185

Microsoft Office XP Installation and SunFSD on Windows 2000 Professional 186

WordPerfect 9 Installation and SunFSD on Windows XP Professional 186

Retrospect Software and SunFSD 186

Norton Antivirus Software Scanning and SunFSD on Windows 2000, Windows XP Professional, and Windows NT 187

Adobe Photoshop Installation and SunFSD on Windows XP Professional 187

**B. SunPCi III International Support 189**

International Support 189

Using the Keyboard Environment Variables 190

Setting the `KBTYP` Environment Variable 190

Setting the `KBCP` Environment Variable 191

▼ How to Set an Environment Variable 192

▼ How to Turn Off an Environment Variable 192

▼ How to Set Up the Keyboard for Microsoft Windows 192

Using an International Keyboard Under DOS 193

International Keyboard 193

DOS Character Set 194

Using Code Pages and SunPCi III Software 194

Code Page Table 194

National Language Support Codes 195

The `$LANG` Variable 196

**C. SunPCi III Online Support 199**

SunPCi III Product Web Page 199

SunPCi III Documentation 200

<b>D. SunPCi III Performance Tips</b>	<b>201</b>
Fine-Tuning the SunPCi III Configuration	201
Increasing System Memory	201
Specifying Emulated Drives	202
Improving Video Performance	202
Running Game Software on the SunPCi III Platform	203
▼ How to Increase Video Memory	203
Video Display Routing	204
Using a Palm Pilot With SunPCi III Software	204

# Figures

---

- FIGURE 2-1 Create a New Emulated Drive Dialog Box 15
- FIGURE 2-2 Grow an Existing Emulated Drive Dialog Box 19
- FIGURE 3-1 Attach an Existing Emulated Drive Dialog Box 25
- FIGURE 10-1 SunPCi III Main Card Backplate Connectors 109
- FIGURE 10-2 SunPCi III USB/Firewire Backplate Connectors 110
- FIGURE 10-3 SunPCi III Serial/Parallel Port Backplate Connectors 111



# Tables

---

TABLE 2-1	Microsoft Service Packs Required by SunPCi III 3.0 Software	20
TABLE 3-1	Sample File Names in a Multiple Card Configuration	23
TABLE 10-1	LED Colors and Status	107
TABLE 11-1	SunPCi III Command-Line Options	115
TABLE 11-2	File Menu Commands	117
TABLE 11-3	Options Menu Commands	118
TABLE A-1	SunPCi III Error Messages	143
TABLE A-2	Mouse Issues	144
TABLE A-3	CD-ROM Drive Issues	145
TABLE A-4	Software External Video Resolutions (VIA S3 Graphics ProSavage DDR)	148
TABLE A-5	Installation Error Message	150
TABLE A-6	Software Startup Error Messages	151
TABLE A-7	Emulated Hard Drive Issues	152
TABLE A-8	Common Accessibility Among Converted File Systems	154
TABLE A-9	Windows XP Professional and Windows 2000 Issues	171
TABLE A-10	Troubleshooting Microsoft Windows Applications	183
TABLE B-1	KBTYPPE Values	190
TABLE B-2	KBCP Values	191
TABLE B-3	National Language Support	195
TABLE B-4	\$LANG Variable Settings	197



# Preface

---

The *SunPCi III 3.0 User's Guide* provides setup and operation instructions for the SunPCi™ III software. Use this guide after you have installed your SunPCi III cards and the SunPCi III 3.0 software into your UltraSPARC® system.

In addition, this guide explains how to install the following Microsoft Windows operating systems for use with your SunPCi III cards:

- Microsoft Windows XP Professional
- Microsoft Windows 2000 Professional
- Microsoft Windows 2000 Server Edition
- Microsoft Windows NT 4.0 Workstation
- Microsoft Windows NT 4.0 Server
- Microsoft Windows NT 4.0 Terminal Server
- Microsoft Windows 98 Second Edition

In order to fully use the information in this document, you must install the SunPCi III card or cards and the SunPCi III 3.0 software package on your UltraSPARC system. Refer to the *SunPCi III Quick Start Installation Guide* for more information about installing cards and the SunPCi III 3.0 software.

---

## Who Should Read This Book

This guide is intended for all users of the SunPCi III product. This guide provides the information you need to use the SunPCi III software with Microsoft Windows operating systems.

The topics in this guide are explained with the non-technical user in mind. However, you do need to understand the basics of working with the Solaris™ operating environment, the DOS operating system, and the desired version of Microsoft Windows software.

---

**Note** – Installation of Microsoft Windows on your UltraSPARC system with the card differs from installation on a PC. Even though you may understand Microsoft Windows installation instructions, it is critical that you follow the instructions in this guide.

---

## How This Book Is Organized

This guide is organized as follows:

Chapter 1 describes the SunPCi III product and introduces its features.

Chapter 2 lists the contents of the SunPCi III package and explains the requirements your system must meet to successfully install and run SunPCi III software.

Chapter 3 explains how to configure and use multiple SunPCi III cards installed in your system.

Chapter 4 explains how to configure and use networking for the SunPCi III product.

Chapter 5 describes how to configure and use Windows XP Professional software.

Chapter 6 explains how to configure and use Windows 2000 Professional and Windows 2000 Server software.

Chapter 7 describes how to configure and use Windows NT Workstation, Windows NT Server, and Windows NT Terminal Server software.

Chapter 8 explains how to configure and use Windows 98 software.

Chapter 9 discusses installing and configuring server products and SunFSD issues.

Chapter 10 describes how to connect peripheral devices (such as printers, serial devices, and audio devices) to the SunPCi III card.

Chapter 11 outlines how to use aspects of SunPCi III software, including the `sunpci` command and VNC.

Appendix A provides explanations of known problems and troubleshooting solutions.

Appendix B describes how to configure SunPCi III to work with international equipment.

Appendix C describes how to access and use online SunPCi Web sites and resources.

Appendix D includes suggestions and tips to improve SunPCi III performance.

---

## Using UNIX Commands

This guide does not contain information about basic UNIX® commands and procedures such as shutting down the system, booting the system, and configuring devices. See one or more of the following for this information:

- *Solaris Handbook for Sun Peripherals*
- AnswerBook2™ online documentation for the Solaris operating environment
- Other software documentation that you received with your system.

---

## Document Conventions

This guide uses certain document conventions. The following sections explain the conventions and how to interpret them.

## Solaris Command Windows

In this guide, you are often instructed to open a command window when performing various tasks. In the Solaris Common Desktop Environment (CDE), these command windows are called Console or Terminal windows. In OpenWindows™ environments, you can use either a Solaris Command Tool window or Shell Tool window. Command windows are a standard part of the Solaris operating environment where you enter UNIX commands.

# Typographic Conventions

Typeface	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
<b>AaBbCc123</b>	What you type, when contrasted with on-screen computer output	% <b>su</b> Password:
<i>AaBbCc123</i>	Book titles, new words or terms, words to be emphasized	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this.
	Command-line variable; replace with a real name or value	To delete a file, type <code>rm filename</code> .

## Shell Prompts

Shell	Prompt
C shell	<i>machine_name</i> %
C shell superuser	<i>machine_name</i> #
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

## SunPCi III Keyboard Shortcuts

The SunPCi III software provides keyboard shortcuts for many of the functions on the menus at the top of the SunPCi III window. To see the shortcuts for SunPCi III commands, hold down the left mouse button on the menu until the drop-down menu appears. Next to each command is the equivalent keyboard shortcut.

In CDE, OpenWindows, and GNOME environments, keyboard shortcuts use the Meta key (FIGURE P-1) in combination with another key. The Meta key is located on either side of the spacebar on your keyboard. To use a shortcut, hold down the Meta key and press the second key. For example, the Meta-E key combination means “press both the Meta key and the E key at the same time.”



**FIGURE P-1** Sun Keyboard Meta Key

---

**Note** – The discussion in this section applies only to the keyboard shortcuts in the SunPCi III software. Keyboard shortcuts for each version of Microsoft Windows are described in each operating system’s documentation.

---

When running SunPCi III software and Microsoft Windows, to allow Copy and Paste operations, the Find, Undo, Copy, Paste, and Cut keys on your Sun system keyboard are mapped to the appropriate actions in Microsoft Windows.

---

## Customer Support

If you cannot find the information you need in this guide, call your SunPCi III distributor or your local support center. For assistance outside the United States, contact your Sun sales representative.

---

## Related Documentation

For information and help about the version of Microsoft Windows you are using, consult the related Microsoft Windows documentation or your service provider.

The following table describes the related Sun documentation for the SunPCi III product.

Application	Title	Part Number
Installation of the SunPCi III hardware and software	<i>SunPCi III Quick Start Installation Guide</i>	817-0358-10
Important last-minute information and notes about the SunPCi III product	<i>SunPCi III 3.0 Product Notes</i>	817-0359-10
Information about installing additional memory.	<i>SunPCi III SODIMM Installation Guide</i>	817-0888-10

The following table is an index of the directories containing the translated documentation in the `Docs` directory, which will be available with the SunPCi III 3.0.1 release. For information about how to view the documentation, see “Viewing the Documentation PDF Files” on page 6.

Directory Name	Language	Directory Name	Language
C	English	ja	Japanese
de	German	ko	Korean
es	Spanish	sv	Swedish
fr	French	zh	Simplified Chinese
it	Italian	zh_TW_Big5	Traditional Chinese

**Note** – Translated documentation will be available with the SunPCi III 3.0.1 release.

---

## Accessing Sun Documentation Online

You can view, print, or purchase a broad selection of Sun documentation, including localized versions, at the following Web site:

<http://www.sun.com/documentation>

You can access a variety of online resources and documentation for SunPCi III products. Refer to Appendix C for a listing of SunPCi III online resources.

---

# Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun at:

`docfeedback@sun.com`

Please include the part number (817-0357-10) of your document in the subject line of your email.



# Introducing SunPCi III 3.0 Hardware and Software

---

The SunPCi III 3.0 hardware and software create a personal computer (PC) that is integrated into your PCI UltraSPARC system, which is running a supported Solaris operating environment. You work on the PC either from a Common Desktop Environment (CDE) X Window on the Solaris desktop or from a separate monitor connected to the SunPCi III card. With the SunPCi III 3.0 product, you can create emulated drives up to 40 Gbytes in size.

This chapter contains the following topics:

- “Supported Microsoft Windows Operating Systems” on page 1
- “SunPCi III 3.0 Features” on page 2
- “Supported Citrix MetaFrame Software” on page 4
- “Getting Help for SunPCi III Software” on page 5
- “Getting Help for Microsoft Windows Software” on page 5

---

## Supported Microsoft Windows Operating Systems

The SunPCi III 3.0 product supports the following Microsoft Windows operating systems and Service Packs:

- Microsoft Windows XP Professional (Windows XP Professional) Service Pack 1
- Microsoft Windows 2000 Professional (Windows 2000 Professional) Service Pack 3
- Microsoft Windows 2000 Server Edition (Windows 2000 Server) Service Pack 3
- Microsoft Windows NT 4.0 Workstation (Windows NT4 WS) Service Pack 6a
- Microsoft Windows NT 4.0 Server (Windows NT4 Server) Service Pack 6
- Microsoft Windows NT 4.0 Terminal Server (Windows NT4 TS) Service Pack 6
- Microsoft Windows 98 Second Edition (Windows 98)

---

**Note** – SunPCi III 3.0 does not support Microsoft Windows 95, the first release of Windows 98, or Microsoft Windows ME.

---

## SunPCi III 3.0 Features

This section describes the features that the SunPCi III 3.0 product brings to your Solaris desktop.

- *PCs on your Solaris desktop* – For each SunPCi III card installed in your system, you can use its PC applications in a window on your Solaris desktop.
- *Auto-install of Microsoft Windows operating systems* – The Create a New Emulated Drive dialog box enables you to select and install Windows operating system software more easily. Emulated drive creation also supports NT file system (NTFS) for Windows NT, Windows 2000, and Windows XP Professional operating systems.
- *Growing an emulated hard disk*– The Grow an Existing Emulated Drive dialog box enables you to grow and increase your hard disk size.
- *Automatic update of Intel drivers* – With the release of 3.0, the Intel drivers used with SunPCi software automatically update after a new version of SunPCi and Solaris drivers are installed. You will not see this update used until the release following 3.0 is installed. This is not available in Windows 98.
- *High-resolution VGA display for your Microsoft Windows applications* – SunPCi III software includes two Microsoft Windows super-VGA display drivers. One displays the Microsoft Windows desktop in an X Window on your screen. The other drives the display on an external VGA monitor. You can choose to install either option.
- *Familiar PC peripherals* – The SunPCi III product provides Microsoft mouse and IBM PC keyboard emulation, plus access to external peripherals such as printers and modems. The SunPCi III main card, the optional Serial/Parallel Port Backplate (included), the optional USB/Firewire Card and Backplate (included), contain the physical connectors for PC peripheral devices, including additional USB connections and a 1394a Firewire connection.
- *LED Light* – The main backplate now contains an LED indicator, which indicates the status of the system.
- *Access to network services, files, and printers* – The SunPCi III product enables you to connect to your Ethernet network. It also enables you to access Solaris files and printers on the network through the physical or virtual network connections.

- *Multiple SunPCi III card support* – With multiple cards installed, you can simultaneously access workstation or server PC applications from your Sun UltraSPARC system.
- *Large disk support* – SunPCi III 3.0 supports emulated disk drives up to 40 Gbytes in size.
- *Boot@Boot support* – Boot@Boot is feature that you can configure to automatically start the SunPCi III 3.0 software on one or more SunPCi cards when the Solaris server in which the cards are installed boots.

The SunPCi III software package includes the Caldera OpenDOS 7.01 operating system.

---

**Note** – You must purchase retail Microsoft Windows operating system software and your PC applications separately.

---

## From a PC User's Perspective

From the perspective of a PC user, SunPCi III hardware and software include the following PC features:

- Emulated hard drives, which function like local PC hard drives
- Expandable hard drives, which enable you to increase the size of your PC hard drive
- Extended drives, which are similar to networked drives on a PC
- IBM PC and PC keyboard emulation
- Access to serial, parallel, Firewire 1394a, and USB 2.0 peripherals, such as printers, scanners, and digital cameras, using the SunPCi optional Serial/Parallel Port Backplate and the USB/Firewire Backplate.
- 256 Mbytes of SODIMM standard (in one slot), plus a second slot for optional memory. You can have a total of 2 Gbytes of memory.
- Access to PC-based servers, workstations, and networks, including file and print servers
- Ability to use an optional external VGA monitor
- Physical Ethernet, which uses a separate Ethernet connection; or virtual Ethernet, which uses the UltraSPARC system's networking capabilities (virtual networking is disabled with multiple SunPCi cards)
- PC audio with a stereo speaker or headphone output jack, and a monaural microphone compatible input jack

# From a Solaris User's Perspective

From the perspective of an UltraSPARC system user, SunPCi III hardware and software include the following features:

- Reliable access to thousands of PC applications
  - Ability to display super-VGA graphics with 16-bit and 24-bit color
  - Ability to share network resources, such as printers and files, between the PC and Solaris environments
  - Ability to copy and paste text between Microsoft Windows and OpenWindows or CDE applications (this feature is not available for Microsoft Windows server products)
  - Access to PC-based networks, including Novell NetWare file and print servers (only physical networking, not virtual networking, is supported with multiple cards)
- 

## Supported Citrix MetaFrame Software

Citrix MetaFrame software enables Solaris clients to display and use SunPCi III 3.0 software running the Windows 2000 Server or Windows NT4 TS operating system on a remote host. Citrix server software must be installed on an emulated drive that contains Windows 2000 Server or Windows NT4 TS operating system software and that is attached to a SunPCi III card.

When the server is configured to use Virtual Network Computing (VNC), you can boot SunPCi III software as part of server startup, eliminating the need to specifically start the SunPCi III software before clients can use it.

SunPCi III 3.0 hardware and software support use of the following Citrix MetaFrame products:

- Citrix MetaFrame 1.8 for Microsoft Windows 2000 Servers
- Citrix MetaFrame 1.8 for Microsoft Windows NT 4.0 Servers
- Citrix MetaFrame XP for Microsoft Windows

See the following Web site for information about purchasing and using Citrix MetaFrame software:

<http://www.citrix.com>

---

# Getting Help for SunPCi III Software

Help is available online for the SunPCi III commands from Solaris manual pages (also called man pages) and from the documentation PDF files on the SunPCi III 3.0 CD.

## ▼ How to View Solaris Manual Pages

You can use manual pages to obtain information about the Solaris operating environment itself, or about the commands associated with Solaris software. To view Solaris online manual pages:

1. **Set your `MANPATH` variable as follows:**

```
$MANPATH: /opt/SUNWspci3/man
```

2. **Type the word `man`, followed by the name of the command in which you are interested.**

For example, to get Help on the `sunpci` command, type the following command:

```
% man sunpci
```

The system responds `Reformatting page...` wait, and then displays a section of the manual page in the Terminal window. To scroll through the manual page, press any key. To exit the manual page, press `Control-C`.

For information about how to add the SunPCi III man page directory to your `MANPATH` environment variable, refer to your Solaris documentation.

---

# Getting Help for Microsoft Windows Software

To get help for Microsoft Windows while working in a Microsoft Windows operating system, do one of the following:

- Press `F1`.

- Click Start and choose Help.

The appropriate operating system Help file then opens.

---

**Note** – Microsoft Windows Help does not contain Help for the SunPCi III application. For help with SunPCi III application software, use the Solaris manual pages described in “How to View Solaris Manual Pages” on page 5.

---

For help with your Microsoft Windows application software, refer to your operating system documentation.

---

## Viewing the Documentation PDF Files

English versions of the documentation are in the `DOCS` directory on the SunPCi III 3.0 CD in PDF (Adobe Acrobat) format. The CD includes the following documentation:

- *SunPCi III 3.0 User's Guide* – Describes how to configure the SunPCi III software to use one or more SunPCi III cards, how to install the Microsoft Windows software on a SunPCi card, and how to troubleshoot SunPCi issues.
- *SunPCi III Quick Start Installation Guide* – Describes how to install one or more SunPCi III cards and SunPCi III software.
- *SunPCi III 3.0 Product Notes* – Describes any late-breaking issues related to the SunPCi III product.

To view the documentation PDF files, follow these steps:

- 1. Insert the SunPCi III 3.0 CD into the system CD-ROM drive.**

A CDE File Manager window opens.

- 2. In the File Manager window, double-click the `DOCS` subdirectory where the PDF files for your locale are stored on your SunPCi III 3.0 CD.**
- 3. Double-click on the Adobe Acrobat PDF file you want to open.**

After a few seconds, the Adobe Acrobat splash screen opens, followed by the Adobe Acrobat program displaying the file you double-clicked.

---

**Note** – If needed, you can download Adobe Acrobat Reader for free from the Adobe Web site: <http://www.adobe.com/products/acrobat/alternate.html>

---

---

# Removing Microsoft Windows Software

To remove Microsoft Windows software from an emulated drive, consult your Microsoft Windows documentation.



## Getting Started

---

This chapter assumes that you have installed the SunPCi III card or cards into your UltraSPARC system, and have installed the SunPCi III 3.0 software package. If you have not completed those tasks, consult the *SunPCi III Quick Start Installation Guide*.

This chapter includes the following topics:

- “System Requirements” on page 10
- “Configuring Multiple SunPCi III Cards” on page 11
- “Starting and Stopping the SunPCi III Software” on page 11
- “Emulated Drives and SunPCi III Software” on page 13
- “Creating an Emulated Hard Drive” on page 13
- “Growing an Existing Emulated Hard Drive” on page 18
- “Microsoft Windows Service Packs” on page 20

This chapter includes instructions for completing the following tasks:

- “How to Start the SunPCi III Software” on page 11
- “How to Stop the SunPCi III Software” on page 12
- “How to Create a New Emulated Drive” on page 15
- “How to Attach an Existing Emulated Drive as a C: or D: Drive” on page 17

---

# System Requirements

To install and use SunPCi III 3.0 software, you need the following:

- A PCI-based UltraSPARC system with one or more SunPCi III cards installed. See the *SunPCi III Quick Start Installation Guide* or the *SunPCi III 3.0 Product Notes* for a complete list of supported systems.
- Solaris 7, Solaris 8, or Solaris 9 operating environment.
- Common Desktop Environment (CDE) X-Window manager.
- A CD-ROM drive, either local (attached to your system), or remote (attached to another system on your network).

---

**Note** – You must use a Sun CD-ROM drive during installation of SunPCi III software. You can use third-party CD-ROM drives for other products and applications after SunPCi III installation.

---

- A hard disk; either local or remote (local preferred), with at least 60 Mbytes of available storage space for the SunPCi III package, and additional storage space of 4096 Mbytes for each operating system.
- The SunPCi III card comes with 256 Mbytes of on-board RAM. To use any of the supported Microsoft Windows operating systems with your SunPCi III system, your SunPCi III card should have installed 256 Mbytes RAM.

Memory requirements for Windows NT4 Server and Windows NT4 TS are based on the number and type of users connecting, consult the SunPCi Web site for further information:

<http://www.sun.com/desktop/products/sunpci>

---

# Configuring Multiple SunPCi III Cards

You can install multiple SunPCi III cards into an UltraSPARC server or workstation. To configure multiple cards, follow this sequence:

1. Remove any previous versions of SunPCi cards (version 1.x or 2.x).
2. Remove any previous version of SunPCi software.
3. Install all the SunPCi III cards you plan to use.
4. Install the SunPCi III 3.0 software on your system.
5. Configure one card and its emulated drive software completely.
6. Configure the rest of your SunPCi III cards.

See the *SunPCi III Quick Start Installation Guide* for complete instructions.

---

# Starting and Stopping the SunPCi III Software

This section provides instructions for starting and stopping the SunPCi software.

## ▼ How to Start the SunPCi III Software

- **To start the SunPCi software, open a Terminal window and type the following command at the % prompt:**

```
% /opt/SUNWspci3/bin/sunpci
```

When you start the SunPCi III software for the first time, the software takes a few minutes to create a Solaris directory named `~/pc`, into which several SunPCi III files are installed.

You then see a SunPCi splash screen and the SunPCi window opens.

---

**Note** – If you do not want to type the full path of the `sunpci` command every time you run the software, modify the `$path` statement in your `.login` file. For information about customizing the SunPCi path, refer to your Solaris software documentation.

---

## ▼ How to Stop the SunPCi III Software

Stopping the SunPCi software involves two steps: closing Microsoft Windows and then closing the SunPCi software.



---

**Caution** – Always close Microsoft Windows before exiting from SunPCi software or your files and applications could become corrupted.

---

You have two different options for stopping SunPCi III software gracefully.

### ▼ Shutting Down SunPCi III Software -- Option 1

**1. Click Start and choose Shut Down.**

The Shut Down Windows dialog box opens.

**2. Click the “Shut down” option.**

**3. Click OK.**

Microsoft Windows closes and the SunPCi window remains open, with the SunPCi splash screen saying “You may now exit or reset SunPCi.”

**4. From the File menu in SunPCi, choose Exit.**

The SunPCi Exit dialog box opens with the choice of Exit, Shutdown Windows and Exit SunPCi, and Cancel.

**5. Click Exit.**

SunPCi closes.

---

**Note** – In Windows XP Professional, the terminology is different than described above, although the procedure is almost the same.

---

### ▼ Shutting Down SunPCi III Software -- Option 2

**1. From the File menu in SunPCi, choose Exit.**

The SunPCi Exit dialog box opens with the choice of Exit, Shutdown Windows and Exit SunPCi, and Cancel.

2. **Click Shutdown Windows and Exit SunPCi to exit Microsoft Windows and the SunPCi application.**

Both Microsoft Windows and SunPCi close gracefully.



---

**Caution** – Do not choose the Suspend option when shutting down Microsoft Windows. SunPCi software does not support the Suspend command.

---

---

## Emulated Drives and SunPCi III Software

In order to emulate a PC, SunPCi III software creates a file in Solaris software and configures the file so that OpenDOS and Microsoft Windows see the file as a physical hard drive. This type of file is a SunPCi III emulated hard drive.

After you install the SunPCi III software, you create a default C: drive and assign it to an emulated drive file. By default, all SunPCi III windows are booted from this drive C: and use the startup files located on the drive.

---

**Note** – You can create several C: and D: drive files, each with different applications and configurations, and attach a drive as needed. Only one C: drive and one D: drive can be active at any one time, and a file cannot function as a C: drive and a D: drive at the same time.

---

---

## Creating an Emulated Hard Drive

The first time you start SunPCi software, a dialog box appears that asks you to create an emulated C: drive. When you click Create, the Create a New Emulated Drive dialog box appears. This dialog box enables you to:

- Select an operating system to auto-install
- Specify a size for the emulated drive
- Specify whether to attach the emulated drive as a C: drive, as a D: drive, or not to attach it

- Specify the directory and name for the emulated drive

Selecting an operating system to auto-install by using this dialog box simplifies Microsoft Windows installation. SunPCi software requires customized installation files, and these files are in different locations for different Windows operating systems. When you specify an operating system to auto-install in the Create a New Emulated Drive dialog box, the software automatically finds and copies setup files, boot files, system files, and drivers appropriate for that operating system. The software also launches Windows Setup when SunPCi reboots.

You can also create additional hard drives to use as C: or D: drives.

The emulated drive is a single file that SunPCi creates in the Solaris environment. By default the file is named C.<OSNAME>, and by default it is located in the ~/pc subdirectory in your home directory.

Because the emulated drive is a file in the Solaris environment, you can selectively attach this emulated drive or drives to any available SunPCi III card. You can install a different Windows operating system on each drive, then attach it and boot from it to run that operating system on your SunPCi III card. A SunPCi III card, like a PC, can run only one Microsoft Windows operating system at a time.

If you have only one SunPCi III card installed, you can accept the default file name for the emulated drive in a standard installation. If you have multiple cards installed, consult the section “Configuring Multiple Cards With SunPCi III Software” on page 22. Establishing a naming convention will ease the management of your configuration files, drive names, and their associated card names.

Because of the inherent limitations of DOS, when you create an emulated drive of up to 40 Gbytes that uses the FAT16 file system, that portion above 2 Gbytes in size is unavailable to DOS. All Microsoft Windows operating systems can use a FAT16 disk, but FAT16 format capacity is restricted to a maximum of 2 Gbytes. You can reformat, convert, and/or repartition the emulated hard drive to access the disk portion beyond 2 Gbytes after you have installed your Microsoft Windows operating system.

---

**Tip** – If you choose the automatic installation of a Microsoft Windows operating system using NTFS, you are not constrained by the limitations of DOS.

---

---

**Note** – If you have a C: drive file that you created with a version of SunPCi software earlier than Version 3.0, you cannot use the drive as a boot drive. However, you can attach the file as a D: drive. Conversely, C: drives that you create using the SunPCi III 3.0 software cannot be used with previous versions of SunPCi software.

---

## ▼ How to Create a New Emulated Drive

### 1. Start the SunPCi III software.

If you have not created an emulated hard drive previously for the SunPCi III card, the Create a New Emulated Drive dialog box appears automatically. Proceed to Step 2.

### 2. From the Options menu in the SunPCi window, choose Create a New Emulated Drive.

The Create a New Emulated Drive dialog box opens. See FIGURE 2-1.

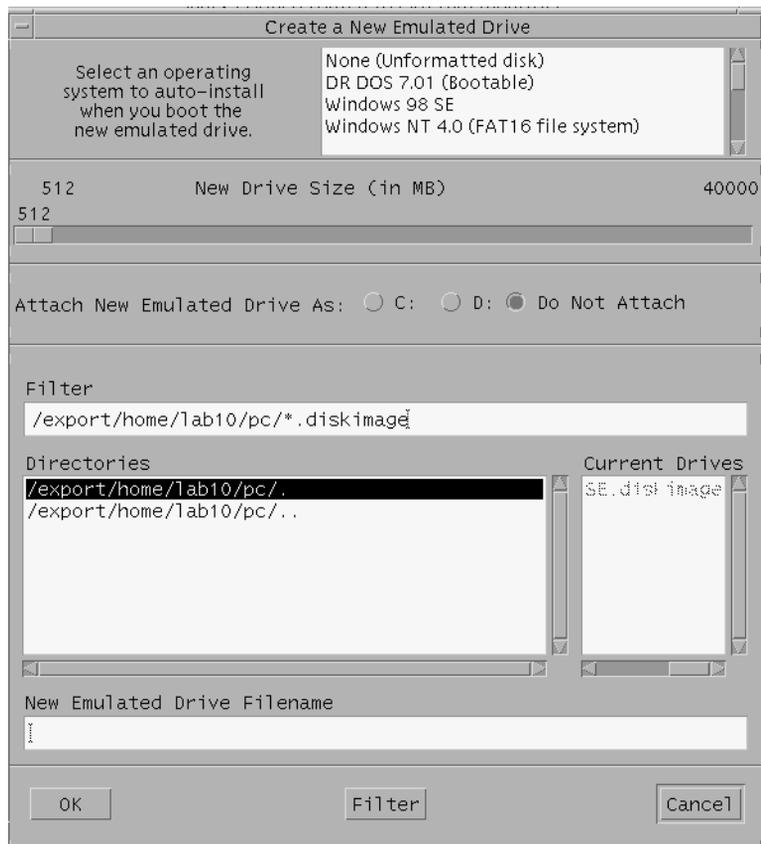


FIGURE 2-1 Create a New Emulated Drive Dialog Box

**3. In the top pane of the dialog box, select an operating system to auto-install when the new drive is booted.**

- Select None (Unformatted disk) if you want to create a non-bootable drive (a D: drive). Before you can use the drive, you need to format it. See your Microsoft Windows documentation.
- Select DR DOS 7.01 (Bootable) if you plan to do a custom installation of a Microsoft Windows operating system at a later time. To install the operating system, you need to follow instructions in the corresponding chapter in this guide.
- Select one of the Microsoft Windows operating systems from the list box to auto-install it.



---

**Caution** – When you specify an operating system to auto-install in the Create a New Emulated Drive dialog box and insert the appropriate Microsoft Windows CD into your CD-ROM drive, the software automatically finds and copies setup files, boot files, system files, and drivers appropriate for that operating system. The software also launches Windows Setup when SunPCi software reboots. Do not perform a custom installation unless you want to use customized installation scripts.

---

For most operating systems, you can choose between creating the disk with the FAT16 file system or the NTFS file system. You cannot boot to OpenDOS using a C: drive formatted for the NTFS file system. This is a known restriction. See “FAT16 File System Limitation Issue” on page 153 for more information.

**4. In the second pane of the dialog box, drag the slider to set the size in Mbytes for the new drive.**

The slider automatically sets to the recommended default size. The left end of the scale is restricted to the required minimum drive size for the operating system you selected.

---

**Note** – For best performance, install some of your Microsoft Windows applications locally on drive C: or D:.

---

**5. In the third pane of the dialog box, select how to attach the new drive.**

If you want to create the drive but not attach it at this time, click the Do Not Attach button. Otherwise, click the radio button next to C: or D:.

**6. In the bottom pane of the dialog box, type the path and file name you want to use for the new drive.**

Use the Filter field and button to view existing files. You must specify a new name for the emulated drive.

---

**Note** – For best performance, create your emulated drives on a local hard disk on your workstation or server. Performance of Microsoft Windows is significantly better on a local hard drive.

---

**7. Click OK.**

A window opens indicating progress of the disk file creation.

**8. If you chose to auto-install an operating system, insert the installation CD for the operating system into your CD-ROM drive and follow the instructions in the SunPCi window.**

---

**Note** – Press Meta-M to attach your mouse to the SunPCi window, and press Meta-M again to use your mouse in other windows.

---

---

**Note** – If you are installing multiple cards into your system, see “Using Multiple SunPCi III Cards” on page 21. Read about configuring multiple cards before continuing the installation. There are significant differences between configuring multiple cards and configuring a single card.

---

## ▼ How to Attach an Existing Emulated Drive as a C: or D: Drive

---

**Note** – If the drive you want to use is already attached, skip this procedure.

---

If you want to use an emulated drive as a C: or D: drive that is not attached to your SunPCi card, you need to attach a drive.

To attach an existing emulated drive, perform the following procedure:

- 1. Start the SunPCi III software.**
- 2. From the Options menu, choose Attach an Existing Emulated Drive.**  
The SunPCi Attach an Existing Emulated Drive dialog box opens.
- 3. Click the radio button next to C: or D: to specify how to attach the drive.**

- 4. Type the path and file name of the emulated drive file you created in “How to Create a New Emulated Drive” on page 15.**

If you forget the name of the drive file, type the path to the location of the drive file and then click Filter. A list of files appears. Select the desired drive file.

- 5. Click OK.**

The drive is now attached as a C: or D: drive.

A dialog box opens with the message In order for the drive mapping to take place, SunPCi must be rebooted. Reboot now?

- 6. If Microsoft Windows is running, use the Start menu to shut it down.**

- 7. From the File menu, choose Reset.**

The SunPCi Reboot dialog box opens.

- 8. Click OK.**

SunPCi software reboots and uses the newly attached drive.

---

## Growing an Existing Emulated Hard Drive

Disk expansion enables you to expand your Microsoft Windows hard drive to gain more space.

To use this newly added emulated hard drive space, you must either create a new partition and format a new file system within it, or expand an already existing partition into the newly created space. You must complete one of these two options so that Microsoft Windows recognizes the newly added space.

You then format your new space by using the appropriate Windows utility or a third-party software, as described at the end of this section.

You can expand the hard drive space by doing the following in the SunPCi window:

- 1. Start the SunPCi III software.**
- 2. From the Options menu, choose Grow an Existing Emulated Drive.**

The Grow an Existing Emulated Drive dialog box opens.

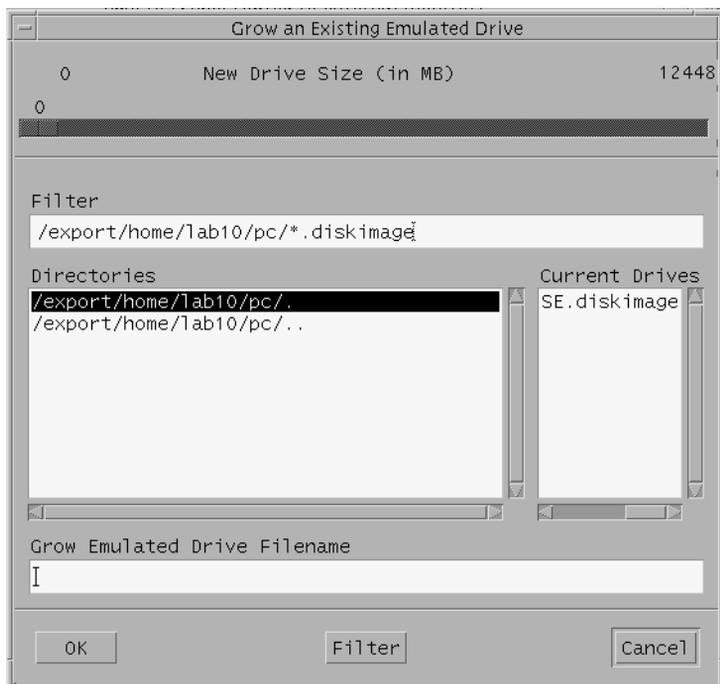


FIGURE 2-2 Grow an Existing Emulated Drive Dialog Box

3. Select the hard drive that you want to expand from the **Current Drives** group box.
4. Move the **New Drive Size (in MB)** horizontal slider to the new size of the hard drive.

---

**Note** – The size you choose is the total size of the emulated hard drive, which includes both the original space of the drive and the newly added space, not just the size of the increase of the hard disk.

---

5. Click **OK**.  
A dialog box might open, depending on how you partitioned your new emulated hard drive and how much you increased your hard drive space.
6. Click **OK**.
7. **Restart Microsoft Windows.**



---

**Caution** – You will not be able to use the expanded hard drive space you created until you complete the following task.

---

After you expand the hard drive, you must perform one of the following options to complete the procedure:

- You can create a new partition in the expanded space by using the DOS `fdisk` utility, and then create a new drive by formatting it with Microsoft Windows Explorer.
- You can use a third-party software, such as PartitionMagic, to expand your current disk drive.

---

## Microsoft Windows Service Packs

After installing Microsoft Windows operating system software, you need to install a Microsoft Service Pack.

TABLE 2-1 lists the Service Packs that SunPCi III 3.0 software requires for supported Windows operating systems. You need to install the indicated Service Pack, or a later version.

**TABLE 2-1** Microsoft Service Packs Required by SunPCi III 3.0 Software

Windows Operating System	Minimum Service Pack
Windows XP Professional	Service Pack 1
Windows 2000 Professional	Service Pack 3
Windows 2000 Server	Service Pack 3
Windows NT4 WS	Service Pack 6a
Windows NT4 Server	Service Pack 6
Windows NT4 TS	Service Pack 6
Windows 98*	None required

\* SunPCi III only supports Microsoft Windows 98 Second Edition, which is referred to as Windows 98 throughout this book.

For information about installing a Service Pack from either a CD or by downloading from the Microsoft Web site, consult your Microsoft Windows documentation.

## Using Multiple SunPCi III Cards

---

This chapter assumes that you have installed the SunPCi III 3.0 software package and all the cards that you will be using concurrently in your machine. Also you should have configured the first card following the procedures in Chapter 2. This chapter explains how to configure additional SunPCi III cards.

You can install any of the supported Microsoft Windows operating systems for use on SunPCi III cards. For the list of operating systems, see “Supported Microsoft Windows Operating Systems” on page 1.

This chapter includes the following topics:

- “Before You Begin Configuration” on page 22
- “Configuring Multiple Cards With SunPCi III Software” on page 22
- “Using Cards and Emulated Drives” on page 25
- “Starting Specific Disk Image Files” on page 28
- “Rebinding Images and Cards” on page 30
- “Multiple Card Behavior” on page 30

This chapter includes instructions for completing the following tasks:

- “How to Create an `.ini` File Using the `-n` Option” on page 24
- “How to Identify Card Names” on page 26
- “How to Start a Specific `.ini` File” on page 26
- “How to Start a Specific Card” on page 27
- “How to Start a Specific Image and a Specific Card” on page 28
- “How to Specify Title Bar Text for Each Card Window” on page 29
- “How to Update the SunPCi III Card Configuration” on page 29

---

# Before You Begin Configuration



---

**Caution** – SunPCi III cards cannot coexist with earlier SunPCi cards. Your workstation or server can only accommodate the same version of SunPCi cards.

---

Before adding cards into an existing installation, ensure that previous versions of SunPCi software (1.x and 2.x) are removed. You also need to clearly identify configuration files and cards before finalizing your software configuration and starting the software. You should have done this when installing the cards.

## Advanced SunPCi III Multiple Card Server Configuration

For advanced SunPCi III server support concerning SunPCi III memory, CPUs, and benchmark information, consult the White Papers location at the SunPCi Web site:

<http://www.sun.com/desktop/products/sunpci>

---

## Configuring Multiple Cards With SunPCi III Software

The first time the SunPCi III software is started, a default *filename.ini* configuration file is created as `~/pc/SunPC.ini`. This `.ini` file is specified from the `sunpci` command line to start the desired emulated C: or D: drive.

In a multiple card system, an emulated drive can be associated with only one card at a time. By default the drive(s) attach to the next available card, although you can specify a particular card, if needed.

### Default `.ini` Configuration File

In order to start an emulated C: or D: drive, that drive's file name must appear in the default `.ini` file named `SunPC.ini`. The drive name insertion is done automatically when you create and attach drives using the SunPCi III software.

Also inserted into the `SunPC.ini` configuration file are the names of PC components and other information. PC components include: the drive image file name or names; the CD-ROM device file name; a diskette device file name; and other devices, for example, printers or other peripherals.

Here is a sample listing of the content of a default `SunPC.ini` file created in a system with one card installed.

```
[Drives]
A drive=/dev/rdiskette
C drive=/home/user/pc/C.diskimage
CD=/vol/dev/aliases/cdrom0
D drive=/net/host/export/SunPCi_III/D.diskimage
```

## Naming `.ini` Files When Using Multiple Cards

When you install multiple SunPCi cards into the same system, you need to create multiple `.ini` files and emulated C: or D: drive images, one for each card. Note, however, that a particular card is not necessarily associated with a particular `.ini` file name.

It helps to name files and disk images in a way that clearly identifies the `.ini` file and its associated C: and D: drive images. Up to two drive images are permitted in a single `.ini` file.

One solution is to name the `.ini` file and its disk image using some identifying characteristic, such as the Microsoft Windows operating system installed on the disk image. Note that you can include up to two disk drive images in a `.ini` file. You can only run one C: and one D: drive per card at a time.

**TABLE 3-1** Sample File Names in a Multiple Card Configuration

<b>.ini File Names</b>	<b>Disk Image Names Inside Each .ini File</b>
SunPC.ini (default)	C.diskimage D.diskimage
win2k.ini	C.win2k.diskimage
ntts4.ini	C.ntts4.diskimage

Unless you specify differently, the following convention is the default SunPCi III 3.0 graphical user interface (GUI) behavior when you use the `sunpci` command with the `-n` option. The stem of the specified `.ini` file name, for example `win2k`, is incorporated into the disk image file name as shown in TABLE 3-1. The following procedure illustrates this behavior.

## ▼ How to Create an `.ini` File Using the `-n` Option

The following procedure assumes that you have installed an additional card or cards into your system. To create a new `.ini` file, follow these steps:

1. At the Solaris prompt, type the following command:

```
% /opt/SUNWspci3/bin/sunpci -n filename.ini
```

By default, after creating an `.ini` file (using SunPCi `-n`), the emulated drive name will use the `.ini` name as the default name for the emulated drive, such as `c.filename.diskimage`. You can edit the name if needed by using the GUI.

The Attach an Existing Emulated Drive dialog box opens. In the example, the variable `filename` would be replaced by the file name you typed in Step 1.

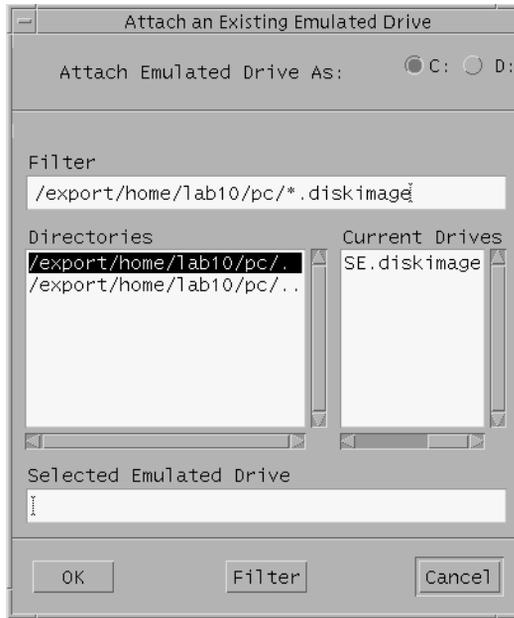


FIGURE 3-1 Attach an Existing Emulated Drive Dialog Box

2. Click OK to accept the default disk image name.

---

## Using Cards and Emulated Drives

Although an emulated drive must run on a SunPCi III card, the SunPCi III emulated drives are not forced to run on any particular card. By default any particular `.ini` file and its associated drive will start on any available card, and it is not possible to predict which card will be used. You can, however, start a drive and a specific card together. To do this, you need to identify the cards that are installed in your system.

## ▼ How to Identify Card Names

- To identify each installed card's name, type the following command:

```
% /opt/SUNWspci3/bin/sunpci -l
```

The system displays the following information: the card's name, for example Card1; the card's device file name in the `/dev` directory; the card's type; the card's description; and the card's ID or Ethernet (MAC) address.

What follows is sample output from a system with two cards installed.

```
Name = Card1
  Device = /dev/sunpci3drv0
  Type = SunPCi III
  Description = SunPCi III card
  ID = 08:00:20:F9:xx:xx

Name = Card2
  Device = /dev/sunpci3drv3
  Type = SunPCi III
  Description = SunPCi III card
  ID = 08:00:20:E7:xx:xx
```

---

**Note** – Instead of the ID message you could get a “(Card In Use)” message if one of the cards is already running.

---

## ▼ How to Start a Specific .ini File

By default, SunPCi software uses the `SunPC.ini` file when you issue the `sunpci` command without options. To start a different emulated drive, which you must do in a multiple card configuration, use the `sunpci` command with the `-p` option.

- To start SunPCi software with a specific file using the `-p` option, type the following command:

```
% /opt/SUNWspci3/bin/sunpci -p filename.ini
```

The SunPCi III software starts, using the referenced disk image.

If you start an emulated drive with a card on which that drive was not created, you get the following warning dialog box about the Ethernet (MAC) address:

```
This emulated drive image was created on another SunPCi card. This
could cause problems if there was special hardware connected to
that card. It could also cause problems if your installed software
or configuration makes any assumptions about the MAC address.
```

```
Emulated Disk File /pathname/c.diskimage
was created on the card with the MAC address xx:yy:zz:zz:yy:xx
```

```
If you do not wish to see this message in the future, start sunpci
with the -N option.
```

If application registration or network configuration setup is affected, you can use the `-N` option, or you can bind the particular image and card by remapping the MAC address to the disk image.

If you want to bind the MAC address to the current disk image, use the `-B sunpci` command option. See “The `sunpci` Command and Its Options” on page 114 for more details.

## ▼ How to Start a Specific Card

Sometimes, for configuration reasons, you might need to start a specific card with a specific C: drive. For example, you might want to run on a card with a printer that is attached to a port, or to run on a card that provides better support for a memory intensive application.

- **To start the SunPCi III software with a specific card, type the following command:**

```
% /opt/SUNWspci3/bin/sunpci -c cardname -p filename.ini
```

Where *cardname* is one card's name returned by the system, for example, `Card1` or `Card2`.

---

# Starting Specific Disk Image Files

When you want to use the SunPCi software with different Microsoft Windows operating systems on different disk images, you can create additional C: drive image files for as many operating systems as you need to run. To install the operating system refer to the appropriate chapter in this guide.

When you want to run a different Microsoft Windows operating system, select Shut Down from the operating system you are using, and Exit from the SunPCi III GUI. Start the disk image you need using the `sunpci` command line and the `-p` option.

---

**Note** – If you attach a disk image file and run it from the SunPCi GUI, the Ethernet MAC address of the card the image attaches is overwritten into the header information in the `.ini` file. You do not get a warning dialog box about the Ethernet MAC address. See “How to Start a Specific `.ini` File” on page 26 for more information.

---

## ▼ How to Start a Specific Image and a Specific Card

By starting a specific image and a specific card, you can link an image and a card to ensure that a particular image is executing on a specific card.

---

**Note** – You can only run one operating system at a time per card.

---

- **To start SunPCi software with a specific file and a specific card using the `-p` and `-c` options, type the following command:**

```
% /opt/SUNWspci3/bin/sunpci -p filename.ini -c cardname
```

The SunPCi III software starts, using the referenced disk image and card.

If you start an image with a card on which it was not created, you get a warning dialog box about the Ethernet MAC address see “How to Start a Specific `.ini` File” on page 26.

## ▼ How to Specify Title Bar Text for Each Card Window

When you are running multiple cards in your system, you might find it helpful to identify which operating system and card are running in which Solaris desktop window. You can enter text into the title bar of the SunPCi III window to identify each window.

- Use the `sunpci` command and the `-title` option to add a string of text into your SunPCi window title bar.

For example, to specify a title in a `sunpci` command starting a particular `.ini` with `Card2`, type:

```
% sunpci -title "Win2k Terminal Server on" -c card2 -p
~/pc/win2kts.ini
```

The resulting text line at the title bar of the SunPCi Terminal window reads “Win2k Terminal Server on card2.” For more information about using the `-title` option, see “The `sunpci` Command and Its Options” on page 114.

## ▼ How to Update the SunPCi III Card Configuration

Periodically you might need to add, remove, move, or replace a SunPCi III card. After doing this, to update the SunPCi III Solaris drivers on the system, complete the following procedure:

1. **Remove the files `/etc/Master.ini` and `/etc/Master.bak`, if they exist.**
2. **Become superuser and type the following command:**

```
# /opt/SUNWspci3/drivers/solaris/sunpload
```

3. **Reconfigure any Boot@Boot support if needed as it will be lost. Add and enable VNC and cards using the `sunpcidadm` command with the `-a` and `-e` options.**  
See “Configuring and Using Boot@Boot Support” on page 124.
4. **Exit the superuser account, and proceed as you would to start the software normally.**

---

## Rebinding Images and Cards

When a *disk.imagefile* file is created, the Ethernet MAC address of the card on which the *disk.imagefile* was created is written into its header, binding the card to the *disk.imagefile*. The binding is only informational, and does not interfere with running a C: or a D: drive on a different card. The `sunpci` command `-B` option rewrites the MAC address of the current card into the *disk.imagefile* header.

This switch is rarely used. If you are remapping a C: drive in which the MAC address of the original card has been used by installed applications for registration or network purposes, you risk licensing and networking issues.

Before attempting to reconfigure the binding of any disk image, verify that you have read and understood the `sunpci` and the `sunpciflash` command-line options. For more information, refer to “The `sunpci` Command and Its Options” on page 114.

---

## Multiple Card Behavior

The following sections explain limitations or features of a SunPCi III session when running multiple cards installed in the same system.

### Networking With Multiple Cards

Virtual networking is automatically disabled in systems with more than one card installed. Use physical networking with multiple card configurations.

### Using the Diskette Drive With Multiple Cards

When multiple cards on a system are running, once the diskette drive is being used by a SunPCi III session, the drive is not available to any other session. When not in use, the diskette drive is locked to the first SunPCi III session started after it becomes available.

## Using the CD-ROM Drive With Multiple Cards

When multiple cards on a system are running, they all share the system CD-ROM drive. One unusual, but expected behavior is that when you insert a CD into the drive, the Autorun option starts on all running SunPCi sessions.



## Networking With SunPCi III Hardware and Software

---

This chapter assumes that you have installed the SunPCi III card or cards into your UltraSPARC system, that you have installed the SunPCi III software, and that you want to understand what networking options are available with the SunPCi III 3.0 product.

This chapter includes the following topics:

- “Networking With SunPCi III Hardware and Software” on page 33
- “Setting Up Networking With SunPCi III Hardware and Software” on page 35

This chapter includes instructions for completing the following tasks:

- “How to Set TCP/IP Properties” on page 35
- “How to Set Up Physical Ethernet Networking” on page 36
- “How to Set Up Virtual Ethernet Networking” on page 36

---

## Networking With SunPCi III Hardware and Software

There are two ways to connect each SunPCi III card to your network:

- *Physical Ethernet* – Use the external Ethernet connector on the back of the SunPCi III card and connect the card to a second physical Ethernet connection.
- *Virtual Ethernet* – Use the internal networking driver (NDIS driver) in the SunPCi III software and connect through your system’s Ethernet connection.

---

**Note** – When more than one SunPCi III card is installed in a system, virtual networking is disabled by the SunPCi III software.

---

Physical Ethernet networking is faster than virtual Ethernet, but it requires an additional port to connect to your network. This means that you need to have two separate Ethernet connections: one for your Solaris system, and one for your SunPCi III card.

Physical Ethernet networking eliminates the need for routing to a third host in order for the Solaris system and the SunPCi III card to communicate with each other over the Transmission Control Protocol/Internet Protocol (TCP/IP). Once physical Ethernet networking is set up, you can “see” both your SunPCi III card and your workstation in the list of network hosts.

---

**Note** – When you install the SunPCi III software, physical Ethernet networking is turned on by default in Windows XP, Windows 2000, and Windows NT, but not in Windows 98.

---

Virtual Ethernet networking eliminates the need for a second network port. You share a single Ethernet connection between your system and your SunPCi III card. If you use virtual networking, you are not able to generate a network path between your SunPCi III card and your host Solaris system until you set up network connections. When multiple cards are installed in a system, virtual Ethernet networking is permanently disabled.

For specific instructions on the networking drivers for your version of Microsoft Windows, refer to the corresponding installation chapter.

- To install the Windows XP Professional drivers, refer to Chapter 5.
- To install the Windows 2000 drivers, refer to Chapter 6.
- To install the Windows NT drivers, refer to Chapter 7.
- To install the Windows 98 drivers, refer to Chapter 8.



---

**Caution** – When one SunPCi III card is installed with the SunPCi III software, you can use either physical or virtual networking, but not both at once.

---

---

**Note** – When multiple cards are installed in your system, virtual networking is automatically disabled and you need to configure the TCP/IP network protocols for all Microsoft Windows configurations.

---

---

# Setting Up Networking With SunPCi III Hardware and Software

Setting up networking with SunPCi hardware and software involves setting TCP/IP properties, setting up either physical or virtual Ethernet networking, and setting up network connections between SunPCi III cards and your UltraSPARC system.

## ▼ How to Set TCP/IP Properties

Before you can configure TCP/IP, you need to obtain certain information from the network administrator at your site.

### 1. Obtain the following information before you begin:

- Your SunPCi III computer name (the name you enter when you install Microsoft Windows)
- If you are not using Dynamic Host Configuration Protocol (DHCP) to obtain an IP address, you also need:
  - The IP address for your SunPCi III card

---

**Note** – The IP address for your SunPCi III card must be different from your workstation's IP address.

---

- The subnet mask for your site's network
- The IP address for your router or gateway (if used)

---

**Note** – If you are using virtual networking, you cannot use DHCP for both your UltraSPARC system and the SunPCi III card.

---

- The host name, domain name, and IP address for each Domain Name Service (DNS) server at your site (if used)

### 2. To configure TCP/IP, use the Network utility in Control Panel in Microsoft Windows.

Enter the information you obtained into the corresponding fields. For more information, refer to Microsoft Windows documentation.

---

**Note** – Microsoft Windows provides a number of different ways to install hardware. Follow the instructions in this section, even if you have installed hardware before.

---

## ▼ How to Set Up Physical Ethernet Networking

To configure the physical Ethernet network, perform the following steps:

1. **Connect the RJ-45 connector on the Ethernet cable to the Ethernet port on the back of the SunPCi III card.**
2. **Connect the other end of the cable to the network's Ethernet port.**
3. **Restart Microsoft Windows.**
4. **If you have not already set up TCP/IP, refer to the previous section.**

## ▼ How to Set Up Virtual Ethernet Networking

---

**Note** – When more than one SunPCi III card is installed in a system, virtual networking is disabled by the SunPCi III software on Windows 2000, Windows XP, and Windows NT.

---

If you changed networks or network properties, or if you did not set up the network during the installation process, you need to configure TCP/IP to connect to your network. Refer to the documentation that came with your version of Microsoft Windows and to “How to Set TCP/IP Properties” on page 35.

- **To configure virtual networking:**
  - In Windows XP Professional, refer to “Configuring Virtual Ethernet Networking for Windows XP Professional” on page 51.
  - In Windows 2000, refer to “Configuring Virtual Ethernet Networking for Windows 2000” on page 69.
  - In Windows NT, refer to “Configuring Virtual Ethernet Networking for Windows NT” on page 85.
  - In Windows 98, refer to “Configuring Virtual Ethernet Networking for Windows 98” on page 96.

---

**Note** – If you are using DHCP with virtual networking, you might observe that the network takes several minutes to start after you configure the network and restart Microsoft Windows. This is normal behavior during the first reboot after you set up the network.

---

To diagnose problems with your network, see Appendix A, “Troubleshooting” on page 141.



# Using Windows XP Professional

---

This chapter describes how to install and configure Microsoft Windows XP Professional on your SunPCi III system. It also describes how to upgrade an existing emulated drive to Windows XP Professional.

This chapter includes the following topics:

- “Installing Windows XP Professional” on page 40
- “Upgrading to Windows XP Professional” on page 43
- “Upgrading Windows NT4 WS to Windows XP Professional” on page 43
- “Upgrading Windows 2000 Professional to Windows XP Professional” on page 45
- “Upgrading Windows 98 to Windows XP Professional” on page 47
- “Installing Japanese Windows XP Professional” on page 48

This chapter includes instructions for completing the following tasks:

- “How to Perform a Custom Installation” on page 41
- “How to Reinstall Windows XP Professional” on page 42
- “How to Upgrade Windows NT4 WS to Windows XP Professional” on page 44
- “How to Upgrade Windows 2000 Professional to Windows XP Professional” on page 45
- “How to Upgrade Windows 98 to Windows XP Professional” on page 48
- “How to Perform an Automatic Installation” on page 49
- “How to Perform a Manual Installation” on page 50
- “How to Remove a Static IP Address” on page 52
- “How to Add a Virtual Network Adapter” on page 52
- “How to Configure the Network for Windows XP Professional” on page 54
- “How to Reconfigure the Network Adapter for Physical Ethernet” on page 55
- “How to Configure External Video Drivers for Windows XP Professional” on page 57
- “How to Configure Windows XP Professional for External Video Use” on page 59
- “How to Configure External Video Back to the System Monitor” on page 60

Throughout this chapter, Microsoft Windows XP Professional is referred to as Windows XP Professional.

---

# Installing Windows XP Professional

You install operating system software when you create an emulated drive by choosing Create a New Emulated Drive from the SunPCi Options menu. See “Emulated Drives and SunPCi III Software” on page 13. If you want to perform a custom installation using scripts that differ from the standard Microsoft installation scripts, see “How to Perform a Custom Installation” on page 41.

---

**Tip** – Before starting an installation or installation upgrade, disable anti-virus software.

---

---

**Note** – This release does not support simultaneous operation of Windows XP Professional on both the system monitor and external monitors.

---

## Installation Notes

Make sure that you have the following media and information available before you begin installation:

- Windows XP Professional retail installation software CD
- Customized installation scripts, if needed
- The network system name for each SunPCi III card installed in your system
- The workgroup or domain name for your Windows XP Professional installation on each SunPCi III card installed in your system

---

**Note** – When you install or upgrade to Windows XP Professional, a dialog box might appear that contains information about display settings. The mouse is disabled at this point, and you must use the Tab and Return keys to click buttons in the dialog box and also in the settings confirmation dialog box that might follow. The mouse is enabled after doing this.

---

## ▼ How to Perform a Custom Installation



---

**Caution** – When you specify an operating system to auto-install in the Create a New Emulated Drive dialog box, the software automatically finds and copies setup files, boot files, system files, and drivers that are appropriate for that operating system. The software also launches Windows Setup when SunPCi software reboots. Do not perform a custom installation unless you want to use customized installation scripts.

---

### 1. Create a new emulated hard drive and auto-install the DR DOS 7.01 operating system software.

See “Emulated Drives and SunPCi III Software” on page 13. Set options in the Create a New Emulated Drive dialog box as follows:

- Select DR DOS 7.01 as the operating system to auto-install.
- Be sure to make the drive at least 2 Gbytes in size, which can be expanded later if needed.
- Attach the drive as a C: drive.
- For best performance, create your emulated drives on a local hard disk on your workstation or server.

### 2. Click OK when the dialog box asks you to reboot the SunPCi III software.

The SunPCi III software reboots. The OpenDOS prompt (C:\>) opens.

### 3. Install the SunPCi III drivers.

The default location for the Windows XP Professional files is `r:\cdrom\cdrom0\i386`. However, if your Windows XP Professional files reside at a location other than the default one, you need to use the `/s:` switch to specify where the files are located. For example, if your Windows XP Professional disk image is located in your Solaris directory at `/export/home/winxp`, you would access it from the R: drive in OpenDOS.

---

**Note** – Copy all the contents of the installation CD files to the `winxp` folder before starting the installation.

---

Type the following command all on one line:

```
C:\> f:\drivers\winxp\setupwpx /s:r:\export\home\winxp\i386
```

The setup process takes a few minutes to complete. SunPCi III software responds with the following messages:

```
Copying Setup Files...
Copying Boot Files...
Copying System Files...
Copying Optional Files...
Copying Assembly Files...
Copying SunPCi Installation Files...
```

When the `setupwpxp` script finishes copying the Windows XP Professional files to your C: drive, it reboots the SunPCi III software. The Windows XP Professional Setup screen opens. When Windows XP Professional Setup finishes copying files, it reboots the SunPCi III software again.

4. **After the SunPCi III software reboots from the Windows XP Professional window, choose Attach Mouse from the Options menu or press Meta-M to attach the mouse.**

This enables the mouse to work with Windows XP Professional during the installation process. Once the installation is complete, the proper mouse drivers are installed and you no longer need to attach the mouse manually.

5. **Change directory to the location for your customized installation scripts.**
6. **Complete the installation using your customized installation scripts.**

## ▼ How to Reinstall Windows XP Professional



---

**Caution** – Do not use the Windows XP Professional Setup option in the Autorun dialog box to reinstall Windows XP Professional. Using this option results in a Windows XP Professional “blue screen” error and a message indicating an inaccessible boot device.

---

- **If you need to reinstall the standard version of Windows XP Professional; use the Add/Remove Software utility in the Control Panel or in the Autorun dialog box that appears when you insert the Windows XP Professional CD.**

---

# Upgrading to Windows XP Professional

In SunPCi III software, you can upgrade emulated disk drive images. You can upgrade an existing C: drive that is configured for any of the following operating systems discussed in these sections:

- “Upgrading Windows NT4 WS to Windows XP Professional” on page 43
- “Upgrading Windows 2000 Professional to Windows XP Professional” on page 45
- “Upgrading Windows 98 to Windows XP Professional” on page 47

## Upgrade Notes

Make sure that you have the following media and disk drive space available before you start an upgrade to Windows XP Professional:

- The Windows XP Professional retail software installation CD; the installation will *not* work without the CD in your CD-ROM drive
- At least 2 Gbytes of available space on your emulated C: drive

---

**Tip** – Before you perform the upgrade, make a backup copy of your existing C: emulated drive file.

---

---

**Note** – Before upgrading, you should update the Intel drivers on your system. Refer to “Updating Intel Drivers” on page 118 for more information.

---

---

## Upgrading Windows NT4 WS to Windows XP Professional



---

**Caution** – Follow the instructions in this section carefully to perform the upgrade. The setup and configuration procedures for the SunPCi III program involve some steps that differ from the Microsoft upgrade steps. Do not use the standard Microsoft upgrade procedure provided on the Windows XP Professional CD or the installation will fail and your emulated C: drive can become corrupted.

---

# Before You Begin the Upgrade



---

**Caution** – If you are using an external CD-RW drive with Windows NT4 WS, un-install the device. The upgrade to Windows XP Professional will fail unless the device is removed and its software uninstalled. Reinstall the drive after the upgrade.

---

Before starting to upgrade a new Windows NT4 WS package to Windows XP Professional, you must update your Intel drivers. Refer to “Updating Intel Drivers” on page 118 for information on updating drivers.

---

**Note** – When upgrading from Windows NT to Windows XP Professional, a blank dialog box opens. This happens after the Dynamic Update completes, and when the Preparing Installation radio button on the left pane of the Windows XP Professional Installation Wizard is selected. This dialog box soon disappears and the installation process continues normally.

---

## ▼ How to Upgrade Windows NT4 WS to Windows XP Professional

1. **Insert the Windows XP Professional CD into your system’s CD-ROM drive.**
2. **Click Start and then choose Programs and Windows Explorer.**  
The Windows Explorer window opens.
3. **In Windows Explorer, navigate to the following path:**

```
C:\sun\wxpupg\upgrade.bat
```

---

**Note** – If you cannot find this directory on your C: drive, either you have installed the wrong version of the SunPCi III software, or you did not update your SunPCi III drivers.

---

4. **Double-click** `upgrade.bat`.  
The upgrade process continues. This program automatically maps a network drive for its own use. If you do not have a network drive letter available in Windows Explorer, the process fails.

---

**Note** – If you do not have the Windows XP Professional CD in your CD-ROM drive, the upgrade process fails at this step. To continue with the upgrade, unmap a network drive to make a drive letter available for this upgrade.

---

**5. Follow the prompts on the screen and enter the information that Microsoft Windows requests.**

For example, the CD key on the back of your CD case, your administrator's password, and so on.

When you are finished entering all the information, the SunPCi III software reboots into Windows XP Professional.

---

**Tip** – This step can take several minutes to complete.

---

---

## Upgrading Windows 2000 Professional to Windows XP Professional



---

**Caution** – Follow the instructions in this section carefully to perform the upgrade. The setup and configuration procedures for the SunPCi III program involve some steps that differ from the Microsoft upgrade steps. Do not use the standard Microsoft upgrade procedure provided on the Windows XP Professional CD or the installation will fail and your emulated C: drive can become corrupted.

---

### Before You Begin the Upgrade

Before starting to upgrade Windows 2000 Professional to Windows XP Professional, you must update your Intel drivers. Refer to “Updating Intel Drivers” on page 118 for information on updating drivers.

## ▼ How to Upgrade Windows 2000 Professional to Windows XP Professional

- 1. Insert the Windows XP Professional CD into your system's CD-ROM drive.**

**2. Click the Start button, choose Programs and Windows Explorer.**

The Windows Explorer window opens.

**3. In Windows Explorer, navigate to the following path:**

C:\sun\wxpupg\upgrade.bat

---

**Note** – If you cannot find this directory on your C: drive, either you have installed the wrong version of the SunPCi III software, or you did not update your SunPCi III drivers.

---

**4. Double-click** Upgrade.bat .

The upgrade process continues. This program automatically maps a network drive for its own use. If you do not have a network drive letter available in Windows Explorer, the process fails.

---

**Note** – If you do not have the Windows XP Professional CD in your CD-ROM drive, the upgrade process fails at this step. To continue with the upgrade, unmap a network drive to make a drive letter available for this upgrade.

---

**5. Follow the prompts on the screen and enter the information that Microsoft Windows requests.**

For example, the CD key on the back of your CD case, your administrator's password, and so on.

When you are finished entering all the information, the SunPCi III software reboots again into Windows XP Professional.

---

**Tip** – This step can take several minutes to complete.

---

---

# Upgrading Windows 98 to Windows XP Professional



---

**Caution** – Follow the instructions in this section carefully to perform the upgrade. The setup and configuration procedures for the SunPCi III program involve some steps that differ from the Microsoft upgrade steps. Do not use the standard Microsoft upgrade procedure provided on the Windows XP Professional CD or the installation will fail and your emulated C: drive can become corrupted.

---

## Before You Begin the Upgrade

Before starting to upgrade Windows 98 to Windows XP Professional, follow these steps:

1. **Start the SunPCi software.**
2. **Click Start and choose Run.**
3. **Type the following path into the Run dialog box:**

```
f:\drivers\win98\setup.exe
```

The SunPCi dialog box opens.

4. **Click the Update existing drivers radio button.**
5. **Click Next.**

The Welcome dialog box opens.

6. **Click Next.**

The update process starts and several icons and dialog boxes open and close in the window. The Restarting Windows dialog box opens.

7. **Click the Yes, I want to restart my computer now radio button.**
8. **Click OK.**

SunPCi restarts.

Proceed to the next section of the upgrade procedure.

## ▼ How to Upgrade Windows 98 to Windows XP Professional

1. **Insert the Windows XP Professional CD into your system's CD-ROM drive.**
2. **Click the Start button, and choose Programs and Windows Explorer.**  
The Windows Explorer window opens.
3. **In Windows Explorer, navigate to the following path:**

```
f:\drivers\win98\wxpupg\upgrade.bat
```

4. **Double-click** Upgrade.bat.

The upgrade process continues. This program automatically maps a network drive for its own use. If you do not have a network drive letter available in Windows Explorer, the process fails.

---

**Note** – If you do not have the Windows XP Professional CD in your CD-ROM drive, the upgrade process fails at this step. To continue with the upgrade, unmap a network drive to make a drive letter available for this upgrade.

---

5. **Follow the prompts on the screen and enter the information that Microsoft Windows requests.**

For example, the CD key on the back of your CD case, your administrator's password, and so on.

When you are finished entering all the information, the SunPCi II software reboots again into Windows XP Professional.

---

**Tip** – This step can take several minutes to complete.

---

---

## Installing Japanese Windows XP Professional

There are two ways to install the Japanese version of Windows XP Professional on SunPCi III: the automatic method and the manual method.

## ▼ How to Perform an Automatic Installation

To install the Japanese version of Windows XP Professional using the automatic method, perform the following steps:

1. **Insert the Japanese Windows XP Professional CD into your system's CD-ROM drive.**

1. **Start the SunPCi software.**

2. **Click OK.**

The Create a New Emulated Drive dialog box opens.

3. **In the Select an Operating System pane, select either Windows XP Professional-FAT16 or Windows XP Professional-NTFS.**

4. **Click the radio button to attach the drive as a C: drive.**

5. **Move the slider to make the size of the drive at least 4 Gbytes.**

6. **Specify the directory and file name for the drive and click OK.**

SunPCi III software restarts after the disk drive is created.

7. **Type `y` and press Return when this message appears:**

This cdrom appears to be Japanese Windows, is that correct?

8. **Choose Options, and select Create a New Emulated Drive from the SunPCi III window.**

The Create a New Emulated Drive dialog box opens.

9. **In the Select an Operating System pane, select DR DOS 7.01 (Bootable).**

10. **Attach this drive as the D: drive.**

11. **Move the slider to make the size of the drive at least 4 Gbytes.**

12. **Specify the directory and file name for the drive and click OK.**

13. **Click OK when you receive a message asking you to shut down Windows and reset SunPCi III.**

14. **Choose File, then select Reset PC from the SunPCi III window.**

When the system finishes copying files, the SunPCi III software restarts.

**15. When the Windows XP Professional operating system asks where to install Windows, install the software to the C: drive.**

The installation routine continues. Follow the steps displayed on the screen. After you finish the installation, you can detach the D: drive, delete the emulated drive file, and remove it from your `SunPC.ini` file.

## ▼ How to Perform a Manual Installation

To install the Japanese version of Windows XP Professional using the manual method, perform the following steps:

**1. Insert the Japanese Windows XP Professional CD into your system's CD-ROM drive.**

**2. Start the SunPCi software.**

**3. Click OK.**

The Create a New Emulated Drive dialog box opens.

**4. In the Select an Operating System pane, select DR DOS 7.01 (Bootable).**

**5. Click the radio button to attach the drive as a C: drive.**

**6. Move the slider to make the size of the drive at least 4 Gbytes.**

**7. Specify the directory and file name for the drive and click OK.**

SunPCi III software reboots after the disk drive is created.

**8. Choose Options, then select Create a New Emulated Drive from the SunPCi III window.**

The Create a New Emulated Drive dialog box opens.

**9. In the Select an Operating System pane, select DR DOS 7.01 (Bootable).**

**10. Click the radio button to attach this drive as the D: drive.**

**11. Move the slider to make the size of the drive at least 4 Gbytes.**

**12. Specify the directory and file name for the drive and click OK.**

**13. Click OK when you receive a message asking you to shut down Windows and reset SunPCi III.**

**14. Choose File, then select Choose Reset PC from the SunPCi III window.**

**15. Create a file system for the emulated drive as follows:**

- To create a FAT file system on the drive, type the following at the C:\> prompt and press Return:

```
f:\drivers\winxp\setupwpxp /td
```

- To create an NTFS file system for the emulated drive, type the following at the C:\> prompt and press Return:

```
f:\drivers\winxp\setupwpxp /td /NTFS:max
```

When the system finishes copying the files, SunPCi III software restarts.

**16. When the Windows XP Professional operating system asks where to install Windows, install the software to the C: drive.**

The installation routine continues. Follow the steps displayed on the screen. After you finish the installation, you can detach the D: drive, delete the emulated drive file, and remove it from your `SunPC.ini` file.

---

## Configuring Virtual Ethernet Networking for Windows XP Professional

The SunPCi III software comes with *physical* Ethernet networking enabled by default. If you prefer to use *virtual* networking, you need to disable the physical Ethernet adapter in Microsoft Windows and install the virtual Ethernet adapter. This section explains the steps you need to follow.

---

**Note** – When more than one SunPCi III card is installed in a system, virtual networking is disabled by the SunPCi III software.

---

---

**Caution** – Do not enable both virtual and physical networking at the same time.

---



For more information about physical and virtual Ethernet networking, refer to “Setting Up Networking With SunPCi III Hardware and Software” on page 35.

To set up virtual Ethernet networking for Windows XP Professional, follow the steps outlined in the next procedure. This procedure explains how to configure the network adapter.

---

**Note** – Microsoft Windows provides a several different ways to install software. Follow the instructions in this section, even if you have installed Microsoft Windows software previously. The SunPCi III 3.0 software does not support other methods of installation.

---

## ▼ How to Remove a Static IP Address

If you were using physical networking, and had previously defined a static IP address, follow these steps to remove the address. If not, skip to the next procedure.

- 1. On the Windows XP Professional desktop, right-click My Network Places.**  
A drop-down menu opens.
- 2. Choose Properties.**  
The Display Properties dialog box opens.
- 3. Right-click Local Area Connection.**
- 4. Choose Properties.**  
The Local Area Connection Properties dialog box opens.
- 5. Double-click Internet Protocol (TCP/IP).**  
The Internet Protocol (TCP/IP) Properties dialog box opens.
- 6. Delete the existing IP address.**
- 7. Click the Obtain an IP Address Automatically radio button.**
- 8. Click OK to close the Internet Protocol (TCP/IP) Properties dialog box.**
- 9. Click OK to close the Local Area Connection Properties dialog box.**
- 10. Close the Network and Dial-up Connection window.**

## ▼ How to Add a Virtual Network Adapter

- 1. On the Windows XP Professional desktop, right-click My Computer.**  
A drop-down menu opens.

**2. Choose Properties.**

The System Properties dialog box opens.

**3. Click the Hardware tab.**

**4. Click Device Manager.**

The Device Manager window opens with a list of installed device drivers.

**5. Double-click Network Adapters.**

**6. Right-click VIA PCI 10/100 Mb Ethernet Adapter.**

**7. Click Disable.**

A message opens saying that disabling this device will cause it to stop functioning.

**8. Click Yes.**

**9. Click OK to close the System Properties dialog box.**

**10. Close the Device Manager window.**

This completes the first section of this task. Proceed with the second section to complete adding a virtual network adapter.

**1. Click Start and choose Settings and Control Panel from the Windows XP Professional menu.**

**2. Double-click Add Hardware.**

The Add Hardware Wizard dialog box opens.

**3. Click Next.**

The Add Hardware Wizard dialog box opens.

**4. Click the Yes, I have already connected the hardware radio button.**

**5. Click Next.**

**6. Click Add a New Hardware Device.**

**7. Click Next.**

**8. Click the Install the hardware that I manually select from a list [Advanced] radio button.**

A dialog box opens asking what type of hardware you are installing.

**9. Click Next.**

**10. Click the Network adapters options.**

**11. Click Next.**

The Add/Remove Hardware Wizard opens.

**12. Click Have Disk.**

**13. Click Browse.**

**14. Navigate to** `c:\sun\sunnet\winxp\sunndis.inf`.

The Locate File dialog box opens.

**15. Click Open.**

The Install From Disk dialog box opens.

**16. Click OK.**

The Select Network Adapter dialog box opens.

**17. Click Next.**

A dialog box opens listing the SunNDIS Adapter Driver as the new hardware to install.

**18. Click Next.**

Files are copied and the Completing Add Hardware Wizard dialog box opens.

**19. Click Finish.**

If you are asked to restart the computer, click Yes to complete the configuration.

To make the virtual adapter function in the network, you need to complete the procedure “How to Configure the Network for Windows XP Professional” on page 54.

## ▼ How to Configure the Network for Windows XP Professional

After you finish configuring the virtual or the physical network adapter and restart Windows XP Professional, you need to configure *one* of the adapters to use TCP/IP. Log in to Windows XP Professional again and follow the steps in this procedure.



---

**Caution** – Do not activate a virtual and a physical network adapter at the same time. Verify that you have disabled the virtual or physical adapter before performing the following procedure.

---

**1. From the Start menu, choose Control Panel, and then choose Network Connections.**

The Network Connections window opens. The window contains three icons: Make New Connection, Local Area Connection, and Local Area Connection 2.

---

**Tip** – If you attempt this operation several times, you might see more than the initial three icons in the window.

---

**2. Right-click Local Area Connection or Local Area Connection 2.**

Your choice of 2 or not depends on *which* Ethernet adapter is enabled. The Status window opens. A drop-down menu opens

**3. Click Properties.**

The Local Area Connection Properties window opens.

**4. Double-click Internet Protocol (TCP/IP).**

The Internet Protocol (TCP/IP) Properties window opens.

**5. Set up TCP/IP for your SunPCi III card as described in “How to Set TCP/IP Properties” on page 35.**

Refer to your Windows XP documentation if needed.

**6. When you finish setting up TCP/IP, click OK to close the Internet Protocol (TCP/IP) Properties dialog box.**

**7. Click OK to close the Local Area Connection Properties dialog box.**

**8. Click OK to close the Local Area Connection Status dialog box.**

**9. Close the Network and Dial-up Connections.**

**10. Click Yes to restart Microsoft Windows.**

---

**Note** – If you see a dialog box with the message “SunNDIS failed to start,” ignore the message and click OK. This message sometimes appears when DHCP networking is disabled.

---

## ▼ How to Reconfigure the Network Adapter for Physical Ethernet

If you need to reactivate the physical network adapter, follow these steps.



---

**Caution** – Do not activate a virtual and a physical network adapter at the same time. Verify that you have disabled the virtual adapter before performing the following procedure.

---

**1. On the Windows XP Professional desktop, right-click My Computer.**

A drop-down menu opens.

**2. Choose Properties.**

The System Properties dialog box opens.

**3. Click the Hardware tab.**

**4. Click Device Manager.**

The Device Manager window opens, listing the computer's installed device drivers.

**5. Click the computer name.**

**6. Double-click Network Adapters.**

**7. If you configured a static IP address for virtual networking, perform the procedure "How to Remove a Static IP Address" on page 52.**

**8. Right-click the SunNDIS Virtual Adapter.**

**9. Click Disable.**

A dialog box opens saying that disabling this device causes the adapter to stop functioning.

**10. Click Yes.**

**11. Right-click the VIA PCI 10/100 Mb Ethernet Adapter.**

A drop-down menu opens

**12. Click Enable.**

**13. Close the Device Manager window.**

**14. Click OK to close the System Properties dialog box.**

To enable the physical adapter to use TCP/IP in the network, you need to complete the procedure "How to Configure the Network for Windows XP Professional" on page 54.

## ▼ How to Configure External Video Drivers for Windows XP Professional

To use an external monitor, you need to attach the monitor to the SunPCi III main card backplate and install the external video driver.



---

**Caution** – Do not use both system and external monitors at the same time. SunPCi III 3.0 software does not support multi-headed operation.

---

**1. Attach the monitor to the external video port connector on the SunPCi III main card backplate.**

Refer to FIGURE 10-1 to find the location of the external video port.

**2. Start the SunPCi software.**

**3. On the Windows XP Professional desktop, right-click My Computer.**

A drop-down menu opens.

**4. Click Manage.**

The Computer Management window opens.

**5. Double-click Device Manager.**

**6. Double-Click Display Adapters.**

A list of the available display adapters opens.

**7. Double-click S3 Graphics ProSavage DDR (No driver installed).**

The Properties window opens.

**8. Click the Driver tab.**

**9. Click Update Driver.**

The Hardware Update Wizard dialog box opens.

**10. Click the Install from a list or specific location (Advanced) radio button.**

**11. Click Next.**

**12. Click the Don't search, I will choose the driver install radio button.**

**13. Click Next.**

**14. Click Have Disk.**

**15. Click Browse.**

- 16. Navigate to `c:\sun\viavideo\WINXP\PS5333.inf`.**  
The Locate File dialog box opens.
- 17. Click Open.**  
The dialog box opens with the path included.
- 18. Click OK.**  
S3 Graphics ProSavage DDR and S3 Graphics ProSavage DDR (No driver installed) open in the dialog box.
- 19. Click the S3 Graphics ProSavage DDR option.**  
When the installation is finished, the Completing the Hardware Update Wizard dialog box opens.
- 20. Click Next.**
- 21. Click Finish.**
- 22. Click Close in the S3 Graphics ProSavage DDR Properties window.**  
A dialog box opens, asking whether you want to restart your system for the hardware changes to take effect.
- 23. Click No.**
- 24. Close the Computer Management window.**
- 25. From the Start menu, choose Turn Off Computer.**  
The Shut Down Windows dialog box opens.
- 26. Click Turn Off.**  
Windows XP Professional closes and the SunPCi splash screen opens stating "You may now exit or reset SunPCi."
- 27. From the File menu in SunPCi, choose Exit.**  
The SunPCi Exit dialog box opens.
- 28. Click Exit Now.**  
SunPCi closes.
- 29. At the Solaris system prompt, restart the SunPCi III software using the `-v` option:**

```
% /opt/SUNWspci3/bin/sunpci -v
```

---

**Note** – If you do not use the `-v` option, the Sun display will appear scrambled.

---

The SunPCi III software starts, and Windows XP opens first on the external monitor, and then on your system monitor in the SunPCi III window. You are now ready to configure the Windows XP display as described in the following procedure.

## ▼ How to Configure Windows XP Professional for External Video Use

For more information about configuring the display in Windows XP Professional, refer to your Windows XP Professional documentation.

**1. On the Windows XP Professional desktop, choose right-click.**

A drop-down menu opens.

**2. Choose Properties.**

The Display Properties dialog box opens.

**3. Click the Settings tab.**

---

**Note** – There are two displays shown in the window, marked 1 and 2. Video 2 is highlighted, showing that it (the system monitor) is the primary display. Video 1 is dimmed, indicating that it is not the primary display.

---

**4. Click Video 1.**

The driver listed underneath the video changes to Default Monitor on S3 Graphics ProSavage DDR.

**5. Click the “Extend my Windows desktop onto this monitor” check box.**

**6. Click the “Use this device as the primary monitor” check box.**

**7. Click Video 2.**

The driver listed underneath the video changes back to Sun Microsystems SunPCi Video.

**8. Uncheck the “Extend my Windows desktop onto this monitor” check box.**

The icons representing Video 1 and Video 2 change position, so that Video 1 appears first.

**9. Click Apply.**

Your external monitor is now active in Windows XP Professional. Your system monitor shows an empty SunPCi window with Video routed to external monitor in the title bar.

**10. Click OK to close the Display Properties dialog box.**

You can now use external video with Windows XP Professional. Refer to your Windows XP Professional documentation for more information.

## ▼ How to Configure External Video Back to the System Monitor

**1. On the Windows XP Professional desktop, choose right-click.**

A drop-down menu opens.

**2. Choose Properties.**

The Display Properties dialog box opens.

**3. Click the Settings tab.**

**4. Click Video 2.**

The driver listed underneath the video changes to Default Monitor on Sun Microsystems on SunPCi video.

**5. Click the “Extend my Windows desktop onto this monitor” check box.**

**6. Click the “Use this device as the primary monitor” check box.**

**7. Click Video 1.**

The driver listed underneath the video changes back to Sun Microsystems SunPCi Video.

**8. Uncheck the “Extend my Windows desktop onto this monitor” check box.**

**9. Click Apply.**

Your workstation monitor is now active in Windows XP Professional.

**10. Click OK to close the Display Properties dialog box.**

You can now use external video with Windows XP Professional. Refer to your Windows XP Professional documentation for more information.

# Using Windows 2000 Professional or Windows 2000 Server

---

This chapter describes how to install and configure Microsoft Windows 2000 Professional and Microsoft Windows 2000 Server Edition operating system software for use with the SunPCi III product. It also describes how to upgrade your operating system from Windows NT to Windows 2000.

This chapter includes the following topics:

- “Installing Windows 2000” on page 62
- “Upgrading Windows NT to Windows 2000” on page 65
- “Upgrading Windows NT4 WS to Windows 2000 Professional” on page 65
- “Upgrading Windows NT4 TS to Windows 2000 Server” on page 67
- “Configuring Virtual Ethernet Networking for Windows 2000” on page 69

This chapter includes instructions for completing the following tasks:

- “How to Perform a Custom Installation” on page 63
- “How to Reinstall Windows 2000” on page 64
- “How to Upgrade Windows NT4 WS to Windows 2000 Professional” on page 66
- “How to Upgrade Windows NT4 TS to Windows 2000 Server” on page 68
- “How to Remove a Static IP Address” on page 70
- “How to Add a Virtual Network Adapter” on page 71
- “How to Configure the Network for Windows 2000” on page 72
- “How to Reconfigure the Network Adapter for Physical Ethernet” on page 74
- “How to Configure External Video Drivers for Windows 2000” on page 75
- “How to Configure Windows 2000 for External Video Use” on page 77
- “How to Configure External Video Back to the System Monitor” on page 78
- “How to Configure the MouseKeys Accessibility Option” on page 79

Throughout this chapter, Microsoft Windows 2000 Professional is referred to as Windows 2000 Professional, and Microsoft Windows 2000 Server Edition is referred to as Windows 2000 Server. In some sections in this chapter, Windows 2000 refers to both operating systems.

---

**Tip** – Throughout this chapter, wherever the installation and configuration of the Windows 2000 Server differs from the Windows 2000 Professional installation, a Tip for a server procedure follows the description.

---

---

## Installing Windows 2000

You install operating system software when you create an emulated drive by choosing Create a New Emulated Drive from the SunPCi Options menu. See “Emulated Drives and SunPCi III Software” on page 13. If you want to perform a custom installation using scripts that differ from the standard Microsoft installation scripts, see “How to Perform a Custom Installation” on page 63.

---

**Tip** – Before starting an installation or installation upgrade, disable anti-virus software.

---



---

**Caution** – SunPCi III 3.0 also does not support simultaneous operation of Windows 2000 on both the system and external monitors.

---

---

**Note** – The SunPCi III 3.0 software release does not support upgrading from Windows 98 to the Windows 2000 operating system

---

## Installation Notes

Make sure that you have the following media and information available before you begin installation:

- Windows 2000 retail installation software CD
- Customized installation scripts, if needed
- The network system name for each SunPCi III card installed in your system
- The workgroup or domain name for your Windows 2000 installation on each SunPCi III card installed in your system

## ▼ How to Perform a Custom Installation



---

**Caution** – When you specify an operating system to auto-install in the Create a New Emulated Drive dialog box, the software automatically finds and copies setup files, boot files, system files, and drivers that are appropriate for that operating system. The software also launches Windows Setup when SunPCi software reboots. Do not perform a custom installation unless you want to use customized installation scripts.

---

### 1. Create a new emulated hard drive and auto-install the DR DOS 7.01 operating system software.

See “Emulated Drives and SunPCi III Software” on page 13. Set options in the Create a New Emulated Drive dialog box as follows:

- Select DR DOS 7.01 as the operating system to auto-install.
- Make the drive at least 2 Gbytes in size, which can be expanded later if needed.
- Attach the drive as a C: drive.
- For best performance, create your emulated drives on a local hard disk on your workstation or server.

### 2. Click OK when the dialog box asks you to reboot the SunPCi II software.

The SunPCi III software reboots. The OpenDOS prompt (C:\>) opens.

### 3. Install the SunPCi III drivers.

The default location for the Windows 2000 files is `r:\cdrom\cdrom0\i386`. However, if your Windows 2000 files reside at a location other than the default one, you need to use the `/s:` switch to specify where the files are located. For example, if your Windows 2000 disk image is located in your Solaris directory at `/export/home/win2k`, you would access it from the R: drive in OpenDOS.

---

**Note** – Copy all the contents of the installation CD files to the `win2k` folder before starting the installation.

---

Type the following command all on one line:

```
C:\> f:\drivers\win2k\setupw2k /s:r:\export\home\win2k\i386
```

The setup process takes a few minutes to complete. SunPCi III software responds with the following messages:

```
Copying Setup Files...
Copying Boot Files...
Copying System Files...
Copying Optional Files...
Copying SunPCi Installation Files...
```

When the `setupw2k` script finishes copying the Windows 2000 files to your C: drive, it reboots the SunPCi III software. The Windows 2000 Setup screen opens. When Windows 2000 Setup has finished copying files, it reboots the SunPCi III software again.

---

**Tip** – The SunPCi III messages are for the Windows 2000 Professional setup. The Windows 2000 Server messages differ slightly.

---

---

**Note** – Your mouse may not be active during the following installation process. Use the Tab key and the arrow keys to navigate the Windows 2000 Setup screens.

---

**4. After the SunPCi III software reboots from the Windows 2000 window, choose Attach Mouse from the Options menu or press Meta-M to attach the mouse.**

This enables the mouse to work with Windows 2000 during the installation process. Once the process is completed, the proper mouse drivers are installed and you no longer need to attach the mouse manually.

- 5. Change directory to the location for your customized installation scripts.**
- 6. Complete the installation using your customized installation scripts.**

## ▼ How to Reinstall Windows 2000



---

**Caution** – Do not use the Windows 2000 Setup option in the Autorun dialog box to reinstall Windows 2000. Using this option results in a Windows 2000 “blue screen” error and a message indicating an inaccessible boot device.

---

- **If you need to reinstall a standard version of Windows 2000; use the Add/Remove Software utility in the Control Panel screen or in the Autorun dialog box that appears when you insert the Windows 2000 CD.**

---

# Upgrading Windows NT to Windows 2000

In SunPCi III 3.0 software, you can upgrade the emulated disk drive images. To upgrade an existing C: drive, perform one of the following upgrades:

- From Windows NT4 WS to Windows 2000 Professional
- From Windows NT4 TS to Windows 2000 Server

---

**Tip** – Use Service Pack 3 to update either Windows 2000 upgrade.

---

## Upgrade Notes

Make sure that you have the following media and disk drive space available before you start an upgrade to Windows 2000:

- The retail Windows 2000 Professional CD or Windows 2000 Server installation CD. The installation will *not* work without the retail installation CD in your CD-ROM drive.
- At least 2 Gbytes of available free space on your emulated C: drive.

---

**Tip** – Before you perform the upgrade, make a backup copy of your existing C: emulated drive file.

---

---

# Upgrading Windows NT4 WS to Windows 2000 Professional



---

**Caution** – Follow the instructions in this section carefully to perform the upgrade. The setup and configuration procedures for the SunPCi III program involve some steps that differ from the Microsoft upgrade steps. Do not use the standard Microsoft upgrade procedure provided on the Windows 2000 Professional CD or the installation will fail and your emulated C: drive can become corrupted.

---

# Before You Begin the Upgrade

Before upgrading to Windows 2000 Professional, uninstall Media Player 7 from Windows NT4 WS (if necessary). After upgrading, reinstall Media Player 7.



---

**Caution** – Failure to uninstall Media Player 7 before upgrading to Windows 2000 Professional from Windows NT4 WS results in your CD-ROM drive not being available after the upgrade.

---



---

**Caution** – If you are using an external CD-RW drive with Windows NT4 WS, uninstall the device. The upgrade to Windows 2000 Professional will fail unless the device is removed and its software uninstalled. Reinstall the device after the upgrade.

---

Before starting to upgrade a Windows NT4 WS package to Windows 2000 Professional, you must update your Intel drivers. Refer to “Updating Intel Drivers” on page 118 for information on updating drivers.

## ▼ How to Upgrade Windows NT4 WS to Windows 2000 Professional

1. **Insert the Windows 2000 Professional CD into your system’s CD-ROM drive.**
2. **Click the Start button, and choose Programs and Windows Explorer.**  
The Windows Explorer window opens.
3. **Using the Windows Explorer window, find the following path:**

C:\sun\w2kupg

---

**Note** – If you cannot find this directory on your C: drive, either you have installed the wrong version of the SunPCi III software, or you did not update your SunPCi III drivers.

---

4. **Double-click** `upgrade.bat`.  
The upgrade process continues. This program automatically maps a network drive for its own use. If you do not have a network drive letter available in Windows Explorer, the process fails.

---

**Note** – If you do not have the Windows 2000 Professional CD in your CD-ROM drive, the upgrade process fails at this step. To continue with the upgrade, unmap a network drive to make a drive letter available for this upgrade.

---

**5. Follow the prompts on the screen and enter the information that Microsoft Windows requests.**

For example, the CD key on the back of your CD case, your administrator's password, and so on.

When you are finished entering all the information, the SunPCi III software reboots into Windows 2000 Professional.

---

**Tip** – This step can take several minutes to complete.

---

**6. Install the Service Pack.**

To complete the process, you need to install the appropriate Service Pack. See "Microsoft Windows Service Packs" on page 20.

---

## Upgrading Windows NT4 TS to Windows 2000 Server



---

**Caution** – Follow the instructions in this section carefully to perform the upgrade. The setup and configuration procedures for the SunPCi III program involve some steps that differ from the Microsoft upgrade steps. Do not use the standard Microsoft upgrade procedure provided on the Windows 2000 Server CD or the installation will fail and your emulated C: drive can become corrupted.

---

### Before You Begin the Upgrade

Before starting to upgrade Windows NT4 TS to Windows 2000 Server, follow these steps:

**1. Log off all clients and other processes from the server before upgrading Windows NT4 TS, and before enabling SunFSD mapping in Windows NT4 TS.**

Enabling SunFSD mapping enables it for *all current users*, creating a potential breach in security, so caution must be employed.

2. Double-click the `fsdon.reg` Registry file located at:

```
C:\sun\sunfsd\fsdon.reg
```

This enables SunFSD. Leave SunFSD enabled until after the upgrade to Windows 2000 Server.



---

**Caution** – Enable SunFSD, map a drive, disable SunFSD, and then perform the upgrade as there are SunFSD dependencies in the upgrade script.

---

3. Prior to starting the installation upgrade process, you must update your Intel drivers. Refer to “Updating Intel Drivers” on page 118 for information on updating drivers.

## ▼ How to Upgrade Windows NT4 TS to Windows 2000 Server



---

**Caution** – Follow the instructions in this section carefully to perform the upgrade. The setup and configuration procedures for the SunPCi III program involve some steps that differ from the Microsoft upgrade steps. Do not use the standard Microsoft upgrade procedure provided on the Windows 2000 Server CD or the installation will fail, your Windows 2000 Server emulated disk will not run with SunPCi III, and your emulated C: drive can become corrupted.

---

1. Insert the Windows 2000 Server CD into your system’s CD-ROM drive.
2. Click Start, and choose Programs and Windows Explorer.  
The Windows Explorer window opens.
3. Using the Windows Explorer window, find the following path:

```
C:\sun\w2kupg\upgrade.bat
```

---

**Note** – If you cannot find this directory on your C: drive, either you have installed the wrong version of the SunPCi III software, or you did not update your SunPCi III drivers.

---

**4. Double-click** `upgrade.bat`.

The upgrade process continues. This program automatically maps a network drive for its own use. If you do not have a network drive letter available in Windows Explorer, the process fails.

---

**Note** – If you do not have the Windows 2000 Server CD in your CD-ROM drive, the upgrade process fails at this step. To continue with the upgrade, unmap a network drive to make a drive letter available for this upgrade.

---

**5. Follow the prompts on the screen and enter the information that Microsoft Windows requests.**

For example, the CD key on the back of your CD case, your administrator's password, and so on.

When you are finished entering all the information, the SunPCi III software reboots again into Windows 2000 Server.

---

**Tip** – This step can take several minutes to complete.

---

**6. Install the Service Pack.**

To complete the process, you need to install the appropriate Service Pack. See "Microsoft Windows Service Packs" on page 20.

---

## Configuring Virtual Ethernet Networking for Windows 2000

The SunPCi III software comes with *physical* Ethernet networking enabled by default. If you prefer to use *virtual* networking instead of physical networking, you need to disable the physical Ethernet adapter in Microsoft Windows and install the virtual Ethernet adapter. This section explains the steps you need to follow.

---

**Note** – When more than one SunPCi III card is installed in a system, virtual networking is disabled by the SunPCi III software.

---

---

**Caution** – Do not enable both virtual and physical networking at the same time.

---



For more information about physical and virtual Ethernet networking, refer to “Setting Up Networking With SunPCi III Hardware and Software” on page 35.

To set up virtual Ethernet networking for Windows 2000, follow the steps outlined in the following procedure. This procedure explains how to configure the network adapter.

---

**Note** – Microsoft Windows provides several different ways to install software. Follow the instructions in this section, even if you have installed Microsoft Windows software previously. The SunPCi III 3.0 software does not support other methods of installation.

---

## ▼ How to Remove a Static IP Address

If you were using physical networking, and had previously defined a static IP address, follow these steps to remove the address. If not, skip to the next procedure.

- 1. On the Windows 2000 desktop, right-click My Network Places.**  
A drop-down menu opens.
- 2. Choose Properties.**  
The Display Properties dialog box opens.
- 3. Right-click Local Area Connection.**
- 4. Choose Properties.**  
The Local Area Connection Properties dialog box opens.
- 5. Double-click Internet Protocol (TCP/IP).**  
The Internet Protocol (TCP/IP) Properties dialog box opens.
- 6. Delete the existing IP address.**
- 7. Click the Obtain an IP Address Automatically radio button.**
- 8. Click OK to close the Internet Protocol (TCP/IP) Properties dialog box.**
- 9. Click OK to close the Local Area Connection Properties dialog box.**
- 10. Close the Network and Dial-up Connection window.**

## ▼ How to Add a Virtual Network Adapter

- 1. On the Windows 2000 desktop, right-click My Computer.**

A drop-down menu opens.

- 2. Choose Properties.**

The System Properties dialog box opens.

- 3. Click the Hardware tab.**

- 4. Click Device Manager.**

The Device Manager window opens with a list of installed device drivers.

- 5. Double-click Network Adapters.**

- 6. Right-click VIA PCI 10/100 Mb Ethernet Adapter.**

- 7. Click Disable.**

A message opens saying that disabling this device will cause it to stop functioning.

- 8. Click Yes.**

- 9. Click OK to close the System Properties dialog box.**

- 10. Close the Device Manager window.**

This completes the first section of this task. Proceed with the second section to complete adding a virtual network adapter.

- 1. Click Start and choose Settings and Control Panel from the Windows 2000 menu.**

- 2. Double-click Add/Remove Hardware.**

The Add/Remove Hardware Wizard dialog box opens.

- 3. Click Next.**

- 4. Click the “Add/Troubleshoot a device” radio button.**

- 5. Click Next.**

Microsoft Windows searches for new hardware devices. The Add/Remove Hardware Wizard - Choose a Hardware dialog box opens.

- 6. Click the Add a New Device option.**

- 7. Click Next.**

The Add/Remove Hardware Wizard - Find New Hardware dialog box opens.

- 8. Click the No, I want to choose the Hardware from a list radio button.**

**9. Click Next.**

The Add/Remove Hardware Wizard - Hardware Types dialog box opens.

**10. Click the Network adapters options.**

**11. Click Next.**

The Add/Remove Hardware Wizard - Select Network Adapter dialog box opens.

**12. Click Have Disk.**

**13. Click Browse.**

**14. Navigate to** `c:\sun\sunnet\win2k\sunndis.inf`.

The Locate File dialog box opens.

**15. Click Open.**

The Install From Disk dialog box opens.

**16. Click OK.**

The Select Network Adapter dialog box opens.

**17. Click Next (at the Select Network Adaptor dialog box).**

The Add/Remove Hardware Wizard - Start Hardware Installation dialog box opens.

**18. Click Next.**

The Completing the Add/Remove Hardware Wizard dialog box opens saying hardware installed.

**19. Click Finish.**

If you are asked to restart the computer, choose Yes to complete the configuration.

To make the virtual adapter function in the network, you need to complete the procedure in "How to Configure the Network for Windows 2000" on page 72.

## ▼ How to Configure the Network for Windows 2000

After you finish configuring the virtual or the physical network adapter and restart Windows 2000, you need to configure *one* of the adapters to use TCP/IP. Log in to Windows 2000 again and follow the steps in this procedure.



---

**Caution** – Do not activate a virtual and a physical network adapter at the same time. Verify that you have disabled the virtual or physical adapter before performing the following procedure.

---

**1. From the Start menu, choose Settings, and then choose Network and Dial-up Connections.**

The Network and Dial-Up Connections window opens. The window contains three icons: Make New Connection, Local Area Connection, and Local Area Connection 2.

---

**Tip** – If you attempt this operation several times, you might see more than the initial three icons in the window.

---

**2. Right-click Local Area Connection or Local Area Connection 2.**

Your choice of 2 or not depends on *which* Ethernet adapter is enabled. The Status window opens. A drop-down menu opens.

**3. Click Properties.**

The Local Area Connection Properties window opens.

**4. Double-click Internet Protocol (TCP/IP).**

The Internet Protocol (TCP/IP) Properties window opens.

**5. Set up TCP/IP for your SunPCi III card as described in “How to Set TCP/IP Properties” on page 35.**

Refer to your Windows 2000 documentation if needed.

**6. When you finish setting up TCP/IP, click OK to close the Internet Protocol (TCP/IP) Properties dialog box.**

**7. Click OK to close the Local Area Connection Properties dialog box.**

**8. Close the Network and Dial-up Connections.**

**9. Click Yes to restart Microsoft Windows.**

---

**Note** – If you see a dialog box with the message “Sunndis failed to start,” ignore the message and click OK. This message sometimes appears when DHCP networking is disabled.

---

## ▼ How to Reconfigure the Network Adapter for Physical Ethernet

If you need to reactivate the physical network adapter, follow these steps.



---

**Caution** – Do not activate a virtual and a physical network adapter at the same time. Verify that you have disabled the virtual adapter before performing the following procedure.

---

**1. On the Windows 2000 desktop, right-click My Computer.**

A drop-down menu opens.

**2. Choose Properties.**

The System Properties dialog box opens.

**3. Click the Hardware tab.**

**4. Click Device Manager.**

The Device Manager window opens, listing the computer's installed device drivers.

**5. Click the computer name.**

**6. Double-click Network Adapters.**

**7. If you configured a static IP address for virtual networking, perform the procedure “How to Remove a Static IP Address” on page 70.**

**8. Right-click the SunNDIS Virtual Adapter.**

**9. Click Disable.**

A dialog box opens saying that disabling this device causes the adapter to stop functioning.

**10. Click Yes.**

**11. Right-click the VIA PCI 10/100 Mb Ethernet Adapter.**

A drop-down menu opens

**12. Choose Enable.**

**13. Close the Device Manager window**

**14. Click OK to close the System Properties dialog box.**

To enable the physical adapter to use TCP/IP in the network, you need to complete the procedure “How to Configure the Network for Windows 2000” on page 72.

## ▼ How to Configure External Video Drivers for Windows 2000

To use an external monitor, you need to attach the monitor to the SunPCi III main card backplate and install the external video driver.



---

**Caution** – Do not use both system and external monitors at the same time. SunPCi III 3.0 software does not support multi-headed operation.

---

**1. Attach the monitor to the external video port connector on the SunPCi III main card backplate.**

Refer to FIGURE 10-1 to find the location of the external video port.

**2. Start the SunPCi III software.**

**3. On the Windows 2000 desktop, right-click My Computer.**

A drop-down menu opens.

**4. Choose Manage.**

The Computer Management window opens.

**5. Double-click Device Manager.**

**6. Double-Click Display Adapters.**

A list of the available display adapters opens.

**7. Double-click S3 Graphics ProSavage DDR (No driver installed).**

The Properties window opens.

**8. Click the Driver tab.**

**9. Click Update Driver.**

The Update Device Driver Wizard dialog box opens.

**10. Click Next.**

**11. Click the Search for a suitable driver for my device (recommended) radio button.**

**12. Click Next.**

The Upgrade Device Driver Wizard - Locate Driver Files dialog box opens.

**13. Uncheck the “Floppy disk drives” and “CD-ROM drives” check boxes.**

**14. Click the “Specify a Location” check box.**

- 15. Click Next.**  
The Update Device Driver Wizard window opens.
- 16. Click Browse.**
- 17. Navigate to c:\sun\viavideo\WIN2K\PS5333.inf.**  
The Locate File dialog box opens.
- 18. Click Open.**  
The Upgrade Device Driver Wizard dialog box opens with the path included.
- 19. Click OK.**  
The Driver Files Search Results window opens.
- 20. Check the “Install one of the other drivers” check box.**
- 21. Click Next.**  
The Update Device Driver Wizard - Driver Files Found window opens.
- 22. Click the S3 Graphics ProSavage DDR option.**
- 23. Click Next.**  
When the installation is finished, a message opens in the window.
- 24. Click Finish to close the Update Wizard window.**
- 25. Click Close in the S3 Graphics ProSavage DDR Properties window.**  
A dialog box opens, asking whether you want to restart your system for the hardware changes to take effect.
- 26. Click No.**
- 27. Close the Computer Management window.**
- 28. From the Start menu, choose Shut Down.**  
The Shut Down Windows dialog box opens.
- 29. Click OK.**
- 30. From the File menu in SunPCi, choose Exit.**  
The SunPCi Exit dialog box opens.
- 31. Click Exit Now.**  
SunPCi closes.

**32. At the Solaris system prompt, restart the SunPCi III software using the `-v` option:**

```
% /opt/SUNWspci3/bin/sunpci -v
```

---

**Note** – If you do not use the `-v` option, the Sun display will appear scrambled.

---

The SunPCi III software starts, and Windows 2000 opens first on the external monitor, and then on your system monitor in the SunPCi III window. You are now ready to configure the Windows 2000 display as described in the following procedure.

## ▼ How to Configure Windows 2000 for External Video Use

For more information about configuring the display in Windows 2000, refer to your Windows 2000 documentation.

**1. On the Windows 2000 desktop, choose right-click.**

A drop-down menu opens.

**2. Choose Properties.**

The Display Properties dialog box opens.

**3. Click the Settings tab.**

---

**Note** – There are two displays shown in the window, marked 1 and 2. Video 2 is highlighted, showing that it (the system monitor) is the primary display. Video 1 is dimmed, indicating that it is not the primary display.

---

**4. Click Video 1.**

The driver listed underneath the video changes to Default Monitor on S3 Graphics ProSavage DDR.

**5. Click the “Extend my Windows desktop onto this monitor” check box.**

**6. Click the “Use this device as the primary monitor” check box.**

**7. Click Video 2.**

The driver listed underneath the video changes back to Sun Microsystems SunPCi Video.

**8. Uncheck the “Extend my Windows desktop onto this monitor” check box.**

The icons representing Video 1 and Video 2 change positions, so that Video 1 appears first.

**9. Click Apply.**

Your external monitor is now active in Windows 2000. Your system monitor shows an empty SunPCi window with Video routed to external monitor in the title bar.

**10. Click OK to close the Display Properties dialog box.**

You can now use external video with Windows 2000. Refer to your Windows 2000 documentation for more information.

---

**Note** – For best performance with Windows 2000 and an external monitor, attach a serial mouse to the serial port on the SunPCi III card’s Serial/Parallel Port Backplate.

---

## ▼ How to Configure External Video Back to the System Monitor

**1. On the Windows 2000 desktop, choose right-click.**

A drop-down menu opens.

**2. Choose Properties.**

The Display Properties dialog box opens.

**3. Click the Settings tab.**

**4. Click Video 2.**

The driver listed underneath the video changes to Default Monitor on Sun Microsystems on SunPCi video.

**5. Click the “Extend my Windows desktop onto this monitor” check box.**

**6. Click the “Use this device as the primary monitor” check box.**

**7. Click Video 1.**

The driver listed underneath the video changes back to Sun Microsystems SunPCi Video.

**8. Uncheck the “Extend my Windows desktop onto this monitor” check box.**

**9. Click Apply.**

Your workstation monitor is now active in Windows 2000.

**10. Click OK to close the Display Properties dialog box.**

You can now use external video with Windows 2000. Refer to your Windows 2000 documentation for more information.

---

**Note** – For best performance with Windows 2000 and an external monitor, attach a serial mouse to the serial port on the SunPCi III card's Serial/Parallel Port Backplate.

---

## ▼ How to Configure the MouseKeys Accessibility Option

To use MouseKeys on the system monitor in Windows 2000 Professional, do the following:

**1. Click Start and choose Settings and Control Panel from the Windows 2000 Professional menu.**

The Control Panel window opens.

**2. Double-click the Display icon.**

**3. Click the Settings tab.**

**4. Click the “True Color (24-bit) option in the Colors” group box.**

**5. Click OK to close the Display Properties dialog box.**

**6. Double-click the Mouse icon.**

**7. Click the Pointers tab.**

**8. Click the “Enable pointer shadow” check box.**

**9. Click OK to close the Mouse Properties dialog box.**

**10. Double-click the Accessibility Options icon.**

**11. Click the Mouse tab.**

**12. Click the “Use MouseKeys” check box.**

**13. Click OK to close the Accessibility Options dialog box.**

**14. Close the Control Panel.**

**15. Use the arrow keys on the keyboard to move the cursor on the display.**

Accessibility options cannot be enabled in any other supported Microsoft Windows operating system on the system monitor. Accessibility options might be available on Sun systems. Consult your sales representative for more information.

MouseKeys in any supported Microsoft Windows operating system are enabled on an external monitor and a serial mouse. Enable MouseKeys in the Accessibility Options dialog box from the Control Panel for the particular Microsoft Windows operating system

---

**Note** – You must enable the True Color (24-bit) option in the Colors group box in the Settings tab for the “Enable pointer shadow” check box to be viewable in the Pointers tab.

---

# Using Windows NT Workstation, Windows NT Server, or Windows NT 4.0 Terminal Server

---

This chapter describes how to install and configure Microsoft Windows NT 4.0 Workstation, Microsoft Windows NT 4.0 Server, and Microsoft Windows NT 4.0 Terminal Server operating system software for use with the SunPCi III product.

This chapter includes the following topics:

- “Installing Windows NT” on page 82
- “Configuring Virtual Ethernet Networking for Windows NT” on page 85

This chapter includes instructions for completing the following tasks:

- “How to Perform a Custom Installation” on page 83
- “How to Reinstall Windows NT” on page 84
- “How to Install the SunNDIS Adapter” on page 85
- “How to Remove the SunNDIS Adapter” on page 86
- “How to Configure External Video for Windows NT” on page 87
- “How to Configure External Video Back to the System Monitor” on page 89

Throughout this chapter, Microsoft Windows NT 4.0 Workstation is referred to as Windows NT4 WS, Microsoft Windows NT 4.0 Server is referred to as Windows NT4 Server, and Microsoft Windows NT 4.0 Terminal Server is referred to as Windows NT4 TS. In some sections in this chapter, Windows NT refers to all three operating systems.

---

**Tip** – Throughout this chapter, wherever the installation and configuration of the Windows NT4 Server and Windows NT4 TS software differs from the Windows NT4 WS installation, a Tip for a server procedure follows the description.

---

---

# Installing Windows NT

You install operating system software when you create an emulated drive by choosing Create a New Emulated Drive from the SunPCi Options menu. See “Emulated Drives and SunPCi III Software” on page 13. If you want to perform a custom installation using scripts that are different from the standard Microsoft installation scripts, see “How to Perform a Custom Installation” on page 83.

---

**Tip** – Before starting an installation or installation upgrade, disable anti-virus software.

---

Memory requirements for Windows NT4 Server and Windows NT4 TS are based on the number and type of users connecting. See the White Papers located at the SunPCi Web site:

<http://www.sun.com/desktop/products/sunpci>

## Installation Notes

Make sure that you have of the following media and information available before you begin installation:

- Windows NT retail installation software CD
- Customized installation scripts, if needed
- The network system name for each SunPCi III card installed in your system
- The workgroup or domain name for your Windows NT installation on each SunPCi III card installed in your system

## ▼ How to Perform a Custom Installation



---

**Caution** – When you specify an operating system to auto-install in the Create a New Emulated Drive dialog box, the software automatically finds and copies setup files, boot files, system files, and drivers that are appropriate for that operating system. The software also launches Windows Setup when SunPCi software reboots. Do not perform a custom installation unless you want to use customized installation scripts.

---

### 1. Create a new emulated hard drive and auto-install the DR DOS 7.01 operating system software.

See “Emulated Drives and SunPCi III Software” on page 13. Set options in the Create a New Emulated Drive dialog box as follows:

- Select DR DOS 7.01 as the operating system to auto-install.
- Make the drive large enough to accommodate your needs, which can be expanded later if needed.
- Attach the drive as a C: drive.
- For best performance, create your emulated drives on a local hard disk on your workstation or server.

### 2. Click OK when the dialog box asks you to reboot the SunPCi III software.

The SunPCi III software reboots. The OpenDOS prompt (C:\>) opens.

### 3. Install SunPCi III drivers.

The default location for the Windows NT files is `r:\cdrom\cdrom0\i386`. To perform a custom installation, you need to use the `/s:` switch to specify where your custom installation files are located. For example, if your Windows NT disk image is located in your Solaris directory at `/export/home/winnt`, you would access it from the R: drive in OpenDOS.

---

**Note** – Copy all the contents of the installation CD files to the `winnt` folder before starting the installation.

---

Type the following command all on one line:

```
C:\> f:\drivers\winnt\setupnt /s:r:\export\home\winnt\i386
```

The setup process takes a few minutes to complete. SunPCi III software responds with the following messages

```
Copying Windows Setup files...
Copying Windows Boot files...
Copying Windows System files...
Copying Optional files...
Copying SunPCi Installation files...
```

---

**Tip** – The Windows NT4 TS messages differ slightly.

---

When the `setupnt` script finishes copying the Windows NT files to your C: drive, it reboots the SunPCi III software. The Windows NT Setup screen opens. When Windows NT Setup finishes copying files, it reboots the SunPCi III software again.

**4. After the SunPCi III software reboots from the Windows NT window, choose Attach Mouse from the Options menu or press Meta-M to attach the mouse.**

This enables the mouse to work with Windows NT during the installation process. Once the process is complete, the proper mouse drivers are installed and you no longer need to attach the mouse manually.

**5. Change directory to the location for your customized installation scripts.**

**6. Complete the installation using your customized installation scripts.**

## ▼ How to Reinstall Windows NT



---

**Caution** – Do not use the Windows NT Setup option in the Autorun dialog box to reinstall Windows NT. Using this option results in a Windows NT “blue screen” error and a message indicating an inaccessible boot device.

---

- If you need to reinstall a standard version of Windows NT, use the Add/Remove Software utility in the Control Panel window or in the Autorun dialog box that appears when you insert the Windows NT CD.

---

# Configuring Virtual Ethernet Networking for Windows NT

The SunPCi III software comes with *physical* Ethernet networking enabled by default. If you prefer to use *virtual* networking, you need to disable the physical Ethernet adapter in Microsoft Windows and install the virtual Ethernet adapter. This section explains the steps you need to follow.

---

**Note** – When more than one card is installed in a system, virtual networking is disabled by the SunPCi III software.

---



---

**Caution** – Do not enable both virtual and physical networking at the same time.

---

For more information about physical and virtual Ethernet networking, refer to “Setting Up Networking With SunPCi III Hardware and Software” on page 35.

---

**Tip** – Virtual Ethernet is not supported with Microsoft Windows NT 4.0 Terminal Server.

---

The SunPCi III software ships with the VIA PCI 10/100 Mb Fast Ethernet physical Ethernet driver enabled by default for Windows NT network setting. To operate virtual networking with Windows NT, you need to remove the VIA driver and add the Sun NDIS adapter.

## ▼ How to Install the SunNDIS Adapter

---

**Note** – Microsoft Windows provides several different ways to install software. Follow the instructions in this section, even if you have installed Microsoft Windows software previously. The SunPCi III software does not support other methods of installation.

---

1. **Click Start and choose Settings and Control Panel from the Windows NT menu.**  
The Control Panel window opens.

**2. Double-click Network.**

The Network dialog box opens.

**3. Click the Adapters tab.**

The VIA PCI 10/100 Mb Fast Ethernet Adapter is highlighted in the window.

**4. Click Remove.**

A dialog box asks whether you want to permanently remove the driver.

**5. Click Yes.**

You are returned to the Adapters tab.

**6. Click Add.**

The Select Network Adapter dialog box opens.

**7. Click Have Disk.**

The Insert Disk Directory dialog box opens.

**8. Type `c:\sun\sunnet\winnt.`**

**9. Click OK.**

The Select OEM Option dialog box opens. It now shows the Sun NDIS Adapter.

**10. Click OK to install the Sun NDIS Adapter.**

When the installation is finished, you are returned to the Network dialog box.

**11. Click Close to close the Network dialog box.**

The Microsoft TCP/IP Properties dialog box opens. Refer to the information in “How to Set TCP/IP Properties” on page 35. When you are finished configuring TCP/IP, click OK. A dialog box opens asking whether you want to restart Windows NT.

**12. Click Yes.**

Microsoft Windows restarts with the virtual Ethernet adapter enabled for TCP/IP.

## ▼ How to Remove the SunNDIS Adapter

If you want to remove the Sun NDIS driver and restore the VIA PCI 10/100 Mb Fast Ethernet adapter, use the following procedure.

**1. Click Start and choose Settings and Control Panel from the Windows NT menu.**

The Control Panel window opens.

**2. Double-click the Network icon.**

The Network Control Panel window opens.

**3. Click the Adapters tab.**

The SunNDIS Adapter is highlighted in the window.

**4. Click Remove.**

A dialog box asks whether you want to permanently remove the driver.

**5. Click Yes.**

You are returned to the Adapters tab.

**6. Click Add.**

The Select Network Adapter dialog box opens.

**7. Click Have Disk.**

The Insert Disk Directory dialog box opens.

**8. Type `c:\sun\vianet\winnt`.**

**9. Click OK.**

The Select OEM Option dialog box opens. It now shows the VIA PCI Fast Ethernet Adapter Driver.

**10. Click OK to install the VIA PCI Fast Ethernet Adapter.**

When the installation is finished, you are returned to the Network Control Panel.

**11. Click Close.**

The Microsoft TCP/IP Properties dialog box opens. Refer to the information in “How to Set TCP/IP Properties” on page 35. When you are finished configuring TCP/IP, click OK. A dialog box opens asking whether you want to restart Windows NT.

**12. Click Yes.**

Microsoft Windows restarts with the virtual Ethernet adapter enabled for TCP/IP.

## ▼ How to Configure External Video for Windows NT

---

**Note** – Do not use the OS Loader screen at Windows NT Startup to boot to your VGA display. Follow the procedure in this section to set up your external VGA driver.

---

To use an external monitor, you need to attach the monitor and install the external video driver.

---

**Note** – Do not use system and external monitors at the same time. SunPCi III 3.0 software does not support multi-headed operation.

---

**1. Attach the monitor to the external video port connector on the SunPCi III main card backplate.**

Refer to FIGURE 10-1 to find the location of the external video port.

**2. Start the SunPCi software.**

**3. Click Start and choose Settings and Control Panel from the Windows NT menu.**

The Control Panel window opens.

**4. Double-click the Display icon.**

The Display Properties dialog box opens.

**5. Click the Settings tab.**

**6. Click Display Type.**

The Display Type dialog box opens.



---

**Caution** – Do not click the Detect button in the Display Type dialog box. Clicking on Detect causes SunPCi software to reboot.

---

**7. Click Change.**

The Change Display setup dialog box opens.

At this point, you have completed the first portion of this task. Continue with the following steps to complete configuring external video.

**1. Click Have Disk.**

The Install From Disk dialog box opens.

**2. Click Browse.**

The Locate File dialog box opens.

**3. Navigate to** `c:\sun\viavideo\winnt\Ps5333ut.inf`.

**4. Click OK.**

The Install From Disk dialog box opens.

**5. Click OK.**

The Change Display dialog box opens with S3 Graphics PM4266 highlighted.

**6. Click OK.**

The Third-party Drivers dialog box opens saying: You are about to install a third party driver.

**7. Click Yes.**

When the program has installed the driver, a dialog box opens with the message saying: Drivers were successfully installed.

**8. Click OK.**

**9. Click Close to close the Display Type window.**

**10. Click Close to close the Display Properties window.**

Windows NT asks whether you want to restart your computer.

**11. Click No.**

**12. Shut down Windows NT.**

**13. From the File menu in SunPCi, choose Exit.**

The SunPCi Exit dialog box opens.

**14. Click Exit Now.**

SunPCi closes.

**15. At the Solaris system prompt, restart the SunPCi III software using the `-v` option:**

```
% /opt/SUNWspci3/bin/sunpci -v
```

Windows NT screens are displayed on your external monitor. For more information about monitor resolution and color depth, refer to “Video Display Issues” on page 146.

---

**Note** – Every time you change the display mode (from system display to external display or back), you need to shut down Windows NT and reset SunPCi software. Restarting SunPCi software loads the correct display driver for your monitor.

---

## ▼ How to Configure External Video Back to the System Monitor

**1. Start the SunPCi software.**

**2. Click Start and choose Settings and Control Panel from the Windows NT menu.**

The Control Panel window opens.

**3. Double-click the Display icon.**

The Display Properties window opens.

**4. Click the Settings tab.**

**5. Click Display Type.**

The Display Type dialog box opens.



---

**Caution** – Do not click the Detect button in the Display Type dialog box. Clicking on Detect causes SunPCi software to reboot.

---

**6. Click Change.**

The Change Display dialog box opens.

At this point, you have completed the first portion of this task. Continue with the following steps to complete configuring external video.

**1. Click Have Disk.**

The Install From Disk dialog box opens.

**2. Click Browse.**

The Locate File dialog box opens.

**3. Navigate to `c:\sun\viavideo\winnt\P55333ut.inf`.**

**4. Click Open.**

The Install From Disk dialog box opens.

**5. Click OK.**

The Change Display dialog box opens with S3 Graphics PM4266 highlighted.

**6. Click OK.**

The Third-party Drivers dialog box opens saying: You are about to install a third party driver.

**7. Click Yes.**

When the program has installed the driver, a dialog box opens with the message saying: Drivers were successfully installed.

**8. Click OK.**

You have now completed most of the steps required to complete configuring an external video. The remaining steps include closing down and rebooting the system.

**9. Click Close to close the Display Type window.**

**10. Click Close to close the Display Properties window.**

Windows NT asks whether you want to restart your computer.

**11. Click No.**

**12. Shut down Windows NT.**

**13. From the File menu in SunPCi, choose Exit.**

The SunPCi Exit dialog box opens.

**14. Click Exit Now.**

SunPCi closes.

---

**Note** – Before you change the resolution or display depth of your monitor, be sure to shut down all running applications and save your work. You do not need to test a new setting before applying it.

---



## Using Windows 98

---

This chapter discusses how to install and configure Microsoft Windows 98 Second Edition operating system software for use with the SunPCi III product.

---

**Note** – SunPCi III 3.0 software does not support the original Microsoft Windows 98 release. You must install Microsoft Windows 98 Second Edition (SE) to work properly with SunPCi III 3.0.

---

This chapter includes the following topics:

- “Installing Windows 98” on page 94
- “Configuring Networking for Windows 98” on page 94

This chapter includes instructions for completing the following tasks:

- “How to Reinstall Windows 98” on page 94
- “Configuring Physical Ethernet Networking for Windows 98” on page 95
- “Configuring Virtual Ethernet Networking for Windows 98” on page 96
- “How to Configure External Video for Windows 98” on page 97
- “How to Configure External Video Back to the System Monitor” on page 98

Throughout this chapter, Microsoft Windows 98 Second Edition is referred to as Windows 98.

---

**Note** – Make sure that you are logged in to the system as a regular user, not as superuser, before you perform the procedures in the following sections.

---

---

# Installing Windows 98

You install operating system software when you create a new emulated drive by choosing Create a New Emulated Drive from the SunPCi Options menu. See “Emulated Drives and SunPCi III Software” on page 13.

---

**Tip** – Before starting an installation or installation upgrade, disable anti-virus software.

---

## Installation Notes

Make sure that you have the following media and information available before you begin installation:

- Windows 98 retail installation software CD
- The network system name for each SunPCi III card installed in your system
- The workgroup or domain name for your Windows 98 installation on each SunPCi III card installed in your system

## ▼ How to Reinstall Windows 98

- **If you need to reinstall Windows 98, use the Add/Remove Software utility in the Control Panel window or in the Autorun dialog box that appears when you insert the Windows 98 CD.**

---

# Configuring Networking for Windows 98

To configure networking in Windows 98, choose one of the following options detailed in the following sections:

## ▼ Configuring Physical Ethernet Networking for Windows 98

**1. Insert your Windows 98 CD into the CD-ROM drive.**

The CD should mount automatically and display a SunPCi III Solaris window. If it does not, then Solaris Volume Manager might not be enabled on your system. Refer to “How to Mount a CD-ROM Drive” on page 105.

**2. Start the SunPCi software.**

**3. Click Start and choose Run from the Windows 98 menu.**

The Run dialog box opens.

**4. Type the following path into the Run dialog box:**

```
f:\drivers\win98\setup
```

**5. Click OK.**

The SunPCi Setup window opens.

**6. Click the Change network controller type radio button.**

**7. Click Next.**

The Select which adaptor to use dialog box opens.

**8. Click the Workstation adapter (software emulation) radio button.**

**9. Click Next.**

The Restarting Windows dialog box opens.

**10. Click the Yes, I want to restart my computer now radio button.**

**11. Click OK.**

The SunPCi software restarts.

**12. After Windows 98 restarts, configure TCP/IP as described in the Microsoft Windows documentation.**

You are now able to use Windows 98 with the SunPCi III product.

## ▼ Configuring Virtual Ethernet Networking for Windows 98

**1. Insert your Windows 98 CD into the CD-ROM drive.**

The CD should mount automatically and display a SunPCi III Solaris window. If it does not, then Solaris Volume Manager might not be enabled on your system. Refer to “How to Mount a CD-ROM Drive” on page 105.

**2. Start the SunPCi software.**

**3. Click Start and choose Run from the Windows 98 menu.**

The Run dialog box opens.

**4. Type the following path into the Run dialog box:**

```
f:\drivers\win98\setup
```

**5. Click OK.**

The SunPCi Setup window opens.

**6. Click the Change network controller type radio button.**

**7. Click Next.**

**8. Click the SunPCi adapter [hardware] radio button.**

**9. Click Next.**

The Restarting Windows opens.

**10. Click the Yes, I want to restart my computer now radio button.**

**11. Click OK.**

The SunPCi software restarts.

**12. Configure TCP/IP as described in the Microsoft Windows documentation.**

You are now able to use Windows 98 with the SunPCi III product.

## ▼ How to Configure External Video for Windows 98

- 1. Attach the monitor to the external video port connector on the SunPCi III main card backplate.**

Refer to FIGURE 10-1 to find the location of the external video port.

- 2. Start the SunPCi software.**
- 3. Click Start and choose Run from the Windows 98 menu.**

The Run dialog box opens.

- 4. Type the following path into the Run dialog box:**

```
f:\drivers\win98\setup
```

- 5. Click OK.**
- 6. Click the Change display type radio button.**
- 7. Click Next.**

The Select which Monitor to use dialog box opens.

- 8. Click the External monitor radio button.**
- 9. Click Next.**

The Building Driver Information Database dialog box opens and closes. Then the SunPCi dialog box opens saying Setup has finished updating the monitor type and will restart.

- 10. Click Finish.**
- 11. From the File menu in SunPCi, choose Exit.**

The SunPCi Exit dialog box opens.

- 12. Click Exit Now.**
- SunPCi closes.

13. At the Solaris system prompt, restart the SunPCi software using the `-v` option:

```
% /opt/SUNWspci3/bin/sunpci -v
```

Windows 98 opens on your external monitor. For more information about monitor resolution and color depth, refer to “Video Display Issues” on page 146.

## ▼ How to Configure External Video Back to the System Monitor

1. **Start the SunPCi software.**
2. **Click Start and choose Run from the Windows 98 menu.**  
The Run dialog box opens.
3. **Type the following path into the Run dialog box:**

```
f:\drivers\win98\setup
```

4. **Click OK.**  
The SunPCi Setup window opens.
5. **Click the Change display type radio button.**
6. **Click Next.**  
The Select which Monitor to use dialog box opens.
7. **Click the Workstation monitor radio button.**
8. **Click Next.**  
The Building Driver Information Database dialog box opens and closes. Then the SunPCi dialog box opens saying Setup has finished updating the monitor type and will shut down Microsoft Windows.
9. **Click Finish.**  
The SunPCi splash screen opens.
10. **From the File menu in SunPCi, choose Exit.**  
The SunPCi Exit dialog box opens.
11. **Click Exit Now.**  
SunPCi closes.

# Installing and Configuring Server Software

---

This chapter provides information about using the SunPCi server installation and configuration issues.

This chapter includes the following topic:

- “Using SunFSD for Mapping Between Solaris and Microsoft Windows” on page 100

This chapter includes instructions for completing the following tasks:

- “How to Enable SunFSD Mapping” on page 101
- “How to Disable SunFSD Mapping” on page 102

The following information is for installing and configuring the supported Microsoft Windows server operating systems using the SunPCi III 3.0 software on the Solaris operating environment.

This server information is applicable to Windows NT and Windows 2000.

For advanced SunPCi III server support concerning SunPCi III memory, CPUs and benchmark information, consult the SunPCi Web site:

<http://www.sun.com/desktop/products/sunpci>

---

**Note** – Due to naming conventions, mounting the CD-ROM drive on SunFSD (`\\localhost\cdrom\cdrom0`) results in files not being found by certain applications.

---

---

# Using SunFSD for Mapping Between Solaris and Microsoft Windows

The SunPCi III 3.0 software package includes the Sun File System Driver (SunFSD), which maps Microsoft Windows drive letters to Solaris directories.

For SunPCi III 3.0 installations, the SunFSD mapping function is *disabled* by default for the following Microsoft Windows server software:

- Windows NT4 Server
- Windows NT4 TS
- Windows 2000 Server Edition

Thus, while running one of the server variants of Microsoft Windows, any mapping of the `\\localhost` directory by any user (or program), including the administrator, will fail. Further, any reference or any attempt to access files using a Universal Naming Convention (UNC) path that includes `\\localhost` as the UNC prefix will also fail.

The mapping control is imposed for security reasons. In the current release of SunFSD, any mapping or file access through `\\localhost` inherits the privileges of the user or process that launched the SunPCi III software. Therefore, if the SunPCi III card is running a Microsoft server operating system, and SunPCi software was launched under the root account, ordinary server users inherit root privileges across the network.

SunFSD is *enabled* on Windows XP Professional, Windows 2000 Professional, and Windows NT4 WS, because there are no multi-client file system security issues when using these operating systems. You can continue to map SunFSD drives in Windows XP Professional, Windows 2000 Professional, and Windows NT4 WS the same as you did in previous releases of SunPCi.

For server installations that require access to Solaris directories, server administrators can use a package such as Solaris PC NetLink or Samba that employs per-client security credential verification, or a Citrix MetaFrame client that maps Microsoft Windows drive letters as the local user.

---

**Note** – Some early generation Microsoft Windows *applications* might fail when installing Microsoft Windows-compatible applications into directories below SunFSD mount points. For information about, and solutions to the issue using SunFSD, see “Application Installation to Solaris File System Issues” on page 159.

---

## ▼ How to Enable SunFSD Mapping

SunFSD can be enabled in server installations if necessary by the Server Administrator account only. Proceed with great care in doing so, and be sure to disable SunFSD when you are finished performing the maintenance tasks described below.

To enable SunFSD mapping, as the Server Administrator perform this step:

- **Double-click the `fsdon.reg` Registry file located at:**

```
C:\sun\sunfsd\fsdon.reg
```

This can only be done using the Server Administrator account. Any server client (or non-privileged program) attempting to modify the Registry is refused.

Once SunFSD is enabled, all subsequent mappings and references using the `\\localhost` prefix will succeed. Additionally, after rebooting the server, SunFSD *remains* enabled. Further, any mappings made after enabling SunFSD, after logging off, or after rebooting the system, are reconnected upon logging on to the system (if configured to be reconnected).



---

**Caution** – Once SunFSD is enabled by the administrator, all server clients and programs can map or to access Solaris directories and files, using the security credentials of the process that spawned the SunPCi software.

---



---

**Caution** – Once SunFSD is disabled by the administrator, you can still browse the unmapped drives. Only after you have unmapped the drives and rebooted will the drives then be disabled, although you still have to physically unmap the drives in Windows Explorer.

---

The main reason for an administrator to enable SunFSD is that SunFSD functionality is *required* to execute the update drivers script, as well as other SunPCi supplied scripts.

The administrator should disable client logins prior to enabling SunFSD. Additionally, after any update (or other activity) is complete, the administrator should delete or unmap all SunFSD drives, disable mapping in SunFSD, and reboot the system.

## ▼ How to Disable SunFSD Mapping

To disable SunFSD mapping, as the Server Administrator perform this step:

- **Double-click the `fsdoff.reg` Registry file located at:**

```
C:\sun\sunfsd\fsdoff.reg
```

Once SunFSD mapping is disabled, all subsequent mappings and references using the `\\localhost` prefix will fail. Additionally, after rebooting the server, SunFSD mapping *remains* disabled. So, if for example, there were any successful SunFSD directory mappings prior to disabling SunFSD mapping, after the system is rebooted such mappings are *no longer* available.

## Using Drives and Configuring Peripheral Devices

---

This chapter includes information about peripheral devices and drives that are available with SunPCi.

This chapter includes the following general topics:

- “Using a Diskette Drive With SunPCi III Software” on page 103
- “Using a CD/DVD Drive With SunPCi III Software” on page 104
- “Connecting Peripheral Devices” on page 106
- “Connecting Additional USB and 1394 Firewire Devices” on page 109
- “Connecting Serial and Parallel Port Devices” on page 111
- “Connecting a Serial Device” on page 112

This chapter includes instructions for completing the following tasks:

- “How to Mount a CD-ROM Drive” on page 105
- “How to Eject a CD From a CD-ROM Drive” on page 106
- “How to Configure a Serial Mouse for an External Monitor” on page 112



---

**Caution** – SunPCi III software is not compatible with a system after `bsmconv (1M)` is run. Specifically, the device allocation features are incompatible with the use of `vold`, the diskette drive, the CD-ROM drive, and audio for SunPCi III.

---

---

## Using a Diskette Drive With SunPCi III Software

If the system you are using has an internal diskette drive, it is referred to in Microsoft Windows as drive A:.

Many Sun systems come with one diskette drive. If you have an UltraSPARC system that does not have a built-in diskette drive, you need to have the drive installed if you intend to copy data from diskette.

If you are running Solaris Volume Manager (the `vold` process) on your system, you need to disable Volume Manager's control of the diskette drive before it can function with SunPCi III 3.0 software. You also need to be root to perform this task. To disable `vold` and use the diskette drive with SunPCi III, run the script `/opt/SUNWspci3/bin/vold_floppy_disable` at the Solaris prompt before you start the SunPCi III software (as root). Otherwise, you will not be able to use the diskette drive as drive A:.

---

**Note** – If you have a diskette in the A: drive, you must use the command line option `eject` and then physically eject the floppy diskette from the system. Failure to use the `eject` command results in the diskette not operating properly.

---

---

## Using a CD/DVD Drive With SunPCi III Software

SunPCi III software contains a direct CD-ROM driver for Microsoft Windows, so mapping the CD/DVD drive is not necessary. If you have created an emulated D: drive, the CD-ROM drive is automatically mapped to the E: drive in the default configuration. If you have not created a D: drive, the CD-ROM drive is mapped to the D: drive letter.

---

**Note** – SunPCi III 3.0 software supports DVD data, but not DVD video.

---

## ▼ How to Mount a CD-ROM Drive

If you have disabled Solaris Volume Manager (`vold`) on your system, you need to turn it back on to use `vold` with SunPCi III software, or you can manually mount the CD-ROM drive file system instead of using `vold`.

1. **To find out whether Volume Manager is enabled, open a Terminal window on your Solaris desktop and type:**

```
% ps -df | grep vold
```

The system returns information about the Volume Manager process (`vold`) if it is enabled.

If your workstation does not have Solaris Volume Manager enabled, you need to become superuser and mount the CD-ROM drive manually as described in the next steps.

If `vold` is not enabled, the system returns only the `grep` process information, and no `vold` process information, similar to the following:

```
username 2698 1934 0 10:34:01 pts/s 0:00 grep vold
```

Because `grep vold` is the only information about `vold` that appears, Volume Manager is not enabled. If Volume Manager were enabled, an additional line and different process ID (shown by 2698 in the above `grep` example) would be displayed.

If your workstation has Solaris Volume Manager enabled, skip the rest of this procedure.

2. **If Solaris Volume Manager is not enabled, type the following command and your root password to become superuser on your system:**

```
% su  
password
```

### 3. Type one of the following commands:

- *If your CD-ROM drive is a SCSI drive*, type the following command in a Terminal window on your workstation to mount the CD-ROM drive:

```
# mount -o ro -F hfsfs /dev/dsk/c0t6d0s2 /cdrom
```

---

**Note** – Make sure that you type `-o` with no space between the minus sign and the letter `o`.

---

- *If your CD-ROM drive is an IDE drive*, type:

```
# mount -o ro -F hfsfs /dev/dsk/c0t2d0s2 /cdrom
```

To find out what type of CD-ROM drive you have, and what file system it supports, consult your hardware platform documentation.

### 4. Exit superuser status by typing:

```
# exit
```

## ▼ How to Eject a CD From a CD-ROM Drive

- To eject a CD from your CD-ROM drive, from the Options menu, choose Eject the CD-ROM or press Meta-E while the Solaris window focus is in the SunPCi III window.

---

## Connecting Peripheral Devices

The SunPCi III card main backplate contains an LED indicator, two audio ports, a Universal Serial Bus (USB) 2.0 connection, an Ethernet connection, and an external video port.

# Using the LED Indicator

The LED indicator gives a visual indication of the status of the SunPCi card. The LED indicator is located on the SunPCi III main card backplate. The LED is especially useful when you have several SunPCi cards installed on a system, and helps you identify the active card, as well as check the status of each card.

The following table describes the states of the LED indicator in normal operation.

**TABLE 10-1** LED Colors and Status

Color	Status
Solid green	SunPCi running normally.
Solid amber	Problem with SunPCi card. A system error has occurred and service is required.
Blinking amber	SunPCi running or booting up, but if the blinking amber light continues, it indicates a potential problem.
No Color	SunPCi is powered off and not running.

The LED indicator can be used to identify a specific SunPCi card on your system by either of the following methods.

- If SunPCi is running, you can identify the card on which the session is running by pressing the Meta-F keyboard combination in the SunPCi window. The LED indicator cycles through the green, red, and amber colors for one second each time the Meta-F keyboard combination is pressed.
- If SunPCi is not running, you can identify the card on which the session is running by using the `-f cardname` switch. The LED indicator cycles through the green, red, and amber colors until you type the `kill -INT pid` command to stop the process. You must specify each card, such as `card1`, to identify the card using this process.

## Connecting Audio Devices

The SunPCi III audio ports do not route audio through your workstation's speakers. In order to hear the audio, you need to connect a separate set of speakers or headphones to the Line-out stereo port.

## Connecting the USB Device

You have one USB 2.0 connection on the SunPCi III main card backplate. The USB connection can accommodate any USB device, such as a digital camera, a CD-RW external drive, or printer. Once connected, the USB device should work immediately.

Windows XP Professional, Windows 2000, and Windows 98 support USB connections. However, Windows NT does not support USB or 1394 devices. Refer to your Microsoft Windows documentation for more information.

---

**Tip** – Since the USB and Ethernet ports are next to each other and are a similar size and shape, you might incorrectly plug a USB device into the Ethernet port. Be careful to plug the USB port into the USB port and not into the Ethernet port or you might damage the Ethernet port.

---

## Connecting the Ethernet Device

The SunPCi III main card backplate includes an Ethernet connection to plug a device into a network.

## Connecting the External Video

The SunPCi III video connection enables you to connect a monitor or other video device.

FIGURE 10-1 shows the options available on the main card backplate.

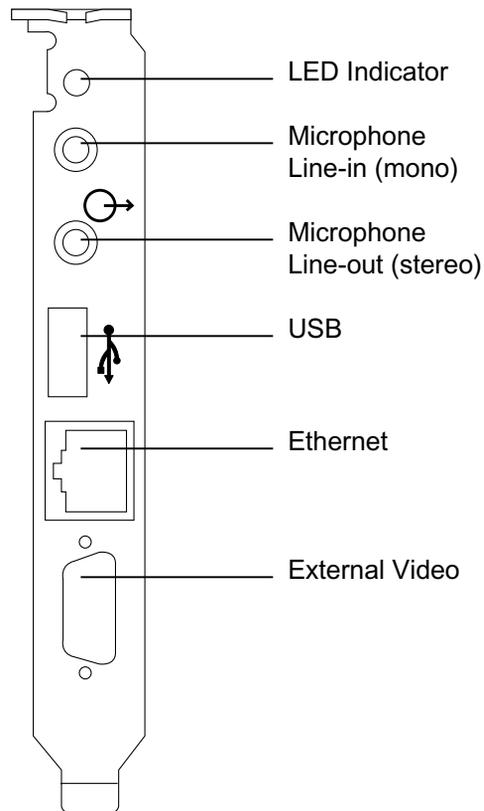


FIGURE 10-1 SunPCi III Main Card Backplate Connectors

---

## Connecting Additional USB and 1394 Firewire Devices

The USB/Firewire Card and Backplate included with the SunPCi III main card features two USB 2.0 connections and one 1394a Firewire connection. Installing the USB/Firewire card and backplate is optional.

## Connecting USB Devices

With SunPCi III, you now have three available USB devices: one on the main card backplate and two on the USB/Firewire Backplate.


Since the USB devices are USB 2.0, they are much faster than the older USB 1.1 or parallel port devices.

Refer to the previous section, “Connecting the USB Device” on page 108, for further information and instructions about USB devices.

## Connecting the Firewire Device

The 1394a Firewire device on the USB/Firewire Backplate is another option for connecting different types of peripherals, such as printers, hubs, modems, digital cameras, and external CD-RW drives.

FIGURE 10-2 shows the options available on the USB/Firewire Backplate.

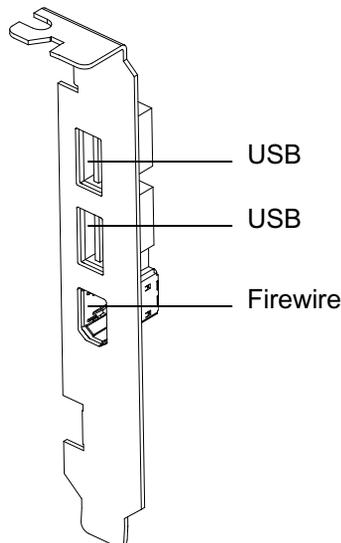


**FIGURE 10-2** SunPCi III USB/Firewire Backplate Connectors

Refer to the *SunPCi III Quick Start Installation Guide* for instructions on how to install the backplate.

---

# Connecting Serial and Parallel Port Devices

The Serial/Parallel Port Backplate included with the SunPCi III card features a parallel port that you can use to connect a parallel device, such as a printer, to operate with SunPCi III software. FIGURE 10-3 shows the connectors on the Serial/Parallel Port Backplate. Installing this backplate is optional.

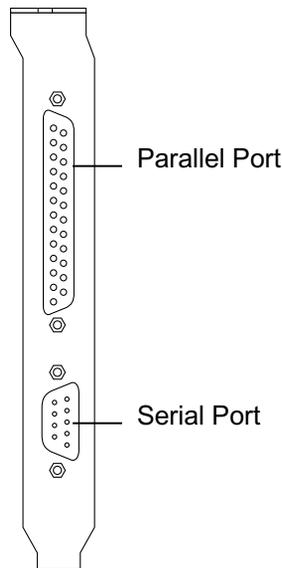

**FIGURE 10-3** SunPCi III Serial/Parallel Port Backplate Connectors

Refer to the *SunPCi III Quick Start Installation Guide* for instructions on how to install the backplate.

Once you have installed the backplate, you can attach the parallel cable to the backplate's parallel port. The SunPCi III card's parallel port is assigned to LPT1.

To print to the parallel port with SunPCi III software, simply use the Print command from your PC-based application, just as you would from a PC.

---

**Note** – These instructions apply to a local printer that you attach to the parallel port on your SunPCi III card. For information about how to use your Solaris printer with Microsoft Windows operating systems, refer to “Printing From Microsoft Windows Using Solaris Printers” on page 138. For information about printers, refer to your Microsoft Windows documentation.

---

## Connecting a Serial Device

The Serial/Parallel Port Backplate contains a serial port that you can use to connect a modem or serial device to operate with SunPCi III software. This serial port is assigned to COM1. FIGURE 10-3 shows the location of the serial port on the backplate.

To use the serial port, connect the serial cable from your device to the serial port on the Serial/Parallel Port Backplate. If you need to install any additional drivers for the device you want to use, have the software diskette or CD handy and use the corresponding Control Panel to install the drivers. For more information about connecting and using the serial device, refer to the documentation that came with your serial device.

### ▼ How to Configure a Serial Mouse for an External Monitor

1. **Attach the mouse connector to the serial connector on the Serial/Parallel Port Backplate.**

Ensure that the connector is firmly secured to the backplate.

2. **Click Start and choose Settings and Control Panel from the Microsoft Windows menu.**

3. **Click the Add New Hardware option.**

Follow the Wizard instructions to install the serial mouse.

## Using SunPCi III Software

---

This chapter provides detailed information about how to use the `sunpci` command-line options and the SunPCi III 3.0 graphical user interface (GUI) window, menus, and dialog boxes. The chapter also givePCI3UGs instructions for working with updating Intel drivers, VNC, and extended drives. This chapter also explains how to set up printers for use with the SunPCi III system.

This chapter includes the following topics:

- “The `sunpci` Command and Its Options” on page 114
- “SunPCi III Menus” on page 117
- “Updating Intel Drivers” on page 118
- “Boot@Boot Support” on page 121
- “Configuring and Using Boot@Boot Support” on page 124
- “Extended Drives and SunPCi III Software” on page 132
- “Using the Copy and Paste Commands” on page 137
- “Printing From Microsoft Windows Using Solaris Printers” on page 138
- “Avoid Using Screen Savers” on page 140

This chapter includes instructions for completing the following tasks:

- “How to Manually Update Intel Drivers for an Existing Windows NT, Windows 2000, or Windows XP Professional C: Drive” on page 119
- “How to Manually Update Intel Drivers for an Existing Windows 98 C: Drive” on page 120
- “How to Interact With VNC From a Remote Client” on page 132
- “How to Access Solaris Files and Directories in Windows 98” on page 133
- “How to Map a Drive Letter to a Directory With a Long Path in Windows 98” on page 134
- “How to Access Solaris Files and Directories in Windows XP Professional, Windows 2000, or Windows NT” on page 136
- “How to Configure Japanese Copy and Paste Between Microsoft Windows and Solaris” on page 137
- “How to Set Up a Solaris Printer From Microsoft Windows” on page 139

---

# The `sunpci` Command and Its Options

To use a command-line option with the `sunpci` command, type the command, followed by a dash, followed by the command-line option, followed by any required argument such as a file name, card name, or command.

For example:

```
% /opt/SUNWspci3/bin/sunpci -option argument
```

Use *option* to specify the command-line option you want to use. Use *argument* to specify the name of the file you want to use with the option. Not all options can accept file names. Note that there is no space between the dash and the option.

For example, to start SunPCi III software and place customized text in the window's title bar, type the following:

```
% /opt/SUNWspci3/bin/sunpci -title "Text string"
```

To start the SunPCi III software with a C: drive other than your default C: drive, type this command and substitute the name of the new C: drive file for `C.newdrive`:

```
% /opt/SUNWspci3/bin/sunpci -C C.newdrive
```

TABLE 11-1 lists the available SunPCi III command-line options.

TABLE 11-1 SunPCi III Command-Line Options

Option	Purpose
No option	When no option is used with the <code>sunpci</code> command, by default SunPCi III opens the SunPCi menu.
-B	When used in conjunction with the <code>sunpci -C <i>disk.image</i></code> file name and <code>-c <i>cardname</i></code> options, the <code>-B</code> option binds the named <i>cardname</i> MAC address to the <i>disk.image</i> file name by writing the <i>cardname</i> card's MAC address into the <i>filename.ini</i> file header. This action overwrites the original MAC address in the file header. Formerly <code>-bindmac</code> .  A general form of the <code>-B</code> option's use is: <code>sunpci -C <i>disk.image</i> -c <i>cardname</i> -B</code>
-b	Enables you to change the default depth of the boot time VGA window to be either 8 or 24 bit by default. If you change to 24 bit, you avoid some colormap flashing issues, while still allowing you to choose the 8-bit option, unlike <code>NO8BIT</code> . Formerly <code>-depth</code> .
-C <i>disk.image</i>	Starts the SunPCi III window using the <i>disk.image</i> file name as drive C:. This overrides the default drive specified in the default properties file <code>/\$HOME/pc/SunPC.ini</code> .
-c <i>cardname</i>	Starts the SunPCi III card using <i>cardname</i> as drive C:. The <i>cardname</i> is a label assigned by the SunPCi III software starting with <code>Card1</code> , <code>Card2</code> and so on. To obtain a listing of installed card names use the <code>-l</code> option. For more information about multiple card use, see "Using Multiple SunPCi III Cards" on page 21.
-D <i>disk.image</i>	Starts the SunPCi III window using the <i>disk.image</i> file name as drive D:. This option overrides the default drive specified in the default properties file <code>/\$HOME/pc/SunPC.ini</code> .
-display <i>hostname.domain:0.0</i>	Displays the SunPCi III window on another workstation <i>hostname</i> in <i>domain</i> . Formerly <code>-display</code> . For example, to open the SunPCi III window on another system named <i>willow</i> in the eastern domain, type the following command on your workstation (where the SunPCi III 3.0 card is installed): <code>/opt/SUNWspci3/bin/sunpci -d willow.eastern:0.0</code>
-f	Starts the card finder LED functionality in SunPCi III, which cycles through the colors of the LED (green, red, amber) for several seconds.
-h	Displays SunPCi III command-line Help. The option displays a list of all SunPCi III command-line options and formats. Formerly <code>-help</code> .

TABLE 11-1 SunPCi III Command-Line Options (Continued)

Option	Purpose
-l	Displays the system's installed and recognized SunPCi cards. The switch returns the Card Name, for example Card1; the device file name in the /dev directory, for example /dev/sunpci2drv0; the card's Type and Description; and the card's standard Ethernet (MAC) address, for example ID = 08:00:20:F9:5F:2C. See "How to Identify Card Names" on page 26 for a complete listing of the output format.
-n	Stops the verification of card and disk image combination, and stops the display of the warning dialog box, if you start an image with a card on which the image was not created. See "How to Create an .ini File Using the -n Option" on page 24 for the full text of the warning. If you wish to rebind the image and current card, see the -B option. Formerly -nomac.
-n <i>filename.ini</i>	Creates a new <i>filename.ini</i> file and a new disk image name incorporating the file name. The command brings up the SunPCi III Disk Create menu GUI, with the default disk name already created as \$HOME/pc/C. <i>filename</i> .diskimage. If the file already exists the sunpci command aborts, and no file name is created. Formerly -new.
-p <i>filename.ini</i>	Starts SunPCi III software with the configuration information in the properties file specified with <i>filename</i> . The default properties file for SunPCi III is \$HOME/pc/SunPC.ini.
-R	Forces the CMOS to be reloaded in the current <i>disk.image</i> file, similar to clearing the CMOS on a PC motherboard. This command is used when the BIOS setup option has changed, if SunPCi does not boot, or to restore SunPCi default settings. After using this command, a message displays confirming the CMOS has been updated.
-title " <i>Text string</i> "	Writes the title argument into the title bar of the SunPCi III window when the argument <i>Text string</i> is a quoted character string including spaces. The quotes are unnecessary if the character string contains no spaces.
-v	Directs the Microsoft Windows video to the external video connector. Refer to FIGURE 10-1 to find the location of the video port. For information about how to set this for your monitor, consult the section "How to Configure External Video for ..." in the chapter for the operating system you are using. Formerly -vga.
-w [ <i>time</i> ]	Causes SunPCi III software to retry failed X server connections, either indefinitely (if no <i>time</i> argument follows -w), or for <i>time</i> seconds. If <i>time</i> is specified and SunPCi III software has not successfully connected to an X server after <i>time</i> seconds, SunPCi III software exits. Formerly -xwait.

---

# SunPCi III Menus

The first window you see when you start SunPCi III software is the SunPCi III window. This window provides the emulated OpenDOS command prompt, from which you execute DOS programs and from which you launch any installed Microsoft Windows operating system. The following sections describe the File and Options menus at the top of the SunPCi III window.

## File Menu

The SunPCi III File menu contains two commands: Reset PC and Exit. TABLE 11-2 describes the commands available within the File menu.

TABLE 11-2 File Menu Commands

Menu Commands	Purpose
Reset PC	Closes and reboots the software. Similar to pressing the Reset button on a PC (also called a hard reset or hard reboot). Perform this action in the following situations: <ul style="list-style-type: none"><li>- If your keyboard or operating system running in the SunPCi III window no longer responds</li><li>- To attach a different SunPCi III emulated hard drive</li></ul>
Exit	Closes SunPCi III software and closes the SunPCi III window. When you choose the Exit menu command, the SunPCi Exit dialog box opens with several button options: <ul style="list-style-type: none"><li>- Exit Now</li><li>- Shutdown Windows and Exit SunPCi</li><li>- Cancel</li></ul>



---

**Caution** – It is important to close Microsoft Windows first by either selecting Shut Down from the Start menu or choosing the Shutdown Windows and Exit SunPCi button. If you do not shut down gracefully, you risk damage to the application.

---

# Options Menu

The Options menu lets you create, update, attach, and grow emulated hard disk drives (C: and D: drives). From the Options menu, you can also attach a CD-ROM drive or eject a CD/DVD. The menu also enables you to attach the mouse to SunPCi III, which you need to do after you have installed your version of Microsoft Windows, but before you install the SunPCi III drivers.

TABLE 11-3 describes the disk-related commands in the Options menu. Complete instructions for choosing emulated drives are provided in “Emulated Drives and SunPCi III Software” on page 13.

**TABLE 11-3** Options Menu Commands

Menu Commands	Purpose
Attach an Existing Emulated Drive	Specifies the emulated hard drive ( <i>directory/filename</i> ) you want to assign to drive C: or D:.
Create a New Emulated Drive	Creates the file you want to use as an emulated drive.
Grow an Emulated Drive	Enables expansion and growth of an emulated hard disk.
Attach CD-ROM	Attaches a CD-ROM drive to SunPCi III.
Eject CD	Ejects the CD or DVD from the CD-ROM drive. The keyboard shortcut is Meta-E.
Attach Mouse	Enables you to attach the mouse to the SunPCi III window when you are in SMI mode. The keyboard shortcut is Meta-M.

---

## Updating Intel Drivers

SunPCi software now automatically updates your Intel drivers after a fresh installation of certain Microsoft Windows operating systems. You also can manually update your drivers. This section describes how to do both types of update.

# Automatic Update of Intel Drivers

SunPCi software recognizes the installation of a more recent SunPCi package and prompts you to update the Intel side drivers. This prompt consists of a dialog box opening during the Windows logon, which asks whether you want to update the Intel side drivers. You have several options:

- If you choose either OK or press Return, the Intel side driver updates start and the drivers are updated. This process is the same as if you manually update Intel side drivers by mapping to `\\localhost\opt\SUNWspci3`, navigating to the appropriate drivers directory, and starting `update.bat`.
- If you choose Cancel or Close, the dialog box closes and no updates occur. If you do not update the drivers, every time you start SunPCi, you will be asked to update the drivers.
- If you do not choose any button, the dialog box times out after a specified amount of time, closes, and no update occurs.

You can use the automatic update of Intel drivers feature only with the following operating systems:

- Windows NT4 WS
- Windows 2000 Professional
- Windows XP Professional

You *cannot* use the automatic update with the following operating systems:

- Windows 98
- Windows NT4 Server
- Windows NT4 TS
- Windows 2000 Server

---

**Note** – The automatic update fails when there are no drive letters available for mapping of `\\localhost\opt\SUNWspci3`. If this update fails, the automatic update properly terminates, exits, and no update occurs.

---

## ▼ How to Manually Update Intel Drivers for an Existing Windows NT, Windows 2000, or Windows XP Professional C: Drive

With SunPCi III 3.0 software, drivers are automatically updated. The procedure described here shows how to manually update the drivers instead of using the automatic update.

---

**Note** – If you are using and running any server products, you must run `c:\sun\sunfsd\fsdon` prior to mapping a network drive.

---

To manually update your existing C: drive, follow these steps:

1. **Map a drive (for example, X:) in Microsoft Windows Explorer to the location where you installed the SunPCi III 3.0 software package (by default, the `/opt` directory).**
2. **Map your drive to the following location:**

`\\localhost\opt\SUNWspci3`

3. **Do one of the following, depending on the operating system you are running:**
  - If you are running Windows NT, click down the directory tree to `\drivers\winnt\patch` and double-click `update.bat` to complete the installation.
  - If you are running Windows 2000, click down the directory tree to `\drivers\win2k\patch` and double-click `update.bat` to complete the installation.
  - If you are running Windows XP Professional, click down the directory tree to `\drivers\winxp\patch` and double-click `update.bat` to complete the installation.

---

**Note** – The default installation location is `/opt/SUNWspci3`. If you installed the SunPCi III software to another location, map the drive to that location.

---

When the script finishes, the Microsoft Windows software might ask you to reboot your machine. If so, you must reboot for the changes to take effect.

## ▼ How to Manually Update Intel Drivers for an Existing Windows 98 C: Drive

To update your existing Intel drivers for a Windows 98 C: drive, do the following:

1. **Click the Start button and choose Run.**

The Run dialog box opens.
2. **Type the following path into the dialog box:**

`f:\drivers\win98\setup`

**3. Click OK.**

The Install Shield Wizard dialog box opens and displays a progress bar. The SunPCi Drivers Setup window opens.

**4. Click the Update existing drivers radio button.**

**5. Click Next.**

The Welcome to SunPCi Setup Program window opens.

**6. Click Next.**

The Install Shield window opens, along with a progress bar. When the installation is complete, the Information dialog box opens, stating SunPCi will continue to load its drivers and reboot.

**7. Click OK.**

The SunPCi software restarts.

---

## Boot@Boot Support

Boot@Boot is a feature that you can configure to automatically start the SunPCi III software on one or more SunPCi III cards when it is installed on a Solaris workstation or server. The ability to automatically restart SunPCi sessions if they fail and the ability to gracefully shut down SunPCi sessions (including performing an orderly shutdown of the Microsoft Windows operating system) are also part of the Boot@Boot support. This support is specifically designed to support the following versions of Microsoft Windows only:

- Windows 2000 Server
- Windows NT4 Server
- Windows NT4 TS

The following SunPCi III 3.0 software components support Boot@Boot:

- SunPCi daemon — This is a required component.
- Virtual Network Computing<sup>1</sup> (VNC) — This is an optional component.

---

1. Virtual Network Computing (VNC) software is copyright 1993 by X Consortium and copyright 1999 by AT&T Laboratories. All rights reserved. The SunPCi implementation of VNC supports the SunPCi product only. Other versions of VNC will not interoperate with this version of VNC. VNC source code is included on the SunPCi III CD in the directory `/SOURCE`. See legal notices in the source code for information about using, modifying, or redistributing VNC source code.

# SunPCi Daemon

The SunPCi daemon (`sunpcid`) is a dual-function application of Boot@Boot support and includes such features as automatically starting SunPCi sessions at boot time and shutting down SunPCi sessions at system shutdown time. The daemon is controlled through the (`sunpcidadm`) command.

The `sunpcidadm` command implements control functionality through command-line arguments that enable Solaris server administrators to configure the SunPCi daemon process to work as needed. For example, you can use the `sunpcidadm` command to add Boot@Boot support for a SunPCi III card into the `/etc/Master.ini` file, which has been expanded to contain the configuration information for the `sunpcidadm` daemon.

You can also use the `sunpcidadm` command to enable and disable auto restart functionality, and to start and stop the SunPCi software on one or more cards. When changes are made to the SunPCi daemon configuration by the `sunpcidadm` command with command-line arguments, the controlling `sunpcidadm` daemon sends a signal to the SunPCi daemon process, informing it of the changes, and the daemon process reconfigures itself.

For complete information about the `sunpcidadm` command and its options, see the `sunpcidadm` man page. Make sure that your `MANPATH` variable is set as follows:

```
$MANPATH: /opt/SUNWspci3/man
```

Then, type the following command:

```
% man sunpcidadm
```

## Virtual Network Computing (VNC)

VNC is a customized version of a GNU Public-Licensed (GPL) software product from AT&T Laboratories that allows remote administration of the SunPCi III product. VNC enables SunPCi III software to run on a server that might either have no display hardware connected (headless) or have no normal X11 display available (for example, before a user logs in to the system).

The version of VNC shipped with the SunPCi III 3.0 release contains two components:

- `Xvnc` — A modified X11 server that renders data into a virtual frame buffer
- `vncviewer` — An X11 client that enables the contents of the `Xvnc` virtual frame buffer to be displayed on another X11 display

The installation and setup of Microsoft Windows via VNC (Virtual Network Computing) is not recommended for the following reasons:

- Multiple cursors appear in the window, making mouse use confusing.
- The amount of window data generated during installation is high because of constant updates by the VGA emulation, which slows the installation process.

For optimal performance, complete the installation process while displaying information on a local monitor. If this option is not possible, complete the installation while displaying to a remote monitor is a better option than using VNC. Installation using VNC is strongly discouraged and should only be used as the last option. This issue is present for the installation of all Microsoft Windows systems that can use VNC.

The Xvnc server allows SunPCi sessions to display to what appears to the software as a normal X11 display. Xvnc is ordinarily started by the SunPCi daemon before starting the SunPCi sessions.

The vncviewer enables system administrators to interact with the SunPCi cards, either locally on the server where the cards are installed (assuming that the server has a display attached), or remotely on any Sun machine (including a Sun Ray™ display) that is running a Sun X server. With the combination of the vncviewer and SunPCi displaying to the Xvnc server, it is possible to attach “on the fly” to a currently running VNC session from any Sun machine on the network, and to interact with SunPCi sessions running on a remote server. The VNC session can be detached and later reattached from a totally different machine. The SunPCi sessions continue running even though no one is interacting with them.

Note that VNC is intended to be used only for SunPCi administration purposes, and that VNC is not a supported mechanism for remote display of SunPCi sessions for normal day-to-day Microsoft Windows interaction. Under normal circumstances (single-user workstation usage), you should use X11 remote display functionality for remote display of SunPCi sessions. Multiuser server situations should use Citrix or NT terminal server functionality for remote display.

---

**Note** – The SunPCi III 3.0 version of Xvnc and vncviewer are modified and work only with each other. They are not compatible with any other versions of VNC software.

---

As part of the VNC licensing agreement, Sun is required to make the VNC source code available for viewing with each SunPCi release. The VNC sources provided here are not supported by Sun Microsystems and are provided for reference purposes only as required under the GNU General Public License.

The VNC source code is located in the SunPCi III 3.0 CD source directory and is named `vnc_src.tar.Z`.

Uncompress the `.Z` file and then extract the `.tar` file to view the VNC source code.

---

**Note** – You are not required to build the VNC sources to use VNC. A prebuilt package is available as `SUNWspvn3`.

---

---

## Configuring and Using Boot@Boot Support

To use SunPCi Boot@Boot support, you must configure the SunPCi daemon so that the daemon knows what to run. You must log in as root to configure Boot@Boot support, because the SunPCi daemon runs under the root account.

The following sections describe how to configure Boot@Boot support. Make sure that your `MANPATH` variable is set as follows:

```
$MANPATH: /opt/SUNWspci3/man
```

Then, type the following command:

```
% man sunpcidadm
```

## Configuring Boot@Boot Support for VNC

---

**Note** – Remember that the VNC package must be installed prior to configuring Boot@Boot support.

---

The first task you must complete to configure Boot@Boot is to configure VNC support so that the SunPCi III cards have an X server available that is guaranteed to be running and accepting connections when the cards boot. If you want to use another X server to display your SunPCi consoles, and the X server is guaranteed to be available for connections at all times, you can choose not to use VNC support. See “Using an X Server Other Than Xvnc” on page 131.

To configure VNC support, you must first add VNC support to the file `/etc/Master.ini` by using the following command:

```
# /opt/SUNWspci3/bin/sunpcidadm -a VNC
```

This adds the necessary configuration information that the daemon needs to start the Xvnc server.

---

**Note** – The `sunpcidadm` command is case insensitive when referring to VNC or to cards, so that the commands `sunpcidadm -a vnc`, `sunpcidadm -a VNC`, and `sunpcidadm -a VnC` are all handled the same.

---

When you initially add the VNC configuration information to the file `/etc/Master.ini`, VNC is configured as disabled by default. This is so that you can customize the configuration information before Xvnc starts.

For example, if you want to run VNC and the SunPCi sessions under an account other than the root account, you can modify the user ID, group ID, and home directory for the user. Note that if you change the username for VNC, the `vncviewer` application will expect you to type the password for that username when connecting to the Xvnc server, rather than the root password.

In this way, you can give administrators for the SunPCi cards full access to them without having to give them the root password to the machine in which they are installed. If the accounts you specify are not NIS or NIS+ accounts but rather *local* accounts, the accounts must have read access to the `/etc/shadow` password file.

To configure VNC to run under the `sunpciadmin` account, in the group `sunpcigroup`, with the home directory `/home/sunpciadmin`, you would modify the following VNC section into the `/etc/Master.ini` file as follows:

```
[VNC]
CmdLineArgs=-geometry "1152x900" -depth 24
DisplayNum=10
StartupScript=/opt/SUNWspci3/bin/VNCStartup
UID=sunpciadmin           ;User ID
GID=sunpcigroup          ;Group ID
HomeDir=/home/sunpciadmin ;Home directory
AutoStart=Disabled
```

This configuration information would set the SunPCi daemon to start up the Xvnc server running at 1152 x 900 pixel resolution, with a pixel depth of 24 bits per pixel. The server would accept connections for display number 10 (`DISPLAY=hostname:10`). The process would run under the `sunpciadmin` account, in the group `sunpcigroup`, with the home directory `/home/sunpciadmin`, and the daemon would also run the `/opt/SUNWspci3/bin/VNCStartup` script to start up the CDE window manager and an `xterm` terminal emulator.

You can add other entries for the Xvnc server, for example, one that tells Xvnc to use a foreign language keyboard key table. For example, if the person who will be administering the SunPCi cards has a Sun German Type 5 keyboard, you would modify the `CmdLineArgs` entry as follows:

```
CmdLineArgs=-geometry "1152x900" -depth 24 -keytable Germany5
```

The X11 key table files are located in the `/usr/openwin/share/etc/keytables` directory. See the Xvnc man page for other Xvnc command options.

After you have configured VNC, you must enable it, which will cause the SunPCi daemon to start running the Xvnc server. To enable VNC for Boot@Boot use the following command:

```
# /opt/SUNWspci3/bin/sunpcidadm -e VNC
```

This changes the `AutoStart` line in the `/etc/Master.ini` file to `Enabled`, and instructs the SunPCi daemon to reprocess the file and spawn the Xvnc server process with the configuration specified in the file. Once this is done, you can run the `vncviewer` to interact with any X applications that are displaying to the Xvnc server.

## Preparing SunPCi III Cards for Boot@Boot Support

Each card that you want to configure for Boot@Boot support must have an existing and unique `.ini` file and a matching C: drive (and optionally a D: drive). By convention, the `.ini` file for `Cardn` is named `cardn.ini`, and is located in the `~/pc` directory for the username under which the SunPCi session or sessions will run.

---

**Note** – Remember you must create a new `.ini` file for each card. Refer to “How to Create an `.ini` File Using the `-n` Option” on page 24 for further information.

---

For example, if the SunPCi sessions run under the root account, the `.ini` file for `Card1` is `/pc/card1.ini`. The C: drive that is referenced by the `card1.ini` file can be anywhere on an accessible file system, but for best performance, the file system should be physically connected to the machine in which the cards are installed.

For example, the path to a C: drive with the Windows 2000 operating system installed on it for Card1 might be `/files/drives/C.Win2K.diskimage`, and the `/pc/card1.ini` file would contain the following entry:

```
[Drives]
C drive = /files/drives/C.Win2K.diskimage
```

After you have created the appropriate `cardn.ini` file or files, installed Microsoft Windows operating systems, and so forth, you can configure the cards for Boot@Boot support. See “Configuring Multiple SunPCi III Cards” on page 11.

## Configuring SunPCi III Cards for Boot@Boot Support

As with VNC support, you must add each card individually and then enable it to run. To add Boot@Boot support for a card, you use the `sunpcidadm` command with the `-a` option.

For example, to add Boot@Boot support for Card1, use the following command:

```
# /opt/SUNWspci3/bin/sunpcidadm -a card1
```

This adds the following information to the already existing configuration information for Card1 in the `/etc/Master.ini` file:

```
[Card1]
CmdLineArgs=-p /pc/card1.ini -c card1 -xwait
AutoStart=Disabled
UID=root      ;User ID
GID=root      ;Group ID
HomeDir=/     ;Home directory
```

This information instructs the SunPCi daemon that Card1 is to be added to its internal list to handle. As with VNC, when you add Boot@Boot support for a card, the card is configured with `AutoStart` disabled. Again, this is to give the person who will configure the card the opportunity to customize the way the SunPCi software will run on the card, before starting the SunPCi software.

The information shown above, which was added to the Card1 section of the `/etc/Master.ini` file, contains many of the same items that are in the VNC section. The `UID`, `GID` and `HomeDir` entries, as well as the `CmdLineArgs` and `AutoStart` options, are all common to both, and act similarly.

For example, under normal circumstances, if you change the `UID`, `GID`, or `HomeDir` entries in the VNC section, make the same changes for each card that is configured for `Boot@Boot`.

After you have configured one or more cards properly, you can enable them using the `sunpcidadm` command with the `-e` option. Unlike the `-a` option, which you can use to add only one card at a time, you can use the `-e` option to enable multiple cards at once.

For example, if two cards, `Card1` and `Card2`, are configured for `Boot@Boot` support, you can enable both at the same time by using the following command:

```
# /opt/SUNWspci3/bin/sunpcidadm -e card1 card2
```

After you issue this command, the SunPCi daemon will start SunPCi sessions on both cards.

---

**Note** – If the card has `AutoStart` enabled in the `/etc/Master.ini` file, be sure that the SunPCi software *is not* running on the card when you use the `sunpcidadm -e` option to enable the card. If `AutoStart` is enabled on a card that is running, the daemon will fail to start the SunPCi software on that card.

---

## Listing Boot@Boot Sessions

If you want to see which SunPCi sessions are running, along with the process IDs of the sessions, use the following command:

```
# /opt/SUNWspci3/bin/sunpcidadm -l
```

The system returns a listing similar to the following:

```
sunpcid:      pid = 1131
VNC:         pid = 1134
Card1:       pid = 1135
Card2:       pid = 1136
#
```

# Disabling Boot@Boot Support for VNC or for SunPCi III cards

If it is necessary to shut down one or more SunPCi sessions (for example, to make a copy of C: drives for backup purposes), the SunPCi daemon must be set to disable the `AutoStart` capability. Otherwise, if a SunPCi session is shut down the SunPCi daemon will attempt to restart it automatically. To disable `AutoStart` capability for a SunPCi card or for the Xvnc server, use the `sunpcidadm` command with the `-d` option. You can use the `-d` option to disable multiple cards at a time.

For example, to disable `Card1` and `Card2`, you would use the following command:

```
# /opt/SUNWspci3/bin/sunpcidadm -d card1 card2
```

This command modifies the `AutoStart` entries in the `Card1` and `Card2` sections to be `Disabled`. Note that the SunPCi sessions for each card continue to run, and will continue to run until they are shut down by some other means.

## Shutting Down a VNC or SunPCi III Session

There are several ways to shut down a VNC or SunPCi session.

To shut down a SunPCi or VNC session without interacting with SunPCi software or VNC directly through `vncviewer`, use the `sunpcidadm` command with the `-D` option. This marks the session as `Disabled` in the `/etc/Master.ini` file, and also requests that the SunPCi daemon perform an orderly shutdown procedure on the session.

To shut down a session on `Cardn`, use the following command:

```
# /opt/SUNWspci3/bin/sunpcidadm -D cardn
```

Note that this disables `AutoStart` on `Cardn`, so to restart the session on `Cardn`, or have it booted automatically on the next reboot, you must reenable `Cardn` using the `sunpcidadm -e` command.

To shut down down VNC, use the following command:

```
# /opt/SUNWspci3/bin/sunpcidadm -D VNC
```

If you shut down VNC in this manner, all current SunPCi sessions are also shut down in an orderly manner.

## Shutting Down the SunPCi Daemon Process

If it is necessary to shut down the SunPCi daemon process (for example, to upgrade the SunPCi software to a new release), either use the `sunpcidadm` command directly, with the `-t` or `-T` option, or indirectly, by using the `-stop` option with the `/etc/init.d/sunpci3.server` script.

The `-t` and `-T` options to the `sunpcidadm` command instruct the SunPCi daemon process to perform orderly shutdowns on all running SunPCi sessions, and then terminates. The difference between the two options is that `-t` waits for all sessions to terminate before returning to the calling shell, whereas the `-T` option instructs the daemon to terminate all sessions and return to the calling shell immediately.

Terminating the SunPCi daemon process does not modify the Boot@Boot configuration information in the `/etc/Master.ini` file. If you restart the SunPCi daemon by using the `sunpcidadm` command with no options and put it in the background, or by invoking the `/etc/init.d/sunpci3.server` script with the `-start` option, any enabled sessions will be restarted. This is the mechanism that is used to shut down SunPCi sessions during a normal Solaris system shutdown.

## Making Manual Changes to the Boot@Boot Configuration

You can edit the `/etc/Master.ini` file in order to modify the following:

- The `DisplayNum` for Xvnc to use if there is already an existing display using that number (for instance, on a Sun Ray server)
- The `StartupScript` to use (the default is `/opt/SUNWspci3/bin/VNCStartup`)
- The command-line arguments for starting SunPCi (for example, to add the `-title title_string` option for the window manager decorations or to use a different `.ini` file with the `-p` option)
- The command-line arguments for VNC (for example, to make VNC display at a different resolution, such as 1280 x 1024)

If it is necessary to make changes manually to the Boot@Boot configuration information in the `/etc/Master.ini` file, for example, to change the configuration file that is to be used by Card1 from `/pc/card1.ini` to `/pc/Win2K.ini`, the SunPCi daemon will not immediately process those changes, as it has no knowledge that the changes have taken place.

To inform the SunPCi software process that these changes have occurred, you must use the `sunpcidadm` command with the `-r` option. This tells the SunPCi daemon that it must reread the `/etc/Master.ini` file and reconfigure itself appropriately. Note that any change does not take place until the modified sessions are restarted, so to use the new `/pc/Win2K.ini` file, you must shut down and restart the SunPCi session for Card1 using either the SunPCi graphical user interface or the `sunpcidadm` command with the `-D` option.

## Using an X Server Other Than Xvnc

To use an X server other than Xvnc for a SunPCi card, you must add a line such as the following to the section for that card in the `/etc/Master.ini` file:

```
DisplayName=hostname:displaynum
```

For example, to configure Card1 to display on the X server running on the console of the host named `xyzy` you would add an entry to the [Card1] section of the `/etc/Master.ini` file that would read `DisplayName=xyzy:0`.

---

**Note** – Only Sun X servers and VNC are supported.

---

## ▼ How to Interact With VNC From a Remote Client

1. **Install the `SUNWspvn3` package on the remote client.**

The client system need not contain any SunPCi III cards, but it may.

2. **Go to the `vncviewer` by going to the following path:**

```
# /opt/SUNWspvn3/bin
```

A dialog box appears that asks for the Xvnc server name, and for the password of the user under whose account the Xvnc server is running on the server.

To supply this information directly on the command line, use a command similar to the following:

```
# vncviewer vncserverhostname:displaynum
```

Replace *vncserverhostname* with the name of the server running VNC, and replace *displaynum* with the number of the display to use. For example:

```
# vncviewer xyz:10
```

---

## Extended Drives and SunPCi III Software

An extended drive is a mapping of a Windows drive letter to a directory in the Solaris file system. With extended drives, you can share applications and data files between the Solaris operating environment and Microsoft Windows operating systems. The SunPCi III program permits up to 22 extended drives for storing applications and files.

There are two kinds of extended drives: file system drives and network drives. This section describes both types of drives. Both are mapped using Windows Explorer.

## File System Drives

A *file system drive* is an extended drive that maps to directories on any Solaris file system mounted on the local host.

To map a file system drive in Windows 98, refer to “How to Access Solaris Files and Directories in Windows 98” on page 133.

To map a file system drive in Windows XP Professional, Windows 2000, or Windows NT, refer to “How to Access Solaris Files and Directories in Windows XP Professional, Windows 2000, or Windows NT” on page 136.

## Network Drives

A *network drive* is an extended drive that you mount to a SunPCi III PC (emulated PC) or real PC directory. To mount a network drive, you need the following:

- SunPCi or a PC running NTBEUI (a Microsoft supplied network protocol), making sure that Client for Microsoft Sharing and File and Printer Sharing are enabled. Refer to Microsoft Windows documentation for further information.
- Solaris running Samba or PC NetLink.

Refer to Microsoft Windows documentation for information about mapping network drives and mounting and sharing network drives with an emulated PC. Also refer to Samba and PC NetLink documentation for additional information about mounting and sharing network drives.

## ▼ How to Access Solaris Files and Directories in Windows 98

This section explains how to assign and use Solaris extended drives with SunPCi III software and Windows 98 using Windows Explorer. The procedure is the same for both extended and network drives.

To map a Solaris drive or directory to work in Windows 98, perform the following procedure.

- 1. Click Start and choose Programs and Windows Explorer.**

The Windows Explorer window opens.

- 2. From the Tools menu, choose Map Network Drive.**

The Map Network Drive dialog box opens.

**3. Click the arrow to the right of the Drive field.**

A list of unassigned drive letters is opens.

---

**Note** – In Windows 98 only, if you attempt to remap drive f:, the system returns the error, “Device not connected.” Select a different drive letter.

---

**4. Scroll down the list until you find the drive letter you want, and then click to choose it.**

The drive letter opens in the Drive field.

**5. Type the following path into the Path field, substituting the names of your directory and subdirectory:**

`\\directory\subdirectory`

OR

`\\directory\.`

A mapped path requires two components. If you want to map a drive to a UNIX subdirectory component that has only one element, you need to use a period (.) as the second element. For example:

`\\home\.`

Do not use an asterisk in the mapping path, or Microsoft Windows will return the error, “Device not connected.”

**6. If you want this extended drive to map automatically whenever you start up SunPCi II software, click the check box next to “Reconnect at logon.”**

**7. Click OK.**

The new extended drive appears in the Windows Explorer window.

## ▼ How to Map a Drive Letter to a Directory With a Long Path in Windows 98

If you need to map a drive to a UNIX directory that contains more than two path elements (`/directory/subdirectory/subdir2`), you need to use UNIX symbolic links, by performing the following procedure.

1. **Create a link from your root file system (you must be root), substituting your path for the one shown in the following example. Type the following command:**

```
% ln -s /net/typicalmachine/files1/anydir/anydir
```

---

**Tip** – For further information about `ln`, type `man ln` to obtain information from the man pages.

---

2. **Click Start and choose Programs and Windows Explorer.**

The Windows Explorer window opens.

3. **From the Tools menu, choose Connect Network Drive.**

The Map Network Drive dialog box opens.

4. **Click on the arrow to the right of the Drive field.**

A list of unassigned drive letters opens.

5. **Scroll down the list until you find the drive letter you want, and then click to choose it.**

The drive letter opens in the Drive field.

6. **Type the following path into the Path field, substituting the name of your directory for *anydir*:**

```
\\anydir\.
```

7. **If you want this extended drive to map automatically whenever you start up SunPCi III software, click the check box next to “Reconnect at logon.”**

8. **Click OK.**

The new extended drive appears in the Windows Explorer window.

Your network drive now maps to `/anydir`, which is a symbolic link to the destination directory `/net/typicalmachine/files1/anydir`.

## Installing Windows 98 Applications on Extended Drives

You can install Windows 98 applications on either of your emulated drives (C: and D:), or on any of the drives that you create using Windows Explorer.

Refer to “Extended Drives and SunPCi III Software” on page 132 for more information about the extended drives.

## ▼ How to Access Solaris Files and Directories in Windows XP Professional, Windows 2000, or Windows NT

In Windows XP Professional, Windows NT, and Windows 2000, you need to specify that a file system drive is mounted on your Solaris system. This is done by specifying `localhost` as the device-node in the UNC path specification.

To map a file system drive in Windows XP Professional, Windows 2000, or Windows NT, perform the following procedure.

**1. Click Start and choose Programs and Windows Explorer.**

The Windows Explorer window opens.

**2. From the Tools menu, choose Map Network Drive.**

The Map Network Drive dialog box opens.

**3. Click on the arrow to the right of the Drive field.**

A list of unassigned drive letters opens in the menu.

**4. Scroll down the list until you find the drive letter you want, and then click to choose it.**

The drive letter opens in the Drive field.

**5. Type the following path into the Path field, substituting the names of your directory and subdirectory:**

```
\\localhost\directory\subdirectory
```

For example, to map a drive to `/home/joeuser` on your Solaris workstation, use this path:

```
\\localhost\home\joeuser
```

**6. If you want this drive to map automatically whenever you start SunPCi III software, click the check box next to “Reconnect at logon.”**

## 7. Click OK.

The new file system drive appears in the Windows Explorer window the next time you open Windows Explorer.

---

**Note** – You can map long directory paths (that is, paths with more than two elements) in Windows XP Professional, Windows NT, and Windows 2000. For example, you can map the path `\\localhost\usr\local\bin` without using a symbolic link, but you would need to use the link to map the same directory path in Windows 98.

---

---

# Using the Copy and Paste Commands

The SunPCi software enables you to configure copy and paste for the Japanese locale for Windows XP Professional, Windows 2000, and Windows NT.

Copy and paste commands do not work on server products for security reasons.

---

**Note** – Font information is not passed along in copy and paste operations. Special characters and fonts might produce unexpected results when copied and pasted between UNIX and Microsoft Windows. For best results, use plain text.

---

## ▼ How to Configure Japanese Copy and Paste Between Microsoft Windows and Solaris

To configure Japanese copy and paste functions, perform the following procedure.

1. Exit SunPCi III software.
2. Using the text editor of your choice, open the `$HOME/pc/SunPC.ini` file.
3. Add the following lines to the end of the file:

```
[CopyAndPaste]
CodeSet=eucJP
```

4. Save your changes and close the file.

The next time you start the SunPCi III 3.0 software, the Japanese copy and paste functions should work.

---

**Note** – Make sure that the CodeSet line specifies `eucJP`, as shown in Step 3. If you try to substitute a different code or mistype the characters, Microsoft Windows returns the following message: `Warning, bad clipboard translation codeset specified in SunPC.ini file: codeset. Ignoring.` If you see this message, click OK to continue. Microsoft Windows continues to work, but Japanese copy and paste support is not enabled.

---

---

## Printing From Microsoft Windows Using Solaris Printers

This section explains how to configure your Microsoft Windows settings with SunPCi III 3.0 software so that you can print using your workstation's network printer.

When connecting a printer from your Solaris workstation, do one of the following:

- Connect the printer to the SunPCi III hardware to print from Microsoft Windows.
- Connect the printer to the non-SunPCi III Sun hardware to print from Solaris.

There are hardware compatibility issues, particularly drivers, that might not work properly if you try to print from Microsoft Windows when you are connected to the non-SunPCi III Sun hardware.

---

**Note** – If you are trying to print and the network is busy, there might be delays in printing, as well as delays in retrieving printer status and printer queue contents.

---

---

**Note** – SunPCi III 3.0 software does not support printing from DOS to a UNIX printer. It is possible to choose that option during the setup process, but it will not function.

---

## ▼ How to Set Up a Solaris Printer From Microsoft Windows

- 1. From the Start menu, choose Settings, and then choose Printers.**

The Printers window opens.

- 2. Double-click the Add New Printer icon.**

The Printer Wizard dialog box opens.

- 3. Use Step a for Windows 98, or use Step b for Windows XP Professional, Windows 2000, or Windows NT.**

- a. In Windows 98: Click Next, select Network Printer, and then click the Browse button.**

The Browse for a Printer window opens.

- b. In Windows XP Professional, Windows 2000, or Windows NT: Select Network Printer, click Next, select Browse for a Printer, and then click Next.**

The Connect to Printer window opens.

- 4. Double-click Entire Network to display all of the domains connected to your network.**

- 5. Locate Sunpci Host in the list of domains.**

Click the plus sign (+) next to the name Sunpci Host to show the list of systems in the domain.

- 6. Locate the name of the system (print server) that corresponds to the printer you want to use.**

- 7. Double-click that system name to show the printer connected to the machine.**

Make sure that you know the model of the printer you are using so that you can choose the correct printer driver.

- 8. Click the system name, then click OK. Follow the instructions described in the Printer Wizard dialog boxes.**

You are now ready to use your workstation's network printer as a Microsoft Windows printer. For more information about how to print from Microsoft Windows applications, refer to the documentation that came with your copy of Microsoft Windows.

---

## Avoid Using Screen Savers

Avoid using a Microsoft Windows screen saver program in a SunPCi III window that you minimize. When the window is not displayed, the screen saver program continues to consume system resources unnecessarily.

If you use the Windows 2000 or Windows XP Professional power-saving mode to power down your monitor, avoid using the 3D Maze screen saver. That screen saver conflicts with the power-saving mode timer and does not allow the monitor to go into the power-saving mode.

Certain 3D screen savers display slowly in the Windows 2000 and Windows XP Professional operating systems. This is expected behavior and does not interfere with screen saver functionality.

---

**Note** – To avoid any potential conflicts with screen savers and SunPCi, disable screen savers while using SunPCi.

---

## Troubleshooting

---

The sections in this appendix describe known issues with the SunPCi III 3.0 software release. This appendix provides tips for rectifying some of the issues you might encounter while using SunPCi software.

This appendix includes the following topics:

- “Support for Issues” on page 141
- “SunPCi III Hardware Issues” on page 142
- “SunPCi III Software Issues” on page 149
- “Networking and SunFSD Issues” on page 161
- “Windows XP Professional and Windows 2000 Issues” on page 166
- “Windows NT Issues” on page 174
- “Windows 98 Issues” on page 180
- “Microsoft Windows Application Issues” on page 182

---

## Support for Issues

If you have a question or encounter an issue with the SunPCi III 3.0 product (such as a Windows NT “blue screen”), please contact your support provider. Include the following information in your email:

- What you observed, including any error messages that were displayed
- The application you were using (including the application version number)
- What you were doing in the application at the time the issue occurred
- Steps to re-create the issue (very important)
- The log file for the SunPCi session

SunPCi III 3.0 software creates a separate log file for each card installed in your system. By default, logging is enabled, log files are named `Cardn.log` (where *n* is the number of the SunPCi III card), and log files are placed in the directory `/var/preserve/sunpcilogs`. If a fatal issue occurs, a message should be posted to the log file, the Console window, and the Launch window. In such a case, please attach the *entire* log file to your email message or bug report.

The logging configuration file is `/etc/opt/SUNWspci3/log.conf`, and has the following default contents:

```
; This file controls the SunPCi logging feature. It allows logging to
; be enabled (the default) or disabled. In the LogConfig section below,
; uncomment the Status = Disabled line to disable all SunPCi logging.
;
; The log file destination can also be changed. Uncomment the Directory
; entry below and change the directory to any directory with world read
; and write permissions. Log files will be created in the specified
; directory. The default directory is /var/preserve/sunpcilogs/

[LogConfig]
; Status = Disabled
; Directory = /var/preserve/sunpcilogs/
```

Follow the directions in the file to disable logging or to change the log file destination.

---

## SunPCi III Hardware Issues

This section includes the following topics:

- “Hardware Error Messages” on page 143
- “Mouse Issues” on page 144
- “Diskette Drive Issue” on page 144
- “CD-ROM Drive Issues” on page 145
- “Video Display Issues” on page 146
- “Power Management Message Issue” on page 148
- “USB and Firewire Connection Issues” on page 149

# Hardware Error Messages

The following table shows some error messages that result from hardware issues, possible causes of those issues, and solutions.

**TABLE A-1** SunPCi III Error Messages

<b>Error Message</b>	<b>Possible Cause</b>	<b>Solution</b>
Driver not found. Can't attach to device.	Your system cannot identify the PCI device. Your SunPCi III card might not be properly seated in the PCI slot.	Remove and reinstall your SunPCi III card as described in the <i>SunPCi III Quick Start Installation Guide</i> .
The SunPCi III drivers could not be loaded. Is another session running?	This message might appear for one of the following reasons: <ul style="list-style-type: none"><li>• You already have a SunPCi III session running.</li><li>• You removed the SunPCi III card and then reinstalled it in a different PCI slot in your system.</li><li>• You started SunPCi III software without first restarting your system after you installed the card.</li></ul>	Perform a corresponding action: <ul style="list-style-type: none"><li>• Quit the other session before running SunPCi III software again.</li><li>• If possible, remove the card and install it into the PCI slot it first occupied.</li><li>• Log in as superuser, type <code>halt</code> at the <code>#</code> prompt to halt your system again, and restart at the <code>ok</code> prompt using <code>boot -r</code>.</li></ul>
Driver couldn't be loaded. SunPCi III cannot open the device.	Your SunPCi III card might not be properly seated in the PCI slot.	Make sure that the card is securely seated in the PCI slot.
System could not transfer file data from buffers.	You have run out of disk space on your host file system.	Make more space on your host file system.

# Mouse Issues

TABLE A-2 lists some common mouse issues, possible causes, and solutions.

TABLE A-2 Mouse Issues

Issue	Possible Cause	Solution
Two mouse cursors appear on the SunPCi III desktop (Windows 98).	You might have not yet installed the SunPCi III software drivers for Microsoft Windows, or you have not yet attached the mouse.	To use the mouse before you install the drivers, choose Attach Mouse from the Options menu, or press Meta-M. After you finish installing the drivers, the mouse operates normally.
Windows 2000 pointer moves slowly.	Pointer moves slowly when the display is set to 16-bit or 24-bit mode.	Refer to “Double Mouse Pointer Issue” on page 168.
Mouse pointer movements appear jerky after SunPCi III installation.	You might have not yet installed the SunPCi III software drivers for Microsoft Windows when performing an upgrade or custom installation.	Refer to the chapter about using the operating system for information about how to install the drivers. After you finish installing the drivers, the mouse pointer movement appears much smoother.

## Diskette Drive Issue

SunPCi III software and the Solaris Volume Manager program (`vold`) tend to conflict with each other for control of the diskette drive. Volume Manager provides automatic mounting services for peripheral devices attached to your system, such as diskette drives.

The conflict arises when Volume Manager support is enabled on your system and you attempt to access a diskette drive through a SunPCi III window. In such instances, an error message opens and the diskette access fails.

By default, when SunPCi III software is installed, Volume Manager support is disabled for diskette drives, and so most users do not encounter an issue. However, it is possible to reenable Volume Manager on your system, and thus encounter the issue at a later time.

If Volume Manager support for diskette drives is reenabled on your system, and you encounter issues accessing diskette drives through SunPCi III software, try disabling Volume Manager and restarting the SunPCi III window. If the issue persists, try disabling Volume Manager and rebooting your system.

To disable the Solaris Volume Manager, perform the following steps:

1. Make sure that SunPCi III software is not running.
2. Become superuser.
3. Disable Volume Manager by entering the following command:

```
# /opt/SUNWspci3/bin/vold_floppy_disable
```

4. Exit superuser.
5. Restart all SunPCi III software windows.

## CD-ROM Drive Issues

TABLE A-3 describes some issues you might encounter with CD-ROM drives, possible causes, and solutions.

TABLE A-3 CD-ROM Drive Issues

Issue	Possible Cause	Solution
When you insert or eject a CD in one CD-ROM drive, the other CD-ROM drive becomes unreachable.	You have two SCSI CD-ROM drives in your system.	You need to select which CD-ROM drive to use with SunPCi III software.
When you double-click the CD-ROM drive in Windows NT Explorer, you get the following error message: Drive not ready. Abort/Retry/Fail?	Your CD-ROM drive might not be a Sun-supplied drive.	SunPCi III software only supports Sun-supplied CD-ROM drives. Replace the CD-ROM drive in your system with a Sun-supplied drive.
Playing an audio CD using the Solaris workman utility causes Windows NT to hang. Starting Windows NT while an audio CD is playing pauses the audio CD.	Your CD-ROM drive is being shared by both Solaris and Microsoft Windows. As soon as Microsoft Windows detects the presence of the CD, it pauses the CD.	Disable CD detection in either Solaris or Microsoft Windows. The CD cannot be shared by both operating systems. Note that once you disable CD detection in one operating system, you need to mount the CD manually in that operating system.
When you insert a DVD into the CD-ROM drive, it does not work.	SunPCi III software only supports DVD data discs.	Use only data formatted DVD discs.

## Setting Up Your CD-ROM Drive

If you have more than one SCSI CD-ROM drive installed in your workstation, you have to specify which drive you want to use with SunPCi III software. To set up your CD-ROM drive, perform the following procedure:

- 1. Start SunPCi III software.**

The Console window from which you start the application displays the following message:

```
sunpci3: Your sunpci.ini file does not specify a CD device
        assuming /vol/dev/aliases/cdrom0
```

- 2. From the Options menu, choose Attach CD-ROM.**

The Specify CD-ROM Device File dialog box opens.

- 3. Type the path to the CD-ROM device you want to use (for example, /vol/dev/aliases/cdrom0).**

- 4. Click OK.**

- 5. Exit all Microsoft Windows operating systems.**

- 6. From the File menu in the SunPCi III window, choose Reset PC.**

When SunPCi III software restarts, it uses the CD-ROM drive that you specified.

## Video Display Issues

When you use a remote display of SunPCi III, use a Sun workstation as the display device. If you run a remote display of SunPCi III using a non-Sun workstation, performance might be poor or might not work at all.

The remote display of SunPCi III is only supported when the display device is a Sun workstation.

### 24-Bit Display on Sun Blade 100

On a Sun Blade™ 100 workstation with an M64 frame buffer, follow this procedure to display 24-bit color in the SunPCi III window:

- 1. Open a Terminal window and log in as root.**

2. Open the file `/usr/dt/config/Xservers` in a text editor and edit the last line of the file so that it appears as follows:

```
:0 Local local_uid@console root /usr/openwin/bin/Xsun :0
-nobanner -dev /dev/fb defdepth 24
```

3. Save and close the file.
4. Type the following command to find out the current resolution setting:

```
# m64config -prconf
```

5. Type the following command to set the display to 24-bit color:

```
# m64config -depth 24 -res current-resolution-setting
```

Use the resolution setting that was returned by the command `m64config -prconf`. For example, type: `m64config -depth 24 -res 1152x900x76`.

6. Type the following command to confirm that the depth of the root window has changed to 24 planes:

```
# xdpinfo
```

7. Restart the system.

## External Video Resolutions

TABLE A-4 shows the external VGA display resolutions that SunPCi III software supports. For best results, increase the amount of available video memory from 8 Mbytes (the default) to 32 Mbytes. To make this change, refer to “Running Game Software on the SunPCi III Platform” on page 203.

---

**Note** – Remember that increasing your video memory decreases the amount of available system memory. Refer to “Increasing System Memory” on page 201 for more information.

---

Before you change the resolution or display depth of your monitor, be sure to shut down all running applications and save your work. You do not need to test a new setting before applying it. The following table shows the available resolutions.

**TABLE A-4** Software External Video Resolutions (VIA S3 Graphics ProSavage DDR)

Resolution (Pixels)	Color Depth (Number of Colors)
640 x 480	8, 16, 32
800 x 600	8, 16, 32
1024 x 768	8, 16, 32
1280 x 1024	8, 16, 32
1600 x 1200	8, 16, 32
1920 x 1440	8, 16

## External Monitors and Windows NT

If you select a video resolution value for your external monitor that exceeds the monitor's actual maximum resolution, Windows NT might freeze. If this happens, choose the Reset PC command from the SunPCi File menu to restart Windows NT. Select the VGA option for Windows NT when prompted. Windows NT starts up and displays a 640 x 480 desktop, which you can change using the Control Panel.

## Power Management Message Issue

If SunPCi III 3.0 is running (so the SunPCi III card is booted) and you attempt to exit or suspend the UltraSPARC system, the operation fails and the `sunpci3drv` software displays this message to the console:

```
sunpci3drv: sunpci_detach() Can't Suspend, there are N sessions
running.
```

Exit the SunPCi III 3.0 window before shutting down your system.

## USB and Firewire Connection Issues

If you are having difficulty with either the USB or Firewire controllers, or if you cannot connect these devices (such as digital cameras or external CD-RW drives) to those controllers, make sure that the SunPCi main card and USB/Firewire Card and Backplate are seated and installed correctly.

During installation, sometimes one of the two cards might unseat itself when the other is installed and seated.

Before completing installation, always verify that both cards are seated in the PCI slots properly.

---

## SunPCi III Software Issues

This section includes the following topics:

- “Hardware Error Messages” on page 143
- “Software Startup Error Messages” on page 151
- “Emulated Hard Drive Issues” on page 152
- “FAT16 File System Limitation Issue” on page 153
- “File System Compatibility Issue” on page 154
- “Partitioning a Large Emulated Drive File System for Windows NT4 TS” on page 155
- “Emulated Drives and Windows XP Professional, Windows 2000, and Windows NT Issues” on page 155
- “How to Back Up an Emulated C: Drive” on page 156
- “Using Multiple Microsoft Windows Operating Systems” on page 156
- “Creating Bootable Partitions” on page 157
- “Solaris Stale Links Issue” on page 157
- “Missing Master.ini File After Factory Installation” on page 157
- “Sun Blade Workstations and Sun Enterprise Servers Issues” on page 158
- “Multiple Cards and Microsoft Windows Issue” on page 158
- “Configuring Virtual Networking Using SunPCi III Software” on page 159
- “Xinerama Display Issue” on page 159
- “Installing Microsoft Windows From CD-ROM” on page 159
- “Application Installation to Solaris File System Issues” on page 159
- “Displaying Shortname Tails” on page 160
- “System Clock and Daylight Savings Time Issue” on page 160
- “Japanese Copy and Paste Issue” on page 161

# Installation Error Message

You might see an error message in your Console window during or after installation of SunPCi III software. The following table describes the message and the actions you can perform to fix the issue:

**TABLE A-5** Installation Error Message

Message	Recommended Action
Driver failed to attach.	<p>This message can appear for a number of reasons:</p> <ol style="list-style-type: none"><li data-bbox="582 565 1222 644">1. The workstation needs to be restarted after installation. Reboot your workstation using the Solaris <code>boot -r</code> command and then restart the SunPCi III software.</li><li data-bbox="582 690 1222 739">2. The SunPCi III card is not seated securely in the PCI slot. Reseat the card.</li><li data-bbox="582 786 1222 864">3. If neither of the above actions helps, your SunPCi III card might be defective. Refer to the <i>SunPCi III Quick Start Installation Guide</i> for information about service.</li><li data-bbox="582 911 1222 1013">4. You might need to update the system OpenBoot™ Programmable Read-Only Memory (PROM). Ask your service provider if an updated OpenBoot PROM is available for your system configuration.</li></ol>

# Software Startup Error Messages

When starting SunPCi III 3.0 software, you might encounter one of the following error messages.

**TABLE A-6** Software Startup Error Messages

Message	Explanation
Command not found	Make sure that the SunPCi III program directory—by default, <code>/opt/SUNWspci3/bin</code> — is in your environment <code>\$PATH</code> . Refer to your Solaris documentation to set up your <code>\$PATH</code> variable.
Correct Solaris Installation Required	If you do not have the correct Solaris installation on your workstation, you will encounter issues when attempting to start SunPCi III software. SunPCi III software requires at least the End User System, Developer System, or Entire Distribution installation of Solaris software. SunPCi III software does not run when you only have the Core System installed. Ask your system administrator for assistance in determining which system is installed on your workstation.

# Emulated Hard Drive Issues

The following table describes some common questions about large emulated drives and provides answers to those questions.

TABLE A-7 Emulated Hard Drive Issues

Issue Description	Reason	Solution
I just created a new 8-Gbyte emulated drive, but I can only see 2 Gbytes. Why?	DOS can only recognize file sizes of up to 2 Gbytes while doing a FAT installation.	Refer to “FAT16 File System Limitation Issue” on page 153. You need to partition your emulated drive. The remaining 6 Gbytes in your emulated drive file are available to create additional partitions.  You could also do a fresh installation of the operating system using NTFS auto-install.
Dual-Boot Emulated Drivers Are Not Supported.	SunPCi III 3.0 software does not support dual-boot emulated drives	If you want to run different versions of Microsoft Windows, create an emulated drive for each operating system and install the operating system and applications to the emulated drive. To switch among the different operating systems, from the Options menu, choose Use the Attach Drive command.
Attaching Drive C.	To be sure that you are always able to attach drive C:, you can change the permissions on the drive. Changing the permissions keeps other users from being able to attach drive C: even when you are not using the SunPCi III program.	To change permissions on drive C:, type the following in a command window:  <code>% chmod 600 ~/pc/C.diskimage</code> This command makes the drive inaccessible to other users.
Disk Error Message: Non-system disk or disk error at startup.	Your C: drive might be corrupted or you have a non-bootable diskette in drive A:.	If you do not have a diskette in drive A:, delete the default C: drive file in \$HOME/pc (~/pc/sunpc.ini) and then restart the software.

**TABLE A-7** Emulated Hard Drive Issues

<b>Issue Description</b>	<b>Reason</b>	<b>Solution</b>
I just created a new 8-Gbyte FAT emulated drive and installed Microsoft Windows. Now my OS partition won't boot. Why?	When you create the new emulated disk file, SunPCi automatically creates a 2-Gbyte partition, using the first 2 Gbytes of the new disk. If you installed Microsoft Windows on the other partition (the remaining 6-Gbyte portion), DOS does not recognize it, and the SunPCi III software does not boot from that partition.	You need to create a new 2-Gbyte partition for your version of Microsoft Windows. Refer to "FAT16 File System Limitation Issue" on page 153.  You could also do a fresh installation of the operating system using NTFS auto-install.
I created a partition and installed Windows NT on it. Why won't it boot?	If the partition you created is located at greater than 4 Gbytes after the start of your emulated drive, that partition does not boot.	You must install Windows NT on the first partition on your emulated drive. Refer to "FAT16 File System Limitation Issue" on page 153.
Is there a limit to the number of partitions on a single emulated drive?	No, there is no limit to the number of partitions, but there are other limitations.	If you want to create multiple partitions on an emulated drive, you need to use PartitionMagic. Remember that Microsoft Windows and DOS only recognize the 26 drive letters, and that some are already mapped by default (such as A:, C:, D: or E:, and f: in Windows 98). Refer to PartitionMagic documentation for more information.

## FAT16 File System Limitation Issue

SunPCi III 3.0 software enables you to create emulated drive files as large as 40 Gbytes. However, if the emulated drive uses the FAT16 file system, an inherent limitation in the FAT16 file system makes only the first 2 Gbytes of disk space accessible.

After installing and booting a Microsoft Windows operating system, you can reformat, convert, and/or repartition the emulated drive to another file system such as the FAT32 or NT File System (NTFS). You can also create new partitions, or resize or reformat existing partitions. You can do this by using third-party packages such as PowerQuest's PartitionMagic or ServerMagic, or by using facilities present in some Microsoft operating systems, such as Disk Management in Windows XP Professional, Windows 2000, and Windows NT.

# File System Compatibility Issue

After you partition or convert the disk space to a different file system, some operating systems can view the converted file systems, some cannot. The following table denotes accessibility to the converted disk space among SunPCi III software-supported operating systems. A check in a column indicates common accessibility to file system formats among different operating systems.

**TABLE A-8** Common Accessibility Among Converted File Systems

File System Formats	Operating Systems						
	<sup>1</sup> Windows XP Professional	<sup>1</sup> Windows 2000 Server	<sup>1</sup> Windows 2000 Professional	<sup>1</sup> Windows NT4 TS	<sup>1</sup> Windows NT4 WS	<sup>1</sup> Windows 98	<sup>2</sup> Caldera OpenDOS
FAT16	✓	✓	✓	✓	✓	✓	✓
FAT32	✓	✓	✓	✓	✓	✓	
NTFS 4	✓	✓	✓	✓	✓		
NTFS 5 <sup>3</sup>	✓	✓	✓				

<sup>1</sup> To partition or convert a drive, you can use the Microsoft Windows NTFS, FAT32, or PartitionMagic utilities. In addition, SunPCi III 3.0 software has been tested with the third-party tools ServerMagic for supported server operating systems, and PartitionMagic for supported non-server file systems.

<sup>2</sup> If you convert to FAT32, NTFS 4, or NTFS 5 formats you can no longer boot an emulated drive and view it with OpenDOS.

<sup>3</sup> NTFS 5, which runs on Windows 2000, is *not* compatible with NTFS 4, which runs on Windows NT 4, although both products are often referred to by the common designation NTFS. Verify the version you wish to use before converting or partitioning.

Use the third-party PowerQuest tool ServerMagic for managing file systems on server installations. Use PowerQuest's PartitionMagic tool for managing file systems on non-server installations. These tools are available from PowerQuest at the following Web site:

<http://www.powerquest.com>

For more information about partitions, bootable partitions, and file system limitations, refer to the *ServerMagic User Guide* and ServerMagic online Help, or to the *PartitionMagic User Guide* and PartitionMagic online Help.

# Partitioning a Large Emulated Drive File System for Windows NT4 TS

After a custom installation of Windows NT4 TS, there are some unique file system configuration issues. When you first try to expand a drive in Microsoft Windows using PowerQuest's ServerMagic 4.0 software, you get the following error message:

```
init failed Error 117 partition drive letter can't be identified
```

Extend the drive beyond 2 Gbytes using PowerQuest's ServerMagic 4.0, using the two rescue boot diskettes that were created when you installed ServerMagic. After inserting the second rescue diskette, ServerMagic starts. To extend the partition beyond 2 Gbytes, go to the Operation menu in ServerMagic and delete the first partition following the 2-Gbyte one. Then highlight the first partition, and from the Operation menu choose Resize/Move to expand the partition to the full size you defined in the SunPCi Create a New Emulated Drive dialog box.

Once the boot partition is converted to the NTFS or FAT32 file format, you cannot boot to OpenDOS. This is a known restriction. See "FAT16 File System Limitation Issue" on page 153 for more information.

After converting the file system, the Microsoft Windows operating system you have installed can access the entire disk space. Before you start this conversion however, consult "File System Compatibility Issue" on page 154

## Emulated Drives and Windows XP Professional, Windows 2000, and Windows NT Issues

This section discusses some of the file system format properties of emulated hard drives running under Windows XP Professional, Windows 2000, or Windows NT. Also see the section "Emulated Drives and SunPCi III Software" on page 13 for additional information.

FAT (also known as FAT16 and FAT32) and NTFS (NT File System) are file system formats used with Microsoft Windows hard disks. The NTFS file system has more error recovery mechanisms and therefore better stability than the FAT file system, at the cost of sacrificing a small amount of performance.

The Microsoft Windows documentation included in your Microsoft Windows installation package describes the differences between FAT and NTFS file systems.

# How to Back Up an Emulated C: Drive

After you install Microsoft Windows, periodically make a copy of the disk image of your C: drive. This enables you to keep a backup copy of the drive in case you need to recover the contents of the drive at any time.

## 1. Locate the disk image of your C: drive.

The disk image is located in the directory named `pc` within your home directory on your workstation. To view the contents of the directory, type the following commands:

```
% cd ~/pc
% cat SunPC.ini (or the name of the particular .ini file for this C: drive)
```

A listing of files opens, including the name you assigned to your C: drive during installation (for example, `C.diskimage`).

## 2. Make a copy of the file.

Type the following command, substituting the name of your hard disk and the name you want to assign to the copy:

```
% cp C.diskimage C.diskimage.copy
```

# Using Multiple Microsoft Windows Operating Systems

If you want to use multiple versions of Microsoft Windows with SunPCi software, the best method is to install each operating system on a separate emulated drive file. Loading multiple operating systems on a single drive is not recommended. When you want to change operating systems, from the Options menu, choose Attach a Hard Drive command to change emulated drives.

For example, if you want to “dual-boot” SunPCi III software with Windows XP Professional, Windows 2000, Windows NT, or Windows 98, simply create another C: drive. When you want to run one of those operating systems, from the Options menu, choose Attach a Hard Drive command to choose the C: drive file that has the corresponding operating system installed on it. Then reset the SunPCi III software.

---

**Note** – In order to use the multiple versions of Microsoft Windows installed onto separate partitions, you need to install a boot drive partitioning utility. BootMagic, which is packaged with PartitionMagic, and ServerMagic have been tested on SunPCi III software.

---

## Creating Bootable Partitions

A *bootable partition* is a disk partition on which you have installed an operating system (such as Windows XP Professional, Windows 2000, Windows NT, or Windows 98). Each version of Microsoft Windows has its own requirements for bootable partitions. Microsoft Windows operating system documentation and the *PartitionMagic User Guide* contain detailed information about the requirements of each operating system. If you are using PartitionMagic for your disk utility, consult the User Guide and the Help function in the application for more information about bootable partitions.

## Solaris Stale Links Issue

If you have stale links to files in your workstation's file system (such as symbolic links to files or directories that you have deleted or moved), update or remove the links. Otherwise, browsing in the file system can cause Microsoft Windows to freeze.

## Missing Master.ini File After Factory Installation

If you have SunPCi III 3.0 software preinstalled or if you install the SunPCi III 3.0 software before the hardware, the `/etc/Master.ini` file will not get created and you will receive the following message when attempting to first open SunPCi III:

```
ERROR, there are no cards specified in the Master.ini file.
```

To run SunPCi III 3.0 software properly, you must force the reloading of the SunPCi Solaris driver, as well as the creation of the `/etc/Master.ini` file by doing the following:

1. **Go to the** `/opt/SUNWspci3/drivers/solaris` **directory in SunPCi III 3.0 software.**

## 2. Type the `sunpload` command.

---

**Note** – You must be in root for the `sunpload` command to work properly.

---

This command reloads the Solaris driver for SunPCi III 3.0 software and creates the `/etc/Master.ini` file, which contains the configuration information needed to properly run SunPCi III 3.0 software.

## Sun Blade Workstations and Sun Enterprise Servers Issues

If you have a SunPCi III card preinstalled in a Sun Blade™ workstation or a Sun Enterprise™ server or if the software version is not SunPCi III 3.0, you might need to install the SunPCi III 3.0 software after you configure your preinstalled Solaris image.

- **To verify whether your SunPCi III software is already installed, type the following command at the system prompt:**

```
% pkginfo -l SUNWspci3
```

If your system returns a message similar to the following message, you need to install the SunPCi III 3.0 software from the CD:

```
ERROR: information for "SUNWspci3"
```

## Multiple Cards and Microsoft Windows Issue

In multiple card installations, select one of many configuration (`.ini`) files, which reference the desired emulated drives by using the `sunpci -p` command option. See the *SunPCi III 3.0 User's Guide* for more information.

# Configuring Virtual Networking Using SunPCi III Software

If you are installing SunPCi III 3.0 software on an UltraSPARC system with more than one network interface, the SunPCi III startup script displays the following message:

```
SunPCi: This machine has multiple network interfaces. If you are
using SunPC networking, you need to set the environment variable
NVL_INTERFACE to indicate the desired network interface. Type
netstat -i for a list of interfaces on this machine.
```

Enter the interface name into the script, for example if the `netstat -i` command returns one of the following names: `hme0`, `hme1`, or `eri0`, then enter the name into the script. Be sure to use the correct Ethernet name, especially if you are planning on using virtual networking. Virtual networking shares the UltraSPARC system's Ethernet port.

## Xinerama Display Issue

When using SunPCi III during an Xinerama session, the mouse can behave erratically if the SunPCi III session is set to display on the non-default (right-side) frame buffer. To avoid this issue, when using SunPCi III during an Xinerama session, set the SunPCi III display to the default (left-side) frame buffer.

## Installing Microsoft Windows From CD-ROM

Microsoft Windows cannot be installed with the "Run From CD-ROM" option into the SunPCi III product. Use any of the other options.

## Application Installation to Solaris File System Issues

On Windows XP Professional, Windows 2000, and Windows NT, the Sun File System Driver (SunFSD) does not support the DOS file name Short File Name (SFN) conversion convention. SFN is also known as the 8.3 DOS file name conversion format. When installing some Microsoft Windows applications, the installation can fail because of the DOS file name conversion convention.

---

**Note** – When you install new applications on the SunPCi III platform, make sure that you have your Microsoft Windows CD available. The installation program might require files from the Microsoft Windows CD.

---

The SFN convention converts long file names and directory names with a file name stem longer than eight characters to six characters followed by a tilde (~) and a number. For example, a file name such as `THIS_IS_A_LONG_FILE_NAME.DAT` could be converted to the file name `THIS_I~1.DAT` (8.3 SFN convention).

Because SunFSD does not support the SFN convention, some older Microsoft Windows applications that employ this convention sometimes fail to install correctly. Many recent applications do not rely on 8.3 file name conversion support in their file systems, and thus no issues arise.

## Displaying Shortname Tails

On older Microsoft applications (such as the DOS Command Prompt window), if file names are longer than eight characters, the file name might be truncated into the 8.3 DOS file name format and a number added to the file name (such as ~1). This number is called a *shortname tail*. When reading long file names on extended drives in the Windows 98 window, DOS window, or the Windows NT or Windows 2000 Command Prompt window, the window can only display shortname tails ending in the number 1. It cannot display ~2, ~3, and so on.

---

**Note** – The term “DOS session” refers to the DOS shell window that you access from Windows 98 (called the Command Prompt window in Windows NT and Windows 2000). It does not refer to OpenDOS windows running under OpenDOS 7.01.

---

## System Clock and Daylight Savings Time Issue

If you shut down a SunPCi III session before a Daylight Savings Time (DST) change, and then restart after the DST change, the first SunPCi III session after the time change displays a two-hour difference (that is, in the fall, the display time is two hours earlier instead of one hour earlier; in the spring, the display time is two hours later, instead of one hour later). However, for subsequent sessions, the clock displays correctly.

If the SunPCi III session is running through the time change, the system time is adjusted correctly.

## Japanese Copy and Paste Issue

If you edited your `$HOME/pc/SunPCi.ini` file to support Japanese copy and paste functions, you may see the following error message: Warning, bad clipboard translation codeset specified in SunPC.ini file: codeset. Ignoring.

This message indicates that there might be an error in the file that you edited. Refer to “How to Configure Japanese Copy and Paste Between Microsoft Windows and Solaris” on page 137 for more information.

---

## Networking and SunFSD Issues

This section includes the following topics:

- “Installing Applications on SunFSD” on page 161
- “Extended Drive (SunFSD) Issues” on page 161
- “Network Startup Is Slow After Configuration” on page 162
- “Cannot Connect to Other Systems” on page 162
- “Installing Applications From a SunFSD Source Directory” on page 163
- “Installing Applications Into a SunFSD Target Directory” on page 163
- “Network Neighborhood Issue” on page 164
- “Software Appears to Hang When Browsing Network Drives” on page 164
- “Network Drive Issue” on page 165
- “Installing Additional Printers on Slow Networks” on page 166

## Installing Applications on SunFSD

Some software applications cannot be installed to a network drive, including SunFSD, and must be installed directly to the emulated disk.

---

**Note** – For specific information about issues with certain software installations and SunFSD, refer to the “Troubleshooting Microsoft Windows Applications and SunFSD Issues” on page 185.

---

## Extended Drive (SunFSD) Issues

You might observe the following problems when using file system drives:

- File attributes (such as read-only and write-only) might not work correctly.
- File links do not work on file system drives. If you need to link to a file that is located on a file system drive, move the file to your C: or D: drive and then create the link.
- If you create a desktop shortcut to a file on a file system drive, that shortcut does not update automatically when you change the file's location on the drive. You need to delete the existing shortcut and create a new one.
- Using UNC path names to locate Office XP or Office 2000 files, such as `\\localhost\export\home\myfiles.doc`, does not work in this version of the software.

## Network Startup Is Slow After Configuration

After you configure your network and start Microsoft Windows for the first time, the network may take several minutes to start. This is especially true when you are using DHCP with your SunPCi III card. This is normal behavior for first-time startup.

## Cannot Connect to Other Systems

---

**Note** – This section applies only to virtual Ethernet networking configurations. If you are using the physical Ethernet connection, skip this section.

---

Before you start to diagnose issues with using SunPCi III software to connect to other systems on the network, make sure that you have configured SunPCi III software and your system as follows:

- Your system and SunPCi III software host must have different IP addresses.
- Both the SunPCi III software host and the workstation should be located on the same physical subnetwork, although they can be on different virtual subnetworks.
- Your workstation and SunPCi III software must have the same network mask. The value of the network mask depends on the type of network you are using. Contact your network administrator for more information.

---

**Note** – You need to know the names and IP addresses of another system on the same subnet as your workstation, and of a system not on the same subnetwork. Contact your network administrator if you do not have this information.

---

## Installing Applications From a SunFSD Source Directory

If an application's installation from a SunFSD-mapped drive fails, make sure that the mapped directory path names in which the installation software resides all have names that do not exceed eight characters.

For example, suppose the drive letter Q: is mapped to `\\localhost\WatchGuard\AntiVirusSoftware`.

In the `AntiVirusSoftware` directory are the following subdirectories named `AntiVirusForEmmy` and `AV4KATY`.

If the software located in `AntiVirusForEmmy` fails to install, it might be due to the fact that the subdirectory used by the installation program has a file name longer than eight characters. If this is so, rename the subdirectory to a name that uses fewer than nine characters, for example, `AV4EMM`, and attempt the installation again.

Because the directory `AV4KATY` already is fewer than eight characters, the installation of the application from that subdirectory should succeed.

---

**Note** – Even though the path that is mapped, for example `WatchGuard\AntiVirusSoftware`, contains names that are more than eight characters, this does not matter to the installation program. Only file names below the drive letter mapping encounter the restriction.

---

## Installing Applications Into a SunFSD Target Directory

If an application's installation program fails to install to a SunFSD-mapped drive with warnings about a `Path Not Found` or `File Not Found`, this might be because the installation program is relying upon the destination file system to support 8.3 file names. This is specifically the case where there are embedded file names in any of the destination installation paths.

For example, Corel WordPerfect Office 2000 uses a default destination directory of `WordPerfect Office 2000`. If this destination directory resides on a SunFSD drive, there is a portion of the installation program that attempts to use 8.3 file names. Thus, there is a resulting dialog box that states that the file `Q:WordPerfect` cannot be found. The embedded space, combined with the fact that SunFSD does not support 8.3 file names, confuses the installation program.

However, if the destination directory is changed so that there are no embedded spaces, for example change `WordPerfect Office 2000` to `WordPerfect_Office_2000`, the installation proceeds normally.

Even though the file name is longer than eight characters, since this is a more recent application, longer file names are allowed. It is the fact that the installation procedure makes use of older technology that causes the issue.

## Network Neighborhood Issue

---

**Note** – This section applies only to virtual Ethernet networking configurations. It does not apply to physical Ethernet connections.

---

When you open the Network Neighborhood on the Microsoft Windows desktop, the Network Neighborhood window does not show My Workstation. The workstation and the SunPCi III card share the same network interface, so they do not “see” each other on the network. Both can communicate with the network, however.

For more information about networking your workstation with your SunPCi III host using virtual networking, refer to “Setting Up Networking With SunPCi III Hardware and Software” on page 35.

## Software Appears to Hang When Browsing Network Drives

You might observe a very long time lag when browsing network drives. SunPCi III software might even appear to hang as it searches the contents of the drives. This is because Solaris software contains a “browsing” feature that allows you to automatically view all auto mount points on your workstation.

This can cause Microsoft Windows applications to slow down considerably when browsing for files on your workstation. It can also cause issues when viewing very large directories with Windows Explorer, or saving to a subdirectory in one of these large directories.

You can fix this issue by editing the Solaris `auto_master` file to turn off this feature. To edit this file, perform the following steps:

1. **Use a text editor to open the file** /etc/auto\_master.

The file should look similar to the following:

```
# Master map for automounter
#
+auto_master
/net          -hosts          -nosuid,nobrowse
/home        auto_home      -nobrowse
/xfn         -xfn
```

2. **Move the +auto\_master line in the file to the bottom of the list.**

If the `-nosuid, nobrowse` and `-nobrowse` keywords are not present in the file, add them before the `+auto_master` line. The result should look similar to the following:

```
# Master map for automounter
#
/net          -hosts          -nosuid,nobrowse
/home        auto_home      -nobrowse
/xfn         -xfn
+auto_master
```

3. **Save the file and exit the text editor.**

4. **Reboot your system.**

The “browsing” feature should be turned off.

## Network Drive Issue

If you cannot mount network drives with Windows Explorer, networking might not be installed on the SunPCi III platform.

Try to log in to the network first. If you can reach the network from the Solaris side, then go to the Start menu in the SunPCi III software and select Control Panel, then double-click Network. Set up your SunPCi III installation on the network. Refer to your Microsoft Windows documentation for more information.

If you still cannot connect to the network after logging in, you need to reinstall your version of Microsoft Windows.

To log in to the network, follow this procedure:

- **Start the SunPCi III software and enter your user name and password when the dialog box prompts you to log in to Microsoft Networking.**

To log in to the network when you are already running SunPCi III software, follow these steps:

1. **Click Start and then choose Exit.**
2. **When the dialog box asks you whether you want to shut down or restart the computer, click Restart.**
3. **When the Microsoft Networking dialog box appears, type your user name and password.**

You are now able to mount network drives. Refer to “Extended Drives and SunPCi III Software” on page 132 for instructions on how to use Windows Explorer to map network drives.

## Installing Additional Printers on Slow Networks

If you are using Windows NT and are attempting to install an additional printer on a slow network, the installation process might freeze.

If you type the following command and it takes longer than one minute to respond, this indicates network and installation issues:

```
% lpstat -v
```

If the network is working normally, you will not encounter this issue and the `lpstat -v` command will respond in seconds.

This is a known issue and is currently under investigation.

---

## Windows XP Professional and Windows 2000 Issues

This section lists known issues with Windows XP Professional and/or Windows 2000 in this release of SunPCi III software. This section includes the following topics:

- “Custom Display Mode Issue” on page 167
- “Double Mouse Pointer Issue” on page 168
- “File System Drive Issues” on page 169

- “Microsoft DirectDraw Performance Issue” on page 170
- “Troubleshooting Windows XP Professional and Windows 2000 Issues” on page 171
- “EZ CD Creator Issue” on page 171
- “No Mouse Input After Booting Into Safe Mode” on page 172
- “Incorrect Path Name After Adding D: Drive” on page 172
- “CD-ROM Drive Issues” on page 172
- “Cannot Unmap SunFSD Drives” on page 172
- “RealPlayer 6.0 Attempts Installation of New CD-ROM Drivers” on page 173
- “Windows Media Player 8 and 9 and Audio CD Issue” on page 173
- “Windows Media Player 8 and 9 and Virtual CD-ROM Issue” on page 174

All issues listed here refer to both operating systems unless specifically noted.

## Custom Display Mode Issue

Custom display modes can be specified for Windows 2000 and Windows XP Professional. The display modes specify a new size and optional color depths available within the Microsoft Windows desktop. A custom display mode consists of a width and height (in pixels) and an optional bit depth (8,16, or 24 bits).

In the [Display] section of the SunPC.ini file, the format is:

*tag=width, height [ , depth]*

where *width*, *height*, and *depth* (optional) are all decimal values, and *tag* is one of the following strings:

- CustomMode
- CustomMode1
- CustomMode2
- CustomMode3
- CustomMode4
- CustomMode5
- CustomMode6
- CustomMode7
- CustomMode8
- CustomMode9

The *tag* values do not need to be in any numerical or alphabetical order. For example, you might add the following to the [Display] section:

```
[Display]
CustomMode=1280, 960, 16
CustomMode4=1000,800, 24
CustomMode2=1280, 960, 8
```

This will add 1280x960 16-bit, 1000x800 24-bit, and 1280x960 8-bit display modes to the list of available modes.

---

**Note** – If the display does not support 8-bit graphics, an 8-bit entry (such as CustomMode2) is ignored, and the rejected entry appears in the SunPCi log file.

---

The *width* and *height* parameters are required. However, if you do not specify a *depth* value, a mode is created for each depth that is supported by the display. Thus, on a system that supports 16-bit and 24-bit graphics, the following entry could be in the [Display] section:

```
CustomMode6=1200, 1000
```

In this instance, two modes are created: 1200x1000 16-bit and 1200x1000 24-bit.

## Double Mouse Pointer Issue

If you are using Windows XP Professional or Windows 2000 and attempt to move the Microsoft Windows pointer outside the SunPCi III window, two pointers then appear on the desktop: one pointer is the Microsoft Windows pointer that freezes on the SunPCi III window border and the other pointer becomes visible outside the SunPCi III window.

The Microsoft Windows pointer works only while in the SunPCi III window. The other normally invisible pointer becomes visible only when you leave the SunPCi III window.

Once you return to the SunPCi III window, the normally invisible pointer disappears and the Microsoft Windows pointer again becomes active and the only pointer viewable. To fix this problem, you can either change the display to 16 bits per pixel (BPP) or disable the pointer shadows.

To change the display to 16 bits, do the following:

**1. Right-click your Windows desktop.**

**2. Choose Properties.**

The Display Properties dialog box opens.

**3. Click the Settings tab.**

**4. Click “Medium (16 bit)” in the Color quality drop-down list box.**

**5. Click Apply.**

The desktop flickers while applying the new settings.

**6. Click OK in the Display Properties dialog box.**

To disable the mouse pointer shadows, do the following:

**1. Right-click the My Computer icon.**

**2. Choose Properties.**

The System Properties dialog box opens.

**3. Click the Advanced tab.**

**4. Click Settings in the Performance group box.**

The Performance Options dialog box opens.

**5. Uncheck the “Show shadows under the mouse pointer” check box.**

**6. Click Apply.**

**7. Click OK in the Performance Options dialog box.**

**8. Click OK to close the System Properties dialog box.**

## File System Drive Issues

You might observe the following issues when using file system drives:

- File attributes (such as read-only and write-only) might not work correctly.
- File links do not work on file system drives. If you need to link to a file that is located on a file system drive, move the file to your C: or D: drive and then create the link.
- If you create a desktop shortcut to a file on a file system drive, that shortcut does not update automatically if you change the file’s location on the drive. You need to delete the existing shortcut and create a new one.

- If you insert an object (such as a clip art file) into a Microsoft Office XP application, and the original object is stored on a file system drive or a drive mapped using `\\localhost\path`, the insertion will not work correctly. You need to move or copy the object to your C: or D: drive, and then insert it into your document.
- Using Universal Naming Convention (UNC) path names to locate Office 97, Office 2000, or Office XP files, such as `\\localhost\export\home\myfiles.doc`, does not work in this version of the software. This is a known issue that is being investigated.

For more information about file system drives, refer to “File System Drives” on page 133.

## Microsoft DirectDraw Performance Issue

Microsoft introduced a new suite of graphics engines known collectively as DirectX, and one of these components is known as DirectDraw. Because the SunPCi internal display is based on the X Windows protocol and does not have direct access to the Solaris platform’s graphics adapter, DirectDraw functionality was disabled by default in older versions of SunPCi software. Many newer software suites, such as Office XP, enable DirectDraw by default.

DirectDraw is *enabled* by default. However, with DirectDraw enabled, Windows 2000 and Windows XP Professional might exhibit poor graphics performance, either in some specific applications or in specific applets in the base operating system, such as in 3D screen savers.

If normal performance of the 3D screen savers is required, or if graphics performance degraded after installing SunPCi III 3.0 software, you can disable DirectDraw by doing the following:

1. **Add the following line to the [Display] section of the SunPCi .ini file:**

```
[Display]
...
DirectDraw=off
```

2. **Restart the SunPCi session.**

# Troubleshooting Windows XP Professional and Windows 2000 Issues

The following table lists some possible issues with Windows XP Professional and Windows 2000, their causes, and recommended solutions.

TABLE A-9 Windows XP Professional and Windows 2000 Issues

Issue	Cause	Solution
Upgrading to Windows XP Professional or Windows 2000 results in a “blue screen” with the error message INACCESSIBLE_BOOT_DEVICE.	You used the standard Microsoft upgrade procedure on the Windows XP Professional or Windows 2000 CD instead of the recommended procedure in “Upgrading to Windows XP Professional” on page 43.	Use the backup copy of your C: drive and restore the drive.  If you did not create a backup C: drive, create a new C: drive and install Windows XP Professional as described in this document. You have to reinstall all of your applications.
Installing Windows XP Professional or Windows 2000 results in a “blue screen” with the error message INACCESSIBLE_BOOT_DEVICE.	You used the standard Microsoft installation procedure on the Windows XP Professional or Windows 2000 CD instead of the recommended procedure in “Installing Windows XP Professional” on page 40.	Use the installation procedure in “Installing Windows XP Professional” on page 40 to properly install the software.
Inserting a file into Microsoft Office XP or Microsoft Office 2000 does not work.	The object file (such as clip art or an Excel spreadsheet) is located on a file system drive or on a drive mapped using \\localhost\path.	Copy or move the object file to your C: or D: drive and then insert it again.
The mouse no longer works when you click the Start button (16-bit and 24-bit displays only).	There is a software conflict with the screen fade effect in the Display Control Panel.	Turn off the fade effect by choosing the Display Control Panel. Deselect the first check box under Visual Effects. Click OK. The mouse should work again.

## EZ CD Creator Issue

The internal CD-ROM drive is not supported by EZ CD Creator. To use this application software, attach an external CD-ROM drive and use it for copying to and from the CD. To copy, place the source CD into the external device, and make a copy to disc. Replace the external device media with your target write-enabled media and copy the source material from disc to the target media in the external drive.

## No Mouse Input After Booting Into Safe Mode

When booting into Safe Mode, the Sun Mouse Filter driver is uninstalled. Therefore you are left with no mouse with which to navigate.

You can boot into Safe Mode by following these steps:

- 1. During startup of Windows XP Professional, press the F8 key.**
- 2. Select Safe Mode and press Return.**
- 3. The operating system starts in Safe Mode and no mouse is available.**

This is a known issue and is currently under investigation.

## Incorrect Path Name After Adding D: Drive

While using Windows XP Professional, the path name displayed for a newly mapped D: drive might be incorrect.

This situation occurs when you have an existing SunFSD mapping to letter D: and then attach another emulated drive as letter D:. After restart, the attached emulated D: drive shows the path name of the previously mapped SunFSD drive.

The contents of the D: drive and the SunFSD drive are unaffected and are correct, even if the path name listing is incorrect.

This is a known issue and is currently under investigation.

## CD-ROM Drive Issues

While using Windows 2000 Professional, your CD-ROM drive might be slow to display, or will not update at all. This includes the system information about the CD, and the title of the CD when viewed in Windows Explorer. This is a known issue that is being investigated

## Cannot Unmap SunFSD Drives

If multiple user accounts were created during a Windows 2000 Professional installation without Administrator privileges, there will be issues with non-Administrator users mapping and unmapping SunFSD drivers in the following situations:

- Administrators cannot unmap a SunFSD drive originally mapped by a user, although Administrators can unmap a drive mapped by another Administrator.
- Users cannot unmap a SunFSD drive they originally mapped if the user account was originally created without Administrator privileges.

This is a known issue and is currently under investigation.

## RealPlayer 6.0 Attempts Installation of New CD-ROM Drivers

When using Windows 2000, if you connect the CD-ROM audio cable from the CD-ROM to the SunPCi card, RealPlayer may ask you to install updated drivers. If you allow the drivers to update, the CD-ROM drive then stops reading and playing music.

To avoid this issue, do not allow RealPlayer to install new drivers after connecting the CD-ROM drive to the SunPCi card.

## Windows Media Player 8 and 9 and Audio CD Issue

While using Windows XP Professional and after opening Windows Media Player 8 or 9, you may have an issue with playing a CD.

After inserting the CD, a dialog box might open saying an error occurred reading the CD in digital mode, and then asks if you would like to listen to the CD in analog mode instead. Click OK. You also might have another dialog box open saying you can switch to analog mode. Click Close. The CD still might not operate properly.

SunPCi III does not support Digital Audio Extraction from a CD-ROM device. To avoid this problem, disable Digital Audio Extraction by doing the following:

1. **Open Windows Media Player.**
2. **From the Tools menu, choose Options.**
3. **Click the Devices tab.**
4. **Highlight the Audio CD (D:) option (if not already highlighted).**
5. **Click Properties.**
6. **Click the Analog radio button in the Playback group box.**
7. **Click OK to close the Properties window.**

**8. Click OK to close the Options window.**

You should be able to play your CD properly now.

## Windows Media Player 8 and 9 and Virtual CD-ROM Issue

While using Windows XP Professional and Windows Media Player 8 or 9, a new window might appear and then disappear. This issue usually occurs when you are attempting to fix the issue, “Windows Media Player 8 and 9 and Audio CD Issue” on page 173.

This issue only happens when you go into this menu selection more than once in the same session, since Windows Media Player 8 and 9 does not always work properly with virtual CD-ROM drives.

To resolve this problem, close out the Windows Media Player and then restart the application to work properly.

---

## Windows NT Issues

This section describes the following issues you might encounter while using Windows NT. This section includes the following topics:

- “External Video Issue” on page 175
- “Installing Applications to Network Drives” on page 175
- “Recovering From the Windows NT Autorun Option” on page 175
- “File System Drive Issues” on page 175
- “Creating Windows NT Repair Disks” on page 176
- “Using the Windows NT Repair Disks” on page 177
- “Service Packs and Serial Mouse Message” on page 178
- “Using UNC Path Names to Locate Files” on page 179
- “Directory Enumeration Issue” on page 179
- “Installing Citrix MetaFrame on Windows NT4 TS” on page 179
- “External CD-RW Drive Issue” on page 180
- “Office 2000 Installation Might Freeze on Windows NT4 TS Edition” on page 180

## External Video Issue

If you try to set a resolution value for external video that exceeds the monitor's actual resolution, Windows NT might freeze. Refer to "External Monitors and Windows NT" on page 148 for more information.

## Installing Applications to Network Drives

If you have problems installing Windows NT applications to network drives, try installing the applications to your C: or D: drives. The applications should then install correctly.

## Recovering From the Windows NT Autorun Option

After you finish installing and configuring Windows NT, you might want to use the Microsoft Windows operating system CD again (for example, to view the documentation). If you insert the Microsoft Windows CD into your CD-ROM drive, an Autorun dialog box opens. This dialog box includes the Microsoft Windows Setup option. *Do not* use this option.

If you did choose the Windows NT Setup option, choose a different operating system in the OS Loader screen after SunPCi III software reboots. For example, choose Last Operating System on C:.

## File System Drive Issues

You might observe the following issues when using file system drives:

- If you create a desktop shortcut to a file on a file system drive, that shortcut does not update automatically if you change the file's location on the drive. You need to delete the existing shortcut and create a new one.
- If you insert an object (such as a clip art file) into a Microsoft Office 2000 application, and the original object is stored on a file system drive or a drive mapped using `\\localhost\path`, the insertion will not work correctly. You need to move or copy the object to your C: or D: drive, and then insert it into your document.
- Using Universal Naming Convention (UNC) path names to locate Office 97 or Office 2000 files, such as `\\localhost\export\home\myfiles.doc`, does not work in this version of the software.

# Creating Windows NT Repair Disks

The boot diskettes that come with the Windows NT Workstation package do not contain the SunPCi III software drivers. If you use these repair disks to recover from a Microsoft Windows issue, the SunPCi III software drivers will not be installed and the software will not work correctly.

If you want to create a repair disk for your SunPCi III 3.0 software installation of Microsoft Windows, perform the following procedure:

- 1. From the Start menu, choose Shut Down, and then choose Restart the Computer.**

In Windows NT, the choice appears as a radio button.

- 2. Click OK.**

Windows NT shuts down and restarts.

- 3. At the OS Loader screen, use the down arrow key to select Previous Operating System on C:. Press Return.**

The SunPCi III software then boots into DOS. When it has finished booting, the DOS prompt (C:\>) opens.

- 4. Back up the following files to another area onto your workstation's hard disk or onto a diskette.**

These files are needed to initialize the DOS environment.

```
C:\winnt\system32\Autoexec.nt
```

```
C:\winnt\system32\Config.nt
```

- 5. Copy the following files to a diskette.**

If Windows NT Workstation 4.0 does not start up, you need this diskette in order to boot Windows NT.

```
C:\Ntldr
```

```
C:\Boot.ini
```

```
C:\Ntdetect.com
```

```
C:\bootsect.dos
```

```
C:\Hal.dll
```

You might want to make more than one copy of this diskette, in case one copy is damaged or lost.

- 6. Copy these Registry files to a directory on your workstation's hard disk (such as \$HOME/temp).**

You need these files to restore the Windows NT Registry.

```
C:\System32\config\Sam
```

```
C:\System32\config\Sam.log
```

```
C:\System32\config\Sam.sav
```

```
C:\System32\config\Security
```



4. **When you have finished copying all of the saved files into their respective directories, choose File and Reset PC to restart the SunPCi III software.**

The SunPCi III software boots into Windows NT.

5. **If you have trouble booting into Windows NT, insert the diskette with the Windows NT boot files and restart SunPCi III software again.**

Windows NT should boot from the diskette. Press F3 to boot to the DOS prompt. You can now recopy the Windows NT boot files from the diskette onto your C: drive.

---

**Note** – If you need to restore the Windows NT system password files only, restore the following files:

```
C:\System32\config\Sam
C:\System32\config\Sam.log
C:\System32\config\Sam.sav
```

---

## Service Packs and Serial Mouse Message

If you are installing Service Pack 6a for Windows NT4 WS and you have a serial mouse attached to your SunPCi III card, you might see the following messages in two New Hardware Found dialog boxes during the Service Pack installation procedure:

```
Microsoft Serial Mouse
Windows NT has found new hardware and is installing the software
for it.
```

```
Required files are already installed on your hard disk. Setup can
use these existing files, or Setup can recopy them from your
original Windows NT CD-ROM or from a network share.
```

```
Would you like to skip file copying and use the existing files?
(If you click No, you will be prompted to insert your Windows NT
CD-ROM or to supply an alternate location where the needed files
may be found.)
```

- **Click Yes to skip file copying.**

---

**Note** – These messages *only* appear if you have a serial mouse attached to the serial port of your SunPCi III card. If you are using the SunPCi III virtual mouse, these messages are not displayed.

---

## Using UNC Path Names to Locate Files

Using Universal Naming Convention (UNC) path names to locate Office XP or Office 2000 files, for example `\\localhost\export\home\myfiles.doc`, does not work in SunPCi III 3.0 software.

## Directory Enumeration Issue

If a SunFSD directory contains a file with a file name containing more than five periods (“.”), directory enumeration might take a long time.

There are two solutions to this problem:

- Rename the files to decrease the number of periods to fewer than five.
- Copy the file to the C: drive.

## Installing Citrix MetaFrame on Windows NT4 TS

After installing Citrix MetaFrame 1.8 software on Windows NT4 TS, a Dr. Watson for Windows NT message opens:

```
An application error has occurred and an application error log is
being generated
PNSVC.exe
Exception violation (0xc0000005), Address 0x77f92fb6
```

Install MetaFrame Service Pack 2 or greater, which you can obtain from the following Web site:

<http://www.citrix.com>

## External CD-RW Drive Issue

If you have an external CD-RW (Compact Disc - Rewritable) drive connected to your SunPCi III card and you plan to upgrade from Windows NT to Windows XP Professional, make sure that you uninstall the external CD-RW drivers from Windows NT before you perform the upgrade. Otherwise, the upgrade program returns the following message:

```
The file bp32drv4.sys is missing. Copy file from c:\$WIN_NT$.~LS.
```

## Office 2000 Installation Might Freeze on Windows NT4 TS Edition

During the installation of Office 2000 software, on a system running Windows NT4 TS, Service Pack 6, the installation sometimes freezes.

This issue happens when the Finishing Microsoft Office 2000 Setup dialog box is open and the status bar is about halfway finished. If the installation freezes at this point in the process, you must restart your system.

To fix this issue, choose File, then select Reset PC from the SunPCi III window to gracefully exit the system.

After restarting your system, Windows NT4 TS restarts and Office 2000 is fully installed.

---

**Note** – You cannot shut down the system from within Microsoft Windows when this issue occurs or the software will not complete the installation.

---

---

## Windows 98 Issues

This section describes the following issues you might encounter while using Windows 98. This section includes the following topics:

- “Standby Option Not Available” on page 181
- “Removing the CD From the CD-ROM Drive Before Installation Completes” on page 181

- “McAfee 6.0 Installation Issue” on page 181
- “Backspace Key Issue” on page 181
- “No Splash Screen After Fresh Installation” on page 182

## Standby Option Not Available

When you shut down Windows 98 from the Microsoft Windows Start menu, a dialog box opens showing a number of options (such as Shut Down, Restart, and so on). Do not use the Standby option with Windows 98. The Standby option does not work with SunPCi III 3.0 software.

## Removing the CD From the CD-ROM Drive Before Installation Completes

When installing Windows 98, do not remove the Windows 98 CD from the CD-ROM drive until after the software is installed *and* `F:\drivers\win98\setup` completes executing. Removing the CD results in `File Not Found` messages during the Windows 98 installation and driver setup.

## McAfee 6.0 Installation Issue

When installing McAfee 6.0 software from the CD, in some cases menus in the Autorun window are unreadable. Moving down the menu with the pointer, the text becomes visible.

## Backspace Key Issue

The Backspace key does not work in DOS while using Windows 98. Do not map the Delete key to the Backspace key. If you do this, you will not have a Backspace key available when you are working with DOS applications. When you press the Backspace key, it will not backspace, but will instead delete the character at the current cursor location. If you have mapped these two keys by modifying your

`.xinitrc` file, there will be a line in the file that reads:

```
xmodmap -e keycode 50 = delete
```

Use a text editor to edit `.xinitrc`. Remove this line to restore the original key assignments.

## No Splash Screen After Fresh Installation

After a fresh installation of Windows 98, a Windows shutdown does not display the SunPCi splash screen. Instead, a blank screen appears with a blinking cursor.

This issue occurs in Windows 98 under the following situations:

- You have completed a fresh manual installation of Windows 98, but have not manually installed the Windows 98 drivers.
- You are using an external display monitor and have shut down SunPCi software using the `-v` option.
- You have installed the Windows 98 drivers, but you have not rebooted when the Reboot Now dialog box requests you restart.

To fix this issue, manually install the Windows 98 drivers after a fresh installation.

---

## Microsoft Windows Application Issues

These sections include information about known issues with various software, as well as known issues with software and SunFSD issues. The section includes the following topics:

- “Troubleshooting Microsoft Windows Applications” on page 183
- “Troubleshooting Microsoft Windows Applications and SunFSD Issues” on page 185

# Troubleshooting Microsoft Windows Applications

The following table lists some possible Microsoft Windows application issues, their causes, and recommended solutions.

**TABLE A-10** Troubleshooting Microsoft Windows Applications

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
Inserting a file into Microsoft Office 2000 does not work.	The object file (such as clip art or an Excel spreadsheet) is located on a file system drive or on a drive mapped using <code>\\localhost\path</code> .	Copy or move the object file to your C: or D: drive and then insert it again.
When attaching and running an external monitor at 1600 x 1200 display resolution, Windows 2000 resets.	The default shared memory configuration is set too low.	In the BIOS setup program, increase shared memory to at least 8 Mbytes to support the 1600x1200 display resolution.
System appears to hang during installation of Corel Draw 10 for Microsoft Windows.	CD is not completely mounted before you clicked OK.	After inserting the previous Corel Draw CD, you must wait until the new CD is fully mounted (when the LED stops blinking) before clicking OK. The Corel installer freezes if you do not wait for the CD to mount.
When installing the Corel Draw 10 upgrade version without a previous version of Corel Draw installed, the install software prompts you to insert a CD of a previous full version of the software.		
When installing Corel WorkPerfect 2000 on Windows XP Professional, the installation appears to hang.	The Installation Wizard dialog box is waiting for user information, while the user's registration dialog box is open in the background and covered by another Installation Wizard dialog box. The installation is placed in "waiting" mode.	To avoid this issue, make sure to delete the "white" Corel WP Office 2000 splash screen by closing the Corel setup window and then the Installation Wizard dialog box is viewable and works fine.  This issue does not occur during every installation, but does happen with some frequency.

**TABLE A-10** Troubleshooting Microsoft Windows Applications

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
When performing a virus scan in Norton Antivirus (all versions), the system appears to hang.	The virus scan can enter an infinite loop if another user or process is accessing the directory at the same time as Norton Antivirus.	Turn off all processes accessing that directory and do not read or write to the directory being scanned.  Do not attempt to use the drive until after Norton Antivirus is finished with its scan.
Norton Antivirus 2002 might require increase in the Solaris file limit.	Norton Antivirus seems to “hold on” to many of the files it opens, which might result in the log file message:  Too many open files.	Increase the number of files that can be simultaneously open by Solaris software,  To find out the current limit, use the command: <code>ulimit -Hn</code>  In the <code>/etc/system</code> , add the following line: <code>set rlim_fd_max=XXXX</code> (XXXX is a greater number than the one returned by the <code>ulimit -Hn</code> command.)
Some image rendering problems exist when working with Office XP WordArt files in Windows 2000 or Windows XP Professional.	Frame buffer is set to 8-bit color depth.	Change graphics settings to higher color depth (16-bit or 24-bit).
Roxio Easy CD Creator 5 causes a Windows NT crash (BSOD) with <code>KMODE_EXCEPTION_NOT_HANDLED</code>	The software is installed with no supported CD burners attached to the system.	Make sure that a supported CD burner is installed before installing the software.
If a SunPCi III session running Windows XP Professional is used as a PC Anywhere host, the graphics display on the remote system is not updated.	Mouse movements are sent and effected on the host, and the graphics on the host are updated, but those updates are not sent back to the remote system.	If a PC is used as the host and a SunPCi III session is used as the remote system, the graphics display on the SunPCi III remote system is correct.  This “session sharing” functionality is, by default, available on Windows XP Professional as “Remote Desktop.” See Microsoft documentation for more details.

**TABLE A-10** Troubleshooting Microsoft Windows Applications

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
Corel Office 2000 and Corel Office 2002 installations do not work properly and will not install.	CD-ROMs that are not ISO 9660 compliant might not work on Solaris systems.	Use only CD-ROMs that are ISO 9660 compliant.
Cannot install Corel 10 (upgrade) without previous version already installed. Receive error message stating must install CD from previous version.	The previous software is not installed.	Insert the previous version of the Corel CD. Wait until the CD is fully mounted before clicking the OK button. The Corel installer will freeze if you do <i>not</i> wait for the CD to mount.
Inserting a Microsoft Office document as a graphic into another Office document does not work and Drive Not Found error message appears.	Microsoft Office 2000 or Office XP might not accept document as a graphic.	Use an earlier version of Microsoft Office to avoid this problem.  If you must use Microsoft Office 2000 or Office XP, convert the document to either a graphic (.jpg) or Word file (.doc).

## Troubleshooting Microsoft Windows Applications and SunFSD Issues

The following section describes known Microsoft Windows application and SunFSD issues, their causes, and recommended solutions.

### Installation and SunFSD on Windows XP Professional

Some software applications cannot be installed to a network drive, including SunFSD, and must be installed directly to the emulated disk. This is exactly the same behavior with a standard PC running Windows XP Professional and using a Samba drive.

In Windows XP Professional, some software applications do not install to a SunFSD drive. The current list includes the following:

- Adobe Photoshop 7
- Corel Draw 10
- Corel WordPerfect 2002
- Microsoft FrontPage 2002
- Microsoft Office XP

- Microsoft Project 2002
- Microsoft Visio 2002

---

**Note** – This is not an exhaustive list, but includes the known applications that cannot be installed to a SunFSD at this time.

---

If you are running Windows XP Professional, the installation of these software applications must be on the SunPCi III emulated drive.

## Microsoft Office XP Installation and SunFSD on Windows 2000 Professional

In Windows 2000 Professional, Microsoft Office XP fails if it is installed to a SunFSD or a Samba drive, in which any of the directories in the path are longer than the DOS 8.3 format. For example, Office XP fails if you install it to the directory `\longpathname\name1\name2`, but it works if you install it to `\shortname\name1\name2`.

There are two workarounds for this problem:

- Install Office XP to an emulated drive.
- Make sure that the path name on a SunFSD or Samba drive contains only short names (eight characters or fewer).

## WordPerfect 9 Installation and SunFSD on Windows XP Professional

WordPerfect 9 is part of the Corel WordPerfect Office 2000 Software Suite.

You might not be able to open WordPerfect 9 installed on a SunFSD while using Windows XP Professional. You might receive a Microsoft Windows error message if Corel WordPerfect Office 2000 was installed into a folder name that was more than seven characters.

To avoid this issue, install Corel WordPerfect Office 2000 to a folder with a name of seven characters or fewer.

## Retrospect Software and SunFSD

In Microsoft Windows, if you use Retrospect software (Version 5.6 or 6.0) to back up data through SunFSD, an erroneous message might appear reporting that there is not enough available space for backup, even if the space exists.

This issue occurs since Retrospect checks the root of the SunFSD mounted path only for available space.

To avoid this problem, verify that the root of the destination path directory contains adequate space for backup.

## Norton Antivirus Software Scanning and SunFSD on Windows 2000, Windows XP Professional, and Windows NT

When using Norton Antivirus software, specifically the 2002 Consumer Edition and the 7.60 Corporate Edition, you might have problems scanning files mounted on SunFSD drives.

If you use the 2002 Consumer Edition, the scanning might get into an infinite loop and not complete scanning. If you get into this situation, stop the scan and exit the application.

If you use the 7.60 Corporate Edition, the software might repeat scanning certain files and subdirectories, but it will eventually complete scanning.

Symantec states that Norton Antivirus 2002 Consumer Edition is not intended for use in scanning network-mapped drives.

## Adobe Photoshop Installation and SunFSD on Windows XP Professional

On Windows XP Professional, if installing Photoshop 5.0, 5.5, or 6.0 to a SunFSD drive, the Choose Directory dialog box does not list any SunFSD mounted drives.

Instead of browsing for the location, type the drive letter and directory in the text entry field near the top of the dialog box. The installation then proceeds normally.

---

**Note** – This problem is not present in Photoshop 6.0.1.

---



## SunPCi III International Support

---

This appendix includes the following topics:

- “International Support” on page 189
- “Using the Keyboard Environment Variables” on page 190
- “Using an International Keyboard Under DOS” on page 193
- “Using Code Pages and SunPCi III Software” on page 194

This appendix includes instructions for completing the following tasks:

- “How to Set an Environment Variable” on page 192
- “How to Turn Off an Environment Variable” on page 192
- “How to Set Up the Keyboard for Microsoft Windows” on page 192

---

## International Support

The SunPCi III 3.0 software gives you the national language support you need to run your applications using an international keyboard. The first time you started the SunPCi III program, you were presented with a list of regional languages and countries from which to choose. You entered the number that corresponded to the language or country your keyboard supports. These regional languages and country names represent code pages in PC terminology. If you want to change your code pages and keyboard language tables, use the instructions in this appendix.

To set up international keyboard support for SunPCi III 3.0 software, use the `KBTYP` and `KBCP` environment variables to select the correct keyboard language table and code page for your installation. Refer to “Using the Keyboard Environment Variables” on page 190 for more information, and to the procedure to use with Windows XP Professional, Windows 2000, Windows NT, or Windows 98.

---

**Note** – To configure Windows XP Professional, Windows 2000, or Windows NT to work with Japanese copy and paste functions, refer to “How to Configure Japanese Copy and Paste Between Microsoft Windows and Solaris” on page 137.

---

## Using the Keyboard Environment Variables

This section describes the following topics:

- “Setting the `KBTYPE` Environment Variable” on page 190
- “Setting the `KBCP` Environment Variable” on page 191
- “How to Set an Environment Variable” on page 192
- “How to Turn Off an Environment Variable” on page 192

### Setting the `KBTYPE` Environment Variable

The `KBTYPE` environment variable specifies the keyboard language table to use with the SunPCi III software. To set `KBTYPE`, refer to “How to Set an Environment Variable” on page 192. TABLE B-1 lists the values for `KBTYPE` and the corresponding languages.

**TABLE B-1** `KBTYPE` Values

<b><code>KBTYPE</code> Value</b>	<b>Keyboard Language</b>
be	Belgium
cf	Canadian French
dk	Danish
fr	French
gf	Swiss German
gr	German
it	Italian
ja	Japanese
ko	Korean

**TABLE B-1** KBTYPe Values

KBTYPe Value	Keyboard Language
la	Latin American Spanish
nl	Dutch (Netherlands)
no	Norwegian
po	Portuguese
sf	Swiss French
sg	Swiss German
sp	Spanish
su	Finnish
sv	Swedish
uk	U.K. English
us	U.S. English
zh	Chinese
zh_TW	Chinese (Taiwan)

## Setting the KBCP Environment Variable

The KBCP environment variable specifies the keyboard code page. The code page specifies the characters set (accents, currency symbols, and so on) to be used with a keyboard. To set KBCP, refer to “How to Set an Environment Variable” on page 192. For more information about code pages and their functions, refer to “Code Page Table” on page 194. TABLE B-2 lists the possible values for the KBCP environment variable.

**TABLE B-2** KBCP Values

KBCP Value	Description
437	United States code page
850	Multilingual code page, including all characters for most languages of European, North American, and South American countries
860	Portuguese code page
863	Canadian French code page
865	Nordic code page, including all characters for the Norwegian and Danish languages

## ▼ How to Set an Environment Variable

To set an environment variable, follow these steps:

1. **Make sure that the SunPCi III software is not running, or exit SunPCi III if it is running.**
2. **Open a Terminal window on your desktop.**
3. **Type the following command at the % prompt. Substitute the name of the environment variable for *VARIABLE\_NAME*, and the value for the variable (if required) for *value*.**

C Shell:

```
% setenv VARIABLE_NAME value
```

Bourne Shell:

```
% VARIABLE_NAME=value  
% export VARIABLE_NAME
```

4. **Start the SunPCi III software.**

## ▼ How to Turn Off an Environment Variable

To turn off an environment variable, follow this step:

- **Type the following command and substitute the name of the environment variable for *VARIABLE\_NAME*.**

```
% unsetenv VARIABLE_NAME
```

## ▼ How to Set Up the Keyboard for Microsoft Windows

In order for your keyboard layout to function correctly for your language, you also need to configure the keyboard for your version of Microsoft Windows. To set up the keyboard, perform the following steps:

1. **Check that the Solaris `KBCP` and `KBTYP` environment variables are set to use the same language (for example, `us`, `gr`, and so on).**

If the environment variables are not set, refer to “Setting the `KBTYP` Environment Variable” on page 190 to set `KBTYP`, and to “Setting the `KBCP` Environment Variable” on page 191 to set `KBCP`.

2. **From the Microsoft Windows Start menu, choose Settings, and then choose Control Panel.**

The Control Panel window opens.

3. **Set the default keyboard layout in Microsoft Windows to the same value as you set in `KBTYP`.**

---

## Using an International Keyboard Under DOS

Your Sun international keyboard fully emulates the local-language DOS AT/102 keyboard. Each keyboard offers all the characters in the US-ASCII and the local AT/102 character set, plus any other characters routinely used within that country.

### International Keyboard

In general, there is nothing unusual about the way the Sun international keyboard works for most characters. You press the key and the character appears on the screen. To get an uppercase character, you either press the Shift key or set the Caps Lock. If there are three characters shown on the key, you press the Alt-Graph key while pressing the key to get the third character. However, there are a few special ways in which the keyboard operates under DOS:

- The keyboard provides access to more characters than are available on the local-language DOS keyboard.
- Under both DOS and Solaris operating systems, some characters are used both as accents and as separate characters, such as the carat (^) and the tilde (~). Under the Solaris system, these characters have separate keys—one for use as a floating accent and one for the separate character. Under DOS, there is one key that provides both functions. To use the key to enter a floating accent, press the key. To use the key to enter a separate character, simultaneously press the key and the space bar.
- Characters that are not available on the local DOS keyboard might be ignored when you attempt to use them.

## DOS Character Set

When you, or a program you are using, creates a file under DOS, the DOS character set is used. When you create a file under the Solaris system, the ISO 8859 Latin 1 character set is used. You do not need to be aware of this unless you want to use a DOS file in the Solaris environment, or a Solaris file in the DOS environment. To convert files from one format to the other, two conversion utilities are provided—`dos2unix` and `unix2dos`. Only characters that are available in both the DOS character set and the ISO 8859 Latin 1 character set can be converted between formats. Fortunately, most commonly used characters are available in both character sets.

However, if you have a text file that contains special characters, these characters might not be convertible. Most word processors and text-processing programs use special codes in their files to indicate character style or page layout. Most of these programs, however, have options to store the file as “text only” or to “print to a file,” which eliminates the special codes and enables you to convert the file using the `dos2unix` and `unix2dos` commands.

---

## Using Code Pages and SunPCi III Software

DOS provides national language support through the use of language-specific code pages.

If you want to change code pages at some time, use the `KBCP` environment variable as described in “Setting the `KBCP` Environment Variable” on page 191.

### Code Page Table

A *code page* is a table that defines the character set you are using. Each *character set* contains 256 entries that are specific to a country or language. The characters are translated from the code page table and used by your keyboard, screen, and printer. An example is the set of letters, numbers, and symbols (such as accent marks) used by French Canadians. When the character set is put into a table for use by DOS, it becomes the Canadian French code page.

There are two types of code pages, *hardware* and *prepared*. A *hardware* code page is built into a device. For example, a printer manufactured for use in Portugal has a Portuguese hardware code page in it. Many devices can use only their own hardware code page.

Prepared code pages are provided in code-page information (.CPI) files in your software. OpenDOS includes the following prepared code pages:

- 437 – United States code page
- 850 – Multilingual code page, including all characters for most languages of European, North American, and South American countries
- 860 – Portuguese code page
- 863 – Canadian French code page
- 865 – Nordic code page, including all characters for the Norwegian and Danish languages

## National Language Support Codes

Both Swiss French and Swiss German use country code 041. Country codes 358 and 972 assume United States code page 437, but include country-specific date and time conventions. For example, if you use country code 351 (Portugal), you can use prepared code pages 860 and 850 and the po (Portugal) keyboard code. You could not use the us (United States) keyboard code.

**TABLE B-3** National Language Support

Country, Region, or Language	Country Code	Prepared Code Pages	Key Code
United States	001	437, 850	us
Canadian French	002	863, 850	cf
Latin America	003	437, 850	la
Netherlands	031	437, 850	nl
Belgium	032	437, 850	be
France	033	437, 850	fr
Spain	034	437, 850	sp
Italy	039	437, 850	it
Switzerland	041	437, 850	sf, sg
United Kingdom	044	437, 850	uk
Denmark	045	865, 850	dk
Sweden	046	437, 850	sv
Norway	047	865, 850	no
Germany	049	437, 850	gr

**TABLE B-3** National Language Support

Country, Region, or Language	Country Code	Prepared Code Pages	Key Code
English (International)	061	437, 850	-
Portugal	351	860, 850	po
Finland	358	437, 850	su
Israel	972	437	-
Japan	081		ja
Korea	082		ko
Peoples Republic of China	086		ch
Taiwan	088		tn

## The \$LANG Variable

There are two Solaris commands—`/usr/bin/dos2unix` and `/usr/bin/unix2dos`—that enable you to specify code pages. For example, to convert the `task_list` file, created with code page 850, from a DOS to a Solaris format, use the `dos2unix` command, and enter the following:

```
C:\> dos2unix -850 task_list task_list
```

If the code page is not specified on the command line, `dos2unix` and `unix2dos` will check the `$LANG` environment variable to determine which code page to use. To check whether your `$LANG` variable is set, enter the following in a Solaris command window:

```
% env | grep LANG
```

If you do not have the `$LANG` variable set, or if it is set to anything but the settings listed in TABLE B-4, SunPCi III software uses the default US code page 437 and the `en_US` (English-US) `$LANG` setting.

**TABLE B-4** `$LANG` Variable Settings

<code>\$LANG</code> Variable Setting	Language/Territory
<code>C</code>	Default "C" locale
<code>de</code>	German
<code>de_AT</code>	Austrian German
<code>de_CH</code>	Swiss German
<code>en_AU</code>	Australian English
<code>en_CA</code>	Canadian English
<code>en_IE</code>	Irish English
<code>en_GB</code>	U.K. English
<code>en_NZ</code>	New Zealand English
<code>en_US</code>	U.S. English
<code>es</code>	Spanish
<code>es_BO</code>	Bolivian Spanish
<code>es_CL</code>	Chilean Spanish
<code>es_CO</code>	Colombian Spanish
<code>es_CR</code>	Costa Rican Spanish
<code>es_EC</code>	Ecuadorian Spanish
<code>es_GT</code>	Guatemalan Spanish
<code>es_MX</code>	Mexican Spanish
<code>es_NI</code>	Nicaraguan Spanish
<code>es_PA</code>	Panamanian Spanish
<code>es_PE</code>	Peruvian Spanish
<code>es_PY</code>	Paraguayan Spanish
<code>es_SV</code>	Salvadoran Spanish
<code>es_UY</code>	Uruguayan Spanish
<code>es_VE</code>	Venezuelan Spanish
<code>fr</code>	French
<code>fr_BE</code>	Belgian French

**TABLE B-4** \$LANG Variable Settings

<b>\$LANG Variable Setting</b>	<b>Language/Territory</b>
fr_CA	Canadian French
fr_CH	Swiss French
it	Italian
ja	Japanese
ko	Korean
sv	Swedish
zh	Chinese
zh_CN	Chinese Cantonese
zh_HK	Chinese Hong Kong
zh_TW	Chinese Taiwan

Note that the settings listed in the table are the ones that SunPCi III supports. The table does not list all the languages Solaris supports.

For more information about using Solaris environment variables, refer to your Solaris documentation.

## SunPCi III Online Support

---

This appendix includes listings of various Web sites and online resources for SunPCi.

This chapter includes the following topics:

- “SunPCi III Product Web Page” on page 199
- “SunPCi III Documentation” on page 200

---

### SunPCi III Product Web Page

The SunPCi III product Web site is another useful resource. It contains the latest information about the SunPCi III product, as well as links to software updates and patches. Check the product Web site regularly for software updates.

The Web site is located at the following URL:

`http://www.sun.com/desktop/products/sunpci`

This Web site also includes links to SunPCi White Papers and other information.

There are many links from this Web site to further information about SunPCi III, including specific articles about the SunPCi product at the following URL:

`http://www.sun.com/desktop/products/sunpci/articles.html`

---

# SunPCi III Documentation

The `docs.sun.com` Web site enables you to access SunPCi documentation on the Web. You can search for a specific book title or subject at the following URL:

`http://docs.sun.com`

You can find specific SunPCi documentation by searching for “SunPCi” in the search option on `docs.sun.com` for both HTML and PDF versions of documentation. PDF versions of SunPCi documentation are available at the following URL:

`http://www.sun.com/products-n-solutions/hardware/docs/Workstation_Products/Interoperability_Products/SunPCi/index.html`

## SunPCi III Performance Tips

---

This appendix provides various ways to improve the performance of your SunPCi III system and the performance of your Microsoft Windows applications.

This appendix includes the following topics:

- “Fine-Tuning the SunPCi III Configuration” on page 201
- “Running Game Software on the SunPCi III Platform” on page 203
- “Using a Palm Pilot With SunPCi III Software” on page 204

This appendix includes instructions for completing the following tasks:

- “Increasing System Memory” on page 201
- “Specifying Emulated Drives” on page 202
- “Improving Video Performance” on page 202
- “How to Increase Video Memory” on page 203
- “Video Display Routing” on page 204

---

## Fine-Tuning the SunPCi III Configuration

The following sections describe some aspects of SunPCi III configuration that you can change to improve performance of the SunPCi III software.

### Increasing System Memory

The more system memory you have, the better the performance of the SunPCi III program. A 256-Mbyte memory module comes installed on the SunPCi III card by default.

If you want to increase the amount of memory allocated to the SunPCi III platform, purchase additional Mbyte memory. Refer to the *SunPCi III SODIMM Installation Guide* for installation information or for purchasing information contact your Sun reseller.



---

**Caution** – Do not allocate too much memory to the VGA driver. Every Mbyte allocated to video means that there is one less Mbyte allocated to Microsoft Windows. If Microsoft Windows system memory is set too low, the SunPCi III software will show the Microsoft Windows “blue screen” and the following error message: SunPCi.VXD: Can't dvma\_alloc xxx bytes. The system is low on memory.

---

## Specifying Emulated Drives

Specify as large a drive size as possible when creating a new C: or D: drive. You can specify up to 40 Gbytes of space, although only 2 Gbytes is initially viewable until you expand and reboot your system.

For more information about using emulated hard disk drives, see the section “Emulated Drives and SunPCi III Software” on page 13.

## Improving Video Performance

If your workstation video display is running in 8-bit mode, you can improve video performance by selecting a simple pattern or None for your desktop wallpaper. A complicated wallpaper pattern causes the screen to repaint more often while you work, thus slowing down video performance.

---

**Note** – Changing your desktop wallpaper does not affect performance for 24-bit video.

---

---

# Running Game Software on the SunPCi III Platform

---

**Note** – This procedure applies *only* if you are using an external VGA monitor with your SunPCi III card. For more information about how to install and configure an external VGA monitor, refer to Chapter 10.

---

This section is designed to help you fine-tune game performance on the SunPCi III platform. Although the default VGA memory setting of 8 Mbytes on your SunPCi III card should provide enough VGA memory for most games, you can increase the amount of VGA memory for more graphics-intensive games.

---

**Note** – Remember that increasing your video memory decreases the amount of available system memory. Refer to “Increasing System Memory” on page 201 for more information.

---

## ▼ How to Increase Video Memory

To increase the amount of VGA memory available to SunPCi III, perform the following procedure:

**1. Start the SunPCi III software.**

If SunPCi III software is already running, from the File menu, choose Reset PC to exit Microsoft Windows.

You will see the Startup window and the RAM check routine.

**2. While the RAM check routine is proceeding, press the Delete key on your keyboard.**

The Startup routine stops, and the Setup screen opens.

**3. Select Integrated Peripherals.**

**4. Change the System Shared Memory Size parameter to a larger value.**

The default is 8 Mbytes. This parameter accepts values of 8, 16, or 32 Mbytes.

**5. Exit the Setup window.**

The SunPCi III Startup routine starts over, using the new VGA memory settings.

# Video Display Routing

The following table describes some video output routing in SunPCi III software.

TABLE D-1 describes the type of video output that occurs for the operating system you want to use, the video driver you installed, and whether you typed `sunpci -v` at the prompt.

**TABLE D-1** Video Options Matrix

PC Operating System	With VGA Monitor Connected	Without VGA Monitor Connected
DOS ( <code>-v</code> switch used)	Video is routed to VGA monitor.	Video is discarded. SunPCi III window displays <code>Video routed</code> message.
DOS ( <code>-v</code> switch not used)	Video is routed to SunPCi III X-Window on workstation screen.	Video is routed to SunPCi III window on workstation screen.
Windows 98 (VGA driver used)	Video is routed to VGA monitor.	Video is discarded.
Windows 98 (SunPCi III drivers installed)	Video is routed to SunPCi III X-Window on workstation screen.	Video is routed to SunPCi III window on workstation screen.
Windows XP/NT/2000 (SunPCi III drivers installed automatically)	Video is routed to SunPCi III X-Window on workstation screen to use external monitor, install the <code>S3 Graphics ProSavage DDR</code> driver.	Video is routed to SunPCi III window on workstation screen.

---

## Using a Palm Pilot With SunPCi III Software

The SunPCi III software supports the `hotsync` function with the Palm Pilot. For best results, especially with Windows 98, select a specific `hotsync` speed on the Palm Pilot, rather than `As Fast As Possible`.

# Index

---

## A

A drive, 103  
auto\_master file, 164  
automounted directories, browsing, 164

## B

-B, 115  
-b, 115  
backplate  
    main card backplate, 109  
    Serial/Parallel Port, 111  
    USB/Firewire, 109  
-bindmac, 115  
Boot@Boot  
    about, 121  
    changing configuration manually, 130  
    configuring support, 124  
    disabling for VNS or SunPCi sessions, 129  
    listing sessions, 128  
    SunPCi cards, configuring for support, 127  
    SunPCi cards, preparing for support, 126  
    SunPCi daemon, about, 122  
    using an X server other than Xvnc, 131  
    Virtual Network Computing (VNC), about, 122  
    VNC, configuring support for, 124  
browse feature in Solaris, 164

## C

-C, 115  
-c, 115  
C and D drives, troubleshooting, 152  
C drive  
    about, 13  
    backing up, 156  
    creating and configuring, 13  
    troubleshooting, 152  
cards, multiple configuration, 21  
CD-ROM drive, mounting manually, 106  
character set, 194  
closing SunPCi, 12  
code page  
    definition, 194  
    \$LANG variable, 196  
COM port, 112  
command-line options  
    -B, 115  
    -b, 115  
    -bindmac, 115  
    -C, 115  
    -c, 115  
    -D, 115  
    -depth, 115  
    -display, 115  
    -f, 115  
    -h, 115  
    -help, 115  
    -l, 115  
    -n, 116  
    -new, 116

- nomac, 116
- p, 116
- R, 116
- sunpci, 114
- title, 116
- v, 116
- vga, 116
- w, 116
- xwait, 116
- compliance documents
  - Declaration of Conformity, xvii
  - Regulatory Compliance Statements, xiii
  - Safety Agency Compliance Statements, iii
- configuring multiple cards, 20, 22
- connecting to external devices, 106
- copy and paste, 137
  - Japanese, configuring, 137
- Copy command, 137
- creating a new hard drive, 16
- customer support, xxxix

## D

- D, 115
- D drive
  - about, 13
  - creating and configuring, 13
- Declaration of Conformity, xvii
- depth, 115
- devices, peripheral, 106
- disk image, name for new card, 23
- disk operating system, *See* DOS
- diskette drive, 103
- display, 115
- documentation, on Sun Web site, 200
- DOS
  - character set, 194
  - directory operations, 160
  - shortnames, 160
- drivers, Intel, 118

## E

- emulated drive, 13

- expanding, 18
- growing, 18
- performance tip, 202
- troubleshooting, 152

## Ethernet

- virtual, 51, 69, 85

## Ethernet networking

- configuring in Windows 2000, 69
- configuring in Windows NT, 85
- configuring in Windows XP, 51
- expanding an emulated hard drive, 18
- extended drives, 133
  - default, 135
  - installing applications, 135
  - network drives, 133
  - using, 132

## F

- f, 115
- features of SunPCi, 2
- File menu, 117
- file systems
  - drivers, 100
  - drives, 133
  - mapping, 100

## G

- games, running on external VGA, 203

## H

- h, 115
- hard drive
  - attaching, 16
  - creating a new, 16
  - hanging, 164
  - troubleshooting, 152
- hardware installation documentation, xl
- help, 115
- help, 5
  - getting help for man pages, 5
  - getting help for Solaris, 5

getting help for Windows, 5

## I

installation

- hardware documentation, xl
- system requirements, 10

Intel drivers

- automatic update, 119
- manual update, 119
- manual update for Windows 98, 120
- updating, 118

## J

Japanese copy and paste, configuring, 137

## K

known problems in SunPCi, 141

## L

- l, 115
- local printer, connecting to SunPCi, 111
- log file, name and location, 142
- LPT port, 111

## M

- main card backplate, 109
- man pages, 5
- MANPATH variable, 5
- manual pages, 5
- mapping
  - enabling, 101
  - file systems, 100
- memory
  - fine-tuning, 201
  - performance tips, 201
- memory, VGA, 203
- menus
  - File menu, 117

Options menu, 118

Meta key, xxxix

Microsoft DOS, *See* MS-DOS

Microsoft Windows

- DOS, 160
- supported operating systems, 1

Microsoft Windows application issues, troubleshooting, 182

mounting the CD-ROM drive manually, 106

mouse, troubleshooting problems, 144

multiple cards

- configuration, 21, 22
- creating emulated drives on, 23
- MAC address changes, 30
- names, 24
- sample names, 23
- software procedure, 22
- starting with emulated drives, 28
- updating the configuration, 29

## N

-n, 115

name in SunPCi window, 29

network

- drives, browsing, 164
- logging in, 165
- printers, 138
- setting TCP/IP properties, 35
- troubleshooting, 161, 162

network drives, 133

Network Neighborhood, 164

-new, 115

-nomac, 115

## O

operating system, required, 10

Options menu, 118

## P

-p, 115

parallel port, 111

- Paste command, 137
- performance tips
  - emulated drive, 202
  - SunPCi configuration, 201
- peripheral devices, 106
- physical Ethernet
  - configuring, 95
  - disabling, 51, 69, 85
- printer, connecting a local, 111
- printing using Solaris, 138

## R

- R, 115
- rebinding cards and images, 30
- Regulatory Compliance Statements, xiii

## S

- Safety Agency Compliance Statements, iii
- screen savers
  - avoiding, 140
  - using, 140
- Serial/Parallel Port Backplate
  - parallel port, 111
- Solaris
  - command windows, xxxvii
  - printers, used with Windows, 138
  - required version, 10
  - Volume Manager, 105
- starting multiple cards and drives, 28
- starting SunPCi, 11
- stopping SunPCi, 12
- SunFSD driver, enabling and disabling, 100
- SunPCi
  - closing, 12
  - creating a C or D drive, 13
  - features, 2
  - installing WIndows 2000, 62
  - installing WIndows 98, 94
  - installing WIndows NT, 82
  - installing WIndows XP, 40
  - multicards, configuring, 22
  - networking, 33
  - networking, hardware, 33

- networking, software, 33
- parallel port, 111
- serial port, 112
- sessions, shutting down, 129
- starting, 11
- stopping, 12
- system requirements, 10
- sunpci command, 11, 12, 115
- SunPCi daemon
  - about, 122
  - shutting down, 130
- support, xxxix
- system requirements, 10

## T

- TCP/IP
  - configuring, 35
  - information required for configuration, 35
  - setting properties, 35
  - setting properties for use with NDIS driver, 35
- technical support, xxxix
- title, 116
- title in SunPCi window, 29
- title option in sunpci command, 29
- troubleshooting, 141
  - CD-ROM Drive issues, 145
  - emulated hard drive, 152
  - hardware error messages, 143
  - hardware issues, 142
  - Microsoft Windows application issues, 182
  - mouse problems, 144
  - networking issues, 161
  - software installation error messages, 150
  - software issues, 149
  - software startup error messages, 151
  - SunFSD issues, 161
  - support for issues, 141
  - Windows 2000 issues, 166
  - Windows 98 issues, 180
  - Windows NT issues, 174
  - Windows XP issues, 166
- troubleshooting SunPCi and Microsoft Windows applications
  - Corel 10, 185
  - Corel Draw 2000, 183

- Corel Office 2000 and 2002, 185
- Easy CD Creator, 184
- Microsoft Office 2000, 183
- Microsoft Windows 2000, 184
- Microsoft Windows XP, 184
- Norton Antivirus, 184
- PC Anywhere, 184
- WordPerfect 2000 on Microsoft Windows XP, 183
- troubleshooting SunPCi, Microsoft Windows applications, and SunFSD issues, 185
- Norton Antivirus, 187
- Retrospect, 186
- Windows 2000 Professional, 186
- Windows XP Professional, 185
- Windows XP Professional and Adobe Photoshop, 187
- Windows XP Professional and WordPerfect, 186

## U

- Universal Serial Bus (USB) support, 106
- USB, 108, 110
- USB/Firewire Backplate, 109

## V

- v, 116
- VGA
  - driver for Windows 2000, 75
  - driver for Windows XP, 57
  - memory, 203
- vga, 116
- vga sunpci command option, 59, 77
- virtual Ethernet
  - configuring, 51, 69, 85, 96
  - enabling, 51, 69, 85, 96
- Virtual Network Computing (VNC)
  - about, 122
  - interacting with from remote client, 132
  - remote client, 132
  - shutting down, 129
- vold, enabling and disabling, 105
- vold\_floppy\_disable script, 144
- Volume Manager, enabling and disabling, 105

## W

- w, 116
- Windows 2000
  - configuring virtual Ethernet networking, 69
  - custom installation, 63
  - how to add a virtual network adaptor, 71
  - how to configure external video, 77
  - how to configure external video back to system monitor, 78
  - how to configure external video drivers, 75
  - how to configure the MouseKeys accessibility option, 79
  - how to configure the network, 72
  - how to reconfigure the network adaptor for physical Ethernet, 74
  - how to remove a static IP address, 70
  - installation notes, 62
  - installing, 62
  - reinstalling, 64
  - troubleshooting, 166
  - upgrading NT4 TS to Windows 2000 Server, 67
  - upgrading NT4 WS to Windows 2000 Professional, 65
- Windows 98
  - how to configure external video, 97
  - how to configure external video back to system monitor, 98
  - how to configure networking, 94
  - how to configure physical Ethernet networking, 95
  - how to configure virtual Ethernet networking, 96
  - installation notes, 94
  - installing, 94
  - reinstalling, 94
  - running from CD-ROM, 159
  - troubleshooting, 180
- Windows disk drives, creating, 13
- Windows Explorer
  - mapping network drives, 133, 165
  - using file system drives, 133
- Windows NT
  - configuring virtual Ethernet networking, 85
  - custom installation, 83
  - how to configure external video, 87
  - how to configure external video back to system monitor, 89
  - how to install the SunNDIS adaptor, 85

- how to remove the SunNDIS adaptor, 86
- installation notes, 82
- installing, 82
- reinstalling, 84
- setupnt script, 83
- troubleshooting, 174

#### Windows XP

- configuring virtual Ethernet networking, 51
- custom installation, 41
- how to add a virtual network adaptor, 52
- how to configure external video, 59
- how to configure external video back to system monitor, 60
- how to configure external video drivers, 57
- how to configure the network, 54
- how to configure the network adaptor for physical Ethernet, 55
- how to remove a static IP address, 52
- installation notes, 40
- installing, 40
- installing Japanese Windows XP Professional, 48
- installing Japanese Windows XP Professional, automatic, 49
- installing Japanese Windows XP Professional, manual, 50
- reinstalling, 42
- troubleshooting, 166
- upgrading 2000 Professional to XP Professional, 45
- upgrading 98 to XP Professional, 47
- upgrading NT4 WS to XP Professional, 43
- upgrading to, 43

Windows, getting help with, 5

World Wide Web, Sun documentation on, 200

## X

-xwait, 116