


VERITAS NetBackup™ 5.0

Media Manager Device Configuration Guide

for UNIX and Windows

N10264B

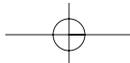

Disclaimer

The information contained in this publication is subject to change without notice. VERITAS Software Corporation makes no warranty of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. VERITAS Software Corporation shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.

VERITAS Legal Notice

Copyright © 1995-2003 VERITAS Software Corporation. All rights reserved. VERITAS, VERITAS Software, the VERITAS logo, VERITAS NetBackup, and all other VERITAS product names and slogans are trademarks or registered trademarks of VERITAS Software Corporation. VERITAS, the VERITAS Logo, VERITAS NetBackup Reg. U.S. Pat. & Tm. Off. Other product names and/or slogans mentioned herein may be trademarks or registered trademarks of their respective companies.

Portions of this software are derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm. Copyright 1991-92, RSA Data Security, Inc. Created 1991. All rights reserved.

VERITAS Software Corporation
350 Ellis Street
Mountain View, CA 94043
USA
Phone 650-527-8000 Fax 650-527-2901
www.veritas.com

Third-Party Copyrights

ACE 5.2A: ACE(TM) is copyrighted by Douglas C. Schmidt and his research group at Washington University and University of California, Irvine. Copyright (c) 1993-2002, all rights reserved.

IBM XML for C++ (XMLAC) 3.5.1: Copyright (c) 1999,2000,2001 Compaq Computer Corporation; Copyright (c) 1999,2000,2001 Hewlett-Packard Company; Copyright (c) 1999,2000,2001 IBM Corporation; Copyright (c) 1999,2000,2001 Hummingbird Communications Ltd.; Copyright (c) 1999,2000,2001 Silicon Graphics, Inc.; Copyright (c) 1999,2000,2001 Sun Microsystems, Inc.; Copyright (c) 1999,2000,2001 The Open Group; All rights reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, provided that the above copyright notice(s) and this permission notice appear in all copies of the Software and that both the above copyright notice(s) and this permission notice appear in supporting documentation.

This product includes software developed by the Apache Software Foundation (<http://www.apache.org/>).

JacORB 1.4.1: The licensed software is covered by the GNU Library General Public License, Version 2, June 1991.

Open SSL 0.9.6: This product includes software developed by the OpenSSL Project * for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)

TAO (ACE ORB) 1.2a: TAO(TM) is copyrighted by Douglas C. Schmidt and his research group at Washington University and University of California, Irvine. Copyright (c) 1993-2002, all rights reserved.



Revision History for NetBackup 5.0

The following table summarizes the revisions made to this document for NetBackup release 5.0. See the release notes for more detailed information.

Release	Date	Description
NetBackup 5.0	December 2003	Original version for this release. This guide is intended for use with NetBackup Server and NetBackup Enterprise Server. A new chapter on configuring Windows servers was added. The chapters for servers no longer supported were removed.





Contents

Revision History for NetBackup 5.0	iii
Preface	xiii
What Is In This Guide?	xiii
How To Use This Guide	xiv
Getting Help	xiv
NetBackup Manuals	xv
Related Resources	xvii
Glossary	xvii
Accessibility Features	xvii
Conventions	xvii
Chapter 1. Using This Guide	1
Before You Start Configuring Devices	1
Considerations When Using This Guide	1
Use the VERITAS Support Web Site	2
Read the NetBackup Release Notes	2
General Device Configuration Sequence	2
Configuration Cautions	3
Chapter 2. Sun4/SPARC Running Solaris 7/8/9	5
Before You Start	5
If You Are Using NetBackup Server	6
Topics Not Applicable to NetBackup Server	6



Preventing Possible System Problems	6
SSO Configurations With More Than 16 Tape Drives	6
Understanding the SCSI Passthru Drivers	7
Configuring SG and ST Drivers	9
Configuring the Sun StorEdge Network Foundation HBA Driver	12
Configuring Third-Party Fibre Channel HBA Drivers	13
Configuring Robotic Controls	13
Configuring SCSI Robotic Controls	13
Examples of SCSI Robotic Control Device Files	14
Configuring Tape Drives	16
Using Berkeley-Style Close	16
Fast-Tape Positioning (locate-block)	17
Enabling locate-block	17
Disabling locate-block	17
No Rewind Device Files	17
Examples of No Rewind Device Files	18
Configuring Nonstandard Tape Drives	18
Note on Case and Spaces in st.conf Entries	19
Editing the st.conf File	20
Adding Logical Unit Number Entries	22
Adding HP 4-mm Drives and HP DAT Autoloaders	23
Adding Sony AIT or AIT-2 Drives	24
Configuring Optical Disk Drives	26
Configuring HP Optical Disk Drives	27
Creating Device Files	27
Examples of Optical Disk Device Files	28
Setting the HP Optical Drive Type in Nonvolatile Memory	28
Command Summary	29
Chapter 3. IBM RS6000 Running AIX 4.3.3.10/5.1/5.2	31



Before You Start	31
RS6000 AIX Adapter Number Conventions	32
The SCSI Passthru Driver (ovpass)	33
Installing the SCSI Passthru Driver	33
Removing the SCSI Passthru Driver	33
Upgrading The SCSI Passthru Driver	33
Configuring Robotic Controls	34
Configuring SCSI Robotic Controls	34
Examples of SCSI Robotic Control Device Files	37
Configuring IBM 3590 Stacker Robotic Controls	40
Configuring Tape Drives	41
Configuring Non-QIC Tape Drives	41
Automatic Configuration	41
Using the chdev Command	42
Using Extended-File Marks for Drives	42
Automatic Configuration	42
Using the chdev Command	42
Fast-Tape Positioning (locate-block)	42
Creating No Rewind Device Files	43
No Rewind Device File Example	44
Using Multiple Tape Densities	46
Adding HP 4-mm Drives and HP C1560B DAT Autoloaders	46
Adding Sony AIT Drives	47
No Rewind Device Files	47
Dip Switch Settings	47
Configuring Optical Disk Drives	50
Creating Device Files	50
Examples of Optical Disk Device Files	51
Setting the HP Optical Drive Type in Nonvolatile Memory	52
Command Summary	55



Chapter 4. HP9000 Running HP-UX 11.0/11.11	59
Before You Start	59
If You Are Using NetBackup Server	59
Topics Not Applicable to NetBackup Server	59
Configuring Robotic Controls	60
Configuring SCSI Robotic Controls	60
Determining Which Passthru Driver to Configure	60
Examples	61
Configuring Device Files for the spt Passthru Driver	61
Configuring Device Files for the sctl Passthru Driver	63
Configuring Tape Drives	67
Using Berkeley Style Close	67
Using the Passthru Driver for Tape Drives	67
Automatic Configuration	68
Enabling Passthru Paths	68
Fast-Tape Positioning (locate-block)	70
Enabling locate-block	70
Disabling locate-block	70
Enabling SCSI Reserve/Release	70
Cautions with Using the HP-UX EMS Tape Device Monitor	71
No Rewind Device Files	71
No Rewind Device File Example	72
Switch Settings for HP C1533A 4-mm DAT Drives	72
Switch Settings for Sony AIT Drives	73
Configuring Optical Disk Drives	75
Example of an Optical Disk Device File	76
Using the Configure Storage Devices Wizard with Optical Disk Drives	76
 Chapter 5. HP Alpha Running TRU64 UNIX 5.1/5.1a/5.1b	 79
If You Are Using NetBackup Server	80



Topics Not Applicable to NetBackup Server	80
Configuring Robotic Controls	80
Configuring SCSI Robotic Controls	80
Creating SCSI Robotic Control Device Files	80
Example of SCSI Robotic Control Device File	81
Configuring Tape Drives	81
Fast-Tape Positioning (locate-block)	81
Adding Standard Tape Drives	81
No Rewind Device File Example	82
Adding Nonstandard Tape Drives	82
Device-Specific Entry for HP Ultrium 230e	83
Device-Specific Entry for Seagate Viper 200 - LTO	83
Device-Specific Entry for STK 9840	84
Switch Settings for HP C1533A 4mm DAT Drives	85
Switch Settings for Sony AIT Drives	86
Command Summary	90
Chapter 6. IRIX 6.5.15 - 6.5.xx	91
If You Are Using NetBackup Server	92
Topics Not Applicable to NetBackup Server	92
Using SCIP Controllers	93
Using the mediad Command	93
Configuring SCSI Robotic Controls	94
Examples of SCSI Robotic Control Device Files	94
Configuring Tape Drives Using SGI APD Software	95
Configuring Tape Drives (IRIX 6.5.15 Only)	96
Fast-Tape Positioning (locate-block)	96
No Rewind Device Files	96
Examples of No Rewind Device Files	97
Configuring Nonstandard Tape Drives	98



Adding HP 4-mm DAT Drives and HP C1560B DAT Autoloaders	98
Adding Sony DTF Drives	100
Adding Sony AIT-2 Drives	100
Adding Quantum DLT 7000 Drives	102
Adding Quantum DLT8000 Drives or Stackers	103
Adding Quantum SDLT220 Drives	103
Adding Exabyte Mammoth2 Compression Drives	104
Adding IBM 3590E Drives	104
Adding STK 9840 or T9940A FC Drives	105
Changing the /var/sysgen/master.d/scsi File	105
Adding Drive Support	105
Reconfiguring the Kernel and Modifying the MAKEDEV Script	106
Configuring Optical Disk Drives	108
Examples of Optical Disk Device Files	108
Command Summary	109
Chapter 7. Intel Hosts Running Red Hat Enterprise Linux AS 2.1/ES 2.1	111
Before You Start	111
If You Are Using NetBackup Server	113
Topics Not Applicable to NetBackup Server	113
Configuring Robotic Controls	113
Configuring SCSI Robotic Control Device Paths	113
Examples of SCSI Robotic Control Device Files	114
Configuring Tape Drives	114
Using the Passthru Driver for Tape Drives	114
Enabling Passthru Paths	115
Adding Standard Tape Drives	115
Examples of SCSI Tape Device Files	115
Verifying The Device Configuration	116
SSO Configurations With More Than 32 Tape Drives	116



Other Considerations (Advanced Topics)	117
Support for Additional Tape Devices	117
Improving Performance	117
Using the Debug Mode	118
Using an Emulex HBA	118
Using Persistent Binding	118
Utilities to Test SCSI Devices	118
Command Summary	118
Chapter 8. Intel Hosts Running Windows NT 4.0, 2000, 2003	121
Installing 32 Bit Tape Device Drivers	121
Index	123





Preface

This guide contains configuration information for adding storage peripherals (devices) to NetBackup media servers or SAN media servers controlled by Media Manager (NetBackup master servers can also be media servers).

NetBackup (includes Media Manager) can be installed on UNIX or Windows servers. See the NetBackup release notes for information on the supported UNIX and Windows server platforms.

Media Manager is the component of VERITAS NetBackup™ and VERITAS Storage Migrator™ that is used to configure and manage media, drives, and robots that are used to store and retrieve your backup data.

The intended audience for this guide is the system administrator responsible for adding the storage peripherals to media servers, and it assumes a thorough knowledge of UNIX and Windows system and device configuration.

What Is In This Guide?

“Using This Guide” on page 1 provides important instructions for using this guide that you should read.

In addition, this guide contains a device configuration chapter for Windows and for each of the UNIX server platforms that are supported by NetBackup as media servers or SAN media servers as follows:

- ◆ “Sun4/SPARC Running Solaris 7/8/9” on page 5.
- ◆ “IBM RS6000 Running AIX 4.3.3.10/5.1/5.2” on page 31.
- ◆ “HP9000 Running HP-UX 11.0/11.11” on page 59.
- ◆ “HP Alpha Running TRU64 UNIX 5.1/5.1a/5.1b” on page 79.
- ◆ “IRIX 6.5.15 - 6.5.xx” on page 91.
- ◆ “Intel Hosts Running Red Hat Enterprise Linux AS 2.1/ES 2.1” on page 111.
- ◆ “Intel Hosts Running Windows NT 4.0, 2000, 2003” on page 121.



How To Use This Guide

Keep the following points in mind when using this guide. Also refer to “Using This Guide” on page 1 for more details.

- ◆ Each server platform that is supported by NetBackup as a media server or SAN media servers is described in a separate chapter in this guide. You should only have to use the chapters for the platforms on which you are configuring devices for Media Manager.
- ◆ This guide is intended for use with NetBackup Server and NetBackup Enterprise Server. For readability in this guide, the term NetBackup refers to both NetBackup server types unless specifically noted.
- ◆ Portions of this guide apply only to a specific NetBackup server type (for example, NetBackup Enterprise Server). These topics are identified with the use of italics, as in the following example:

This is a NetBackup Enterprise Server topic.

- ◆ Portions of this guide include topics and examples that may not be applicable to your system hardware configuration. It is important to refer to the VERITAS support web site and the NetBackup release notes to determine if your hardware configuration is supported by your NetBackup server type before using this guide.

Getting Help

Use the VERITAS Technical support web site to get help for NetBackup if you have questions.

Accessing the VERITAS Technical Support Web Site

The VERITAS Technical Support Web site allows you to do any of the following:

- ◆ obtain updated information about NetBackup, including system requirements, supported platforms, and supported peripherals
- ◆ contact the VERITAS Technical Support staff and post questions to them
- ◆ get the latest patches, upgrades, and utilities
- ◆ view the NetBackup Frequently Asked Questions (FAQ) page
- ◆ search the knowledge base for answers to technical support questions
- ◆ receive automatic notice of product updates
- ◆ find out about NetBackup training



- ◆ read current white papers related to NetBackup

The address for the VERITAS Technical Support Web site follows:

<http://support.veritas.com>

Using VERITAS Telephone and E-mail Support

Telephone support for NetBackup is only available with a valid support contract. To contact VERITAS for technical support, dial the appropriate phone number listed on the Technical Support Guide included in the product box and have your product license information ready for quick navigation to the proper support group.

▼ To locate the telephone support directory on the VERITAS web site

1. Open <http://support.veritas.com> in your web browser.
2. Click the **Phone Support** icon. A page that contains VERITAS support numbers from around the world appears.

▼ To contact support using E-mail on the VERITAS web site

1. Open <http://support.veritas.com> in your web browser.
2. Click the **E-mail Support** icon. A brief electronic form will appear and prompt you to:
 - ◆ Select a language of your preference
 - ◆ Select a product and a platform
 - ◆ Associate your message to an existing technical support case
 - ◆ Provide additional contact and product information, and your message
3. Click **Send Message**.

NetBackup Manuals

The following manuals, along with the online help, comprise the NetBackup documentation set. For a complete list of related documents, see the NetBackup release notes. Depending on your configuration, other vendor documents may also be required.

- ◆ *VERITAS NetBackup Installation Guide for UNIX*

NetBackup_Install_UNIX.pdf

Explains how to install NetBackup software on UNIX-based platforms.



- ◆ *VERITAS NetBackup Installation Guide for Windows*
NetBackup_Install_Windows.pdf
Explains how to install NetBackup software on Windows-based platforms.
- ◆ *VERITAS NetBackup Media Manager System Administrator's Guide for UNIX*
MediaMgr_AdminGuide_Unix.pdf
Explains how to configure and manage the storage devices and media on UNIX servers running NetBackup. Media Manager is part of NetBackup.
- ◆ *VERITAS NetBackup Media Manager System Administrator's Guide for Windows*
MediaMgr_AdminGuide_Win.pdf
Explains how to configure and manage the storage devices and media on Windows servers running NetBackup. Media Manager is part of NetBackup.
- ◆ *VERITAS NetBackup Release Notes for UNIX and Windows*
NetBackup_Release_Notes.pdf
Provides important information about NetBackup on UNIX- and Windows-based servers, such as the platforms and operating systems that are supported and operating notes that may not be in the NetBackup manuals or the online help.
- ◆ *VERITAS NetBackup SAN Shared Storage Option System Administrator's Guide for UNIX and Windows*
MediaMgr_AdminGuide_SSO.pdf
Provides information on installing and configuring the NetBackup Shared Storage Option (SSO) on UNIX and Windows-based servers. SSO is an extension to tape drive allocation and configuration for NetBackup Media Manager.
- ◆ *VERITAS NetBackup Troubleshooting Guide for UNIX and Windows*
NetBackup_Troubleshoot_Guide.pdf
Provides troubleshooting information for UNIX- and Windows-based NetBackup products, including Media Manager.
- ◆ *VERITAS Storage Migrator Release Notes for UNIX*
StoMigrator_ReleaseNotes_UNIX.pdf
Provides information such as the platforms and operating systems that are supported and operating notes that may not be in the Storage Migrator manuals.
- ◆ *VERITAS Storage Migrator System Administrator's Guide for UNIX*
StoMigrator_AdminGuide_UNIX.pdf
Explains how to configure and manage Storage Migrator on a UNIX system.

Related Resources

Glossary

If you encounter unfamiliar terminology, consult the NetBackup online glossary. The glossary contains terms and definitions for NetBackup and all additional NetBackup options and agents.

The NetBackup online glossary is included in the NetBackup help file.

▼ **To access the NetBackup online glossary**

1. In the NetBackup Administration Console (or from the Backup, Archive, and Restore client interface), click **Help > Help Topics**.
2. Click the **Contents** tab.
3. Double-click **Glossary**.
4. Click **NetBackup Glossary of Terms**.

The glossary displays in a help window. Use the scroll function to navigate through the glossary.

Accessibility Features

NetBackup contains features that make the user interface easier to use by people who are visually impaired and by people who have limited dexterity. Accessibility features include:

- ◆ Support for assistive technologies such as screen readers and voice input (Windows servers only)
- ◆ Support for keyboard (mouseless) navigation using accelerator keys and mnemonic keys

For more information, see the *NetBackup System Administrator's Guide, Volume I*.

Conventions

The following section explains typographical and other conventions used in this guide.



Product-Specific Conventions

The following term is used in the NetBackup documentation to increase readability while maintaining technical accuracy.

- ◆ Microsoft Windows, Windows

Terms used to describe a specific product or operating system developed by Microsoft, Inc. Some examples you may encounter in NetBackup documentation are, Windows servers, Windows 2000, Windows Server 2003, Windows clients, Windows platforms, or Windows GUI.

When Windows or Windows servers is used in the documentation, it refers to all of the currently supported Windows operating systems. When a specific Windows product is identified in the documentation, only that particular product is valid in that instance.

For a complete list of Windows operating systems and platforms that NetBackup supports, refer to the *NetBackup Release Notes for UNIX and Windows* or go to the VERITAS support web site at <http://www.support.veritas.com>.

Typographical Conventions

Here are the typographical conventions used throughout the manuals:

Conventions

Convention	Description
GUI Font	Used to depict graphical user interface (GUI) objects, such as fields, listboxes, menu commands, and so on. For example: Enter your password in the Password field.
<i>Italics</i>	Used for placeholder text, book titles, new terms, or emphasis. Replace placeholder text with your specific text. For example: Replace <i>filename</i> with the name of your file. Do <i>not</i> use file names that contain spaces. This font is also used to highlight NetBackup server-specific or operating system-specific differences. For example: <i>This step is only applicable for NetBackup Enterprise Server.</i>
Code	Used to show what commands you need to type, to identify pathnames where files are located, and to distinguish system or application text that is displayed to you or that is part of a code example.
Key+Key	Used to show that you must hold down the first key while pressing the second key. For example: Ctrl+S means hold down the Ctrl key while you press S.



You should use the appropriate conventions for your platform. For example, when specifying a path, use backslashes on Microsoft Windows and slashes on UNIX. Significant differences between the platforms are noted in the text.

Tips, notes, and cautions are used to emphasize information. The following samples describe when each is used.

Tip Used for nice-to-know information, like a shortcut.

Note Used for important information that you should know, but that shouldn't cause any damage to your data or your system if you choose to ignore it.

Caution Used for information that will prevent a problem. Ignore a caution at your own risk.

Command Usage

The following conventions are frequently used in the synopsis of command usage.

brackets []

The enclosed command line component is optional.

Vertical bar or pipe (|)

Separates optional arguments from which the user can choose. For example, when a command has the following format:

```
command arg1|arg2
```

In this example, the user can use either the *arg1* or *arg2* variable.

Navigating Multiple Menu Levels

When navigating multiple menu levels, a greater-than sign (>) is used to indicate a continued action.

The following example shows how the > is used to condense a series of menu selections into one step:

- ❖ Select **Start > Programs > VERITAS NetBackup > NetBackup Administration Console**.

The corresponding actions could be described in more steps as follows:

1. Click **Start** in the task bar.
2. Move your cursor to **Programs**.



3. Move your cursor to the right and highlight **VERITAS NetBackup**.
4. Move your cursor to the right. First highlight and then click **NetBackup Administration Console**.



Before You Start Configuring Devices

Observe the following important points before using this guide to configure media servers or SAN media servers, and devices.

Considerations When Using This Guide

- ◆ “How To Use This Guide” on page xiv provides additional instructions for using this guide that you should review.
- ◆ This guide is intended for use with NetBackup Server and NetBackup Enterprise Server. For readability in this guide, the term NetBackup refers to both NetBackup server types unless specifically noted.
- ◆ Portions of this guide apply only to a specific NetBackup server type (for example, NetBackup Enterprise Server). These topics are identified with the use of italics, as in the following example:

This is a NetBackup Enterprise Server topic.

- ◆ It is important to read the **Before You Start** section (if applicable) of the chapters in this guide. These sections provide any important platform-specific instructions, or may contain specific instructions or limitations pertaining to NetBackup server types.
- ◆ Portions of this guide include hardware-specific topics and examples that may not be applicable to your system hardware configuration or NetBackup server type.

It is important to refer to the VERITAS support web site (see “Use the VERITAS Support Web Site” on page 2) and the NetBackup release notes (see “Read the NetBackup Release Notes” on page 2) to determine if your hardware configuration is supported before using this guide.

- ◆ The information in this guide supplements the manuals provided by hardware and operating system vendors.
- ◆ Configuration file settings found in portions of this guide were tested and are known to work, but other configuration settings may also work.



- ◆ To minimize configuration errors on UNIX servers, you can cut/paste configuration details from the text version of this configuration guide.

The formatting of this text file is similar, but is not identical to the printed version of the guide. Be sure to review the differences as explained at the beginning of the file. This file is installed with NetBackup Media Manager software in the following path:

```
/usr/opensv/volmgr/MediaMgr_DeviceConfig_Guide.txt.
```

Use the VERITAS Support Web Site

Visit the VERITAS support web site (<http://www.support.veritas.com>) to determine the current support for the following:

- ◆ NetBackup Enterprise Server and NetBackup Server.
- ◆ NetBackup licensed optional software (for example, SSO).
- ◆ Your UNIX or Windows server platform.
- ◆ Your robot and drive types.

Read the NetBackup Release Notes

Each server platform that is supported by NetBackup as a media server or SAN media server is described in a separate chapter in this guide. You should have to use only the chapters for the platforms on which you are configuring devices for Media Manager. Refer to the NetBackup release notes to determine the server platforms that are supported.

General Device Configuration Sequence

Use the following general sequence when configuring your devices.

1. Physically attach the storage devices to the media server (or SAN media server) and perform any configuration steps specified by the device or operating system vendor. See the appropriate chapter of this guide for your media server platform.
2. Create any required system device files for the drives and robotic control. This is usually done during installation. Device files are created automatically on Windows and on some UNIX platforms.

See the appropriate chapter of this guide for your media server or SAN media server platform.



3. Use one of the available Media Manager configuration interfaces to add the storage devices to your Media Manager configuration.

See the NetBackup Media Manager system administrator's guides for instructions.

Configuration Cautions

Observe the following cautions:

- ◆ Starting with release 4.5, NetBackup uses SCSI reserve/release to improve data integrity. SCSI reserve/release operates at the SCSI target level and depends on the fibre-to-scsi bridge hardware working correctly.

The use of SCSI reserve/release is *enabled* by default, but can be disabled using the NetBackup Administration Console configuration GUI.

- ◆ VERITAS does not recommend or support the use of single-ended to differential SCSI converters on Media Manager controlled devices. You may encounter problems if you use these converters.





This chapter explains how to configure devices for use with Media Manager on a Sun4/SPARC platform.

Configure drives and robots using one of the available Media Manager administrative interfaces.

The major topics included are as follows:

- ◆ Before You Start
- ◆ Preventing Possible System Problems
- ◆ SSO Configurations With More Than 16 Tape Drives
- ◆ Understanding the SCSI Passthru Drivers
- ◆ Configuring SG and ST Drivers
- ◆ Configuring the Sun StorEdge Network Foundation HBA Driver
- ◆ Configuring Third-Party Fibre Channel HBA Drivers
- ◆ Configuring Robotic Controls
- ◆ Configuring Tape Drives
- ◆ Configuring Optical Disk Drives
- ◆ Command Summary

Before You Start

Observe the following points when performing the configurations described in this chapter:

- ◆ When configuring devices, you should attach all peripherals and reboot the system with the reconfigure option (`boot -r` or `reboot -- -r`).
- ◆ When removing or replacing adapter cards, remove all device files previously associated with the adapter card.



- ◆ If you use the Automated Cartridge System (ACS) robotic software, you must ensure that the SunOS/BSD Source Compatibility Package is installed, so that the ACS software can make use of shared libraries in `/usr/ucblib`.

If You Are Using NetBackup Server

Portions of this chapter include configuration topics and examples for configurations and options that are not supported in NetBackup Server. It is important to refer to the VERITAS support web site to determine support for NetBackup Server, before using this chapter.

Topics Not Applicable to NetBackup Server

“SSO Configurations With More Than 16 Tape Drives” on page 6.

Preventing Possible System Problems

When system memory gets low, Solaris unloads unused drivers from memory and reloads drivers as needed. Tape drivers are a frequent candidate for unloading, since they tend to be less heavily used than disk drivers. Depending on the timing of these unload and load events for the `st` (Sun), `sg` (VERITAS), and fibre channel drivers, various problems may result. These problems can range from devices “disappearing” from a SCSI bus to system panics.

VERITAS recommends adding the following `forceload` statements to the `/etc/system` file. These statements prevent the `st` and `sg` drivers from being unloaded from memory.

```
forceload: drv/st
forceload: drv/sg
```

Other statements may be necessary for various fibre channel drivers, such as the following example for JNI drivers. This statement prevents the named driver from being unloaded from memory.

```
forceload: drv/fcaw
```

SSO Configurations With More Than 16 Tape Drives

This is a NetBackup Enterprise Server topic.

When the number of tape devices that are configured approaches 16, changes in tape device status may not be visible to all media servers in a Shared Storage Option (SSO) configuration. This is because the default maximum size of IPC message queues may not be large enough.

In these cases, communication between the `rdevmi` process on the scan hosts and the `oprdr` processes on the media servers can be interrupted when the number of messages sent exceeds the maximum size of the queue.

VERITAS recommends adding the following statements to the `/etc/system` file. These statements increase the maximum number of messages that can be created, and the number of bytes per queue. A reboot is necessary for the changes to take effect.

```
set msgsys:msginfo_msgtql=512
set msgsys:msginfo_msgmnb=65536
```

Be aware that increasing the maximum size of the IPC message queue may increase the amount of memory allocated to other IPC message queues on the system. The impact of these changes should be fully assessed before they are implemented.

Understanding the SCSI Passthru Drivers

NetBackup Media Manager provides its own driver for communicating with SCSI-controlled robotic peripherals. This driver is called the SCSA (Generic SCSI passthru driver), also referred to as the `sg` driver.

Note Since NetBackup uses its own passthru driver, the Solaris 8.0 `sgen scsi passthru` driver is not supported.

The `sg` driver is also used

- ◆ By the `avrd` process to scan drives.
- ◆ By NetBackup and Storage Migrator for locate-block positioning.
- ◆ By NetBackup and Storage Migrator for SAN error recovery.
- ◆ By NetBackup and Storage Migrator for Quantum SDLT performance optimization.
- ◆ By NetBackup and Storage Migrator for SCSI reserve/release.
- ◆ To set the optical drive type (as explained in “Setting the HP Optical Drive Type in Nonvolatile Memory” on page 28).
- ◆ By the NetBackup device configuration GUIs to collect robot and drive information.

▼ To manipulate the `sg` driver

Perform the following steps as the root user.



1. Determine if an `sg` driver is loaded by using the following command:

```
/usr/sbin/modinfo | grep sg
```

```
141 fc580000 2d8c 116 1 sg (SCSA Generic Revision: 3.4d)
153 fc7fa000 1684 49 1 msgsys (System V message facility)
```

2. Remove the existing driver:

```
/usr/sbin/rem_drv sg
```

3. Install or reconfigure the `sg` driver.

- a. If configuration is needed, run the following command first:

```
/usr/bin/rm -f /kernel/drv/sg.conf
```

- b. To install the driver run the following command:

```
/usr/openv/volmgr/bin/driver/sg.install
```

Once the driver has been installed, it is not necessary to reboot the system or run the `sg.install` command during or after each system boot.

Configuring SG and ST Drivers

This procedure contains instructions for configuring the `sg` driver for SCSI targets 0 thru 6 and 8 thru 15 for fast or wide adapter cards.

In this procedure, you execute `sg.build` to add these targets to the `st.conf`, `sg.conf` and `sg.links` files. Adjust the `-mt` and `-ml` parameters to create the range of targets and LUNs required by your configuration.

▼ To configure drivers

1. Execute the `sg.build` script to add target IDs 0-6, 8-15, and LUNs 0-1 to the following files:

```
/usr/opensv/volmgr/bin/driver/st.conf
/usr/opensv/volmgr/bin/driver/sg.conf
/usr/opensv/volmgr/bin/driver/sg.links
```

```
cd /usr/opensv/volmgr/bin/driver
/usr/opensv/volmgr/bin/sg.build all -mt 15 -ml 1
```

The `-mt 15` parameter specifies the maximum target ID that is in use on any SCSI bus (or bound to a fibre channel device).

The `-ml 1` parameter specifies the maximum target LUN that is in use on any SCSI bus (or by a fibre channel device).

2. The file `/usr/opensv/volmgr/bin/driver/st.conf` is used to replace the following seven entries in the `/kernel/drv/st.conf` file:

```
name="st" class="scsi"
    target=0 lun=0;
name="st" class="scsi"
    target=1 lun=0;
name="st" class="scsi"
    target=2 lun=0;
name="st" class="scsi"
    target=3 lun=0;
name="st" class="scsi"
    target=4 lun=0;
name="st" class="scsi"
    target=5 lun=0;
name="st" class="scsi"
    target=6 lun=0;
```



a. Make a copy of the `/kernel/drv/st.conf` file.

b. Edit the `/kernel/drv/st.conf` file.

Place a `#` in column one of each line of the seven default entries.

The temporary file `./st.conf` contains the entries that you need to insert into `/kernel/drv/st.conf`.

c. Reboot the system with the reconfigure option (`boot -r` or `reboot -- -r`).

d. Verify that the system created device nodes for all the tape devices using the following command: `ls -l /dev/rmt/*cbn`

3. The following is an example of the `/usr/obj/bsdmobj/volmgr/bin/driver/sg.conf` file to add targets 0-6, 8-15, and LUNs 0-1:

```
name="sg" class="scsi" target=0 lun=0;
name="sg" class="scsi" target=0 lun=1;
name="sg" class="scsi" target=1 lun=0;
name="sg" class="scsi" target=1 lun=1;
name="sg" class="scsi" target=2 lun=0;
name="sg" class="scsi" target=2 lun=1;
name="sg" class="scsi" target=3 lun=0;
name="sg" class="scsi" target=3 lun=1;
name="sg" class="scsi" target=4 lun=0;
name="sg" class="scsi" target=4 lun=1;
name="sg" class="scsi" target=5 lun=0;
name="sg" class="scsi" target=5 lun=1;
name="sg" class="scsi" target=6 lun=0;
name="sg" class="scsi" target=6 lun=1;
name="sg" class="scsi" target=8 lun=0;
name="sg" class="scsi" target=8 lun=1;
name="sg" class="scsi" target=9 lun=0;
name="sg" class="scsi" target=9 lun=1;
name="sg" class="scsi" target=10 lun=0;
name="sg" class="scsi" target=10 lun=1;
name="sg" class="scsi" target=11 lun=0;
name="sg" class="scsi" target=11 lun=1;
name="sg" class="scsi" target=12 lun=0;
name="sg" class="scsi" target=12 lun=1;
name="sg" class="scsi" target=13 lun=0;
name="sg" class="scsi" target=13 lun=1;
name="sg" class="scsi" target=14 lun=0;
name="sg" class="scsi" target=14 lun=1;
name="sg" class="scsi" target=15 lun=0;
name="sg" class="scsi" target=15 lun=1;
```



4. The following is an example of the `/usr/opensv/volmgr/bin/driver/sg.links` file to add targets 0-6, 8-15, and LUNs 0-1:

```
# begin SCSI Generic devlinks file - creates nodes in /dev/sg
type=ddi_pseudo;name=sg;addr=0,0; sg/c\N0t010
type=ddi_pseudo;name=sg;addr=0,1; sg/c\N0t011
type=ddi_pseudo;name=sg;addr=1,0; sg/c\N0t110
type=ddi_pseudo;name=sg;addr=1,1; sg/c\N0t111
type=ddi_pseudo;name=sg;addr=2,0; sg/c\N0t210
type=ddi_pseudo;name=sg;addr=2,1; sg/c\N0t211
type=ddi_pseudo;name=sg;addr=3,0; sg/c\N0t310
type=ddi_pseudo;name=sg;addr=3,1; sg/c\N0t311
type=ddi_pseudo;name=sg;addr=4,0; sg/c\N0t410
type=ddi_pseudo;name=sg;addr=4,1; sg/c\N0t411
type=ddi_pseudo;name=sg;addr=5,0; sg/c\N0t510
type=ddi_pseudo;name=sg;addr=5,1; sg/c\N0t511
type=ddi_pseudo;name=sg;addr=6,0; sg/c\N0t610
type=ddi_pseudo;name=sg;addr=6,1; sg/c\N0t611
type=ddi_pseudo;name=sg;addr=8,0; sg/c\N0t810
type=ddi_pseudo;name=sg;addr=8,1; sg/c\N0t811
type=ddi_pseudo;name=sg;addr=9,0; sg/c\N0t910
type=ddi_pseudo;name=sg;addr=9,1; sg/c\N0t911
type=ddi_pseudo;name=sg;addr=a,0; sg/c\N0t1010
type=ddi_pseudo;name=sg;addr=a,1; sg/c\N0t1011
type=ddi_pseudo;name=sg;addr=b,0; sg/c\N0t1110
type=ddi_pseudo;name=sg;addr=b,1; sg/c\N0t1111
type=ddi_pseudo;name=sg;addr=c,0; sg/c\N0t1210
type=ddi_pseudo;name=sg;addr=c,1; sg/c\N0t1211
type=ddi_pseudo;name=sg;addr=d,0; sg/c\N0t1310
type=ddi_pseudo;name=sg;addr=d,1; sg/c\N0t1311
type=ddi_pseudo;name=sg;addr=e,0; sg/c\N0t1410
type=ddi_pseudo;name=sg;addr=e,1; sg/c\N0t1411
type=ddi_pseudo;name=sg;addr=f,0; sg/c\N0t1510
type=ddi_pseudo;name=sg;addr=f,1; sg/c\N0t1511
# end SCSI devlinks
```

Caution The field separator between the fields `addr=x, y;` and `sg/` is a tab.

The `addr=` field uses hexadecimal notation, while the `sg/` field uses decimal values.

5. Install the new sg driver configuration.

```
/usr/bin/rm -f /kernel/drv/sg.conf
```



```
/usr/opensv/volmgr/bin/driver/sg.install
```

6. Verify that the sg driver found all the robots, tape drives, and optical disk drives (see the appropriate hardware configuration sections in this chapter for instructions).

Configuring the Sun StorEdge Network Foundation HBA Driver

The StorEdge Network Foundation HBA requires special configuration to bind device World Wide port names for use by the VERITAS sg driver.

The script `/usr/opensv/volmgr/bin/sg.build` adds the proper entries to the `sg.links` and `sg.conf` files. Before running the script, make sure that all devices are powered on and connected to the HBA.

An example of the additional entries in `/usr/opensv/volmgr/bin/driver/sg.conf` follows:

```
name="sg" parent="fp" target=0 lun=0 fc-port-wwn="22000090a50001c8";
name="sg" parent="fp" target=0 lun=1 fc-port-wwn="22000090a50001c8";
```

An example of the additional entries in `/usr/opensv/volmgr/bin/driver/sg.links` follows:

```
type=ddi_pseudo;name=sg;addr=w22000090a50001c8,0;          sg/c\N0t\A110
type=ddi_pseudo;name=sg;addr=w22000090a50001c8,1;          sg/c\N0t\A111
```

Note Each time a new device is added or an old device removed, re-create and re-install the new sg configuration (see “Configuring SG and ST Drivers” on page 9).

The script `/usr/opensv/volmgr/bin/sgscan` checks for devices that are not configured, and produces output similar to the following example:

```
#WARNING: detected StorEdge Network Foundation connected devices not
          in sg configuration file:
#
#   Device World Wide Port Name 21000090a50001c8
#
#   See /usr/opensv/volmgr/MediaMgr_DeviceConfig_Guide.txt topic
#   "Configuring the Sun StorEdge Network Foundation HBA/Driver"
#   for information on how to use sg.build and sg.install
#   to configure these devices
```

Configuring Third-Party Fibre Channel HBA Drivers

Fibre channel devices should be bound to specific target IDs by modifying the HBA driver's configuration files. The binding process assures that the target ID will not change after a system reboot or a fibre channel configuration change. In some instances, VERITAS products are configured to use a specific target ID, which if changed will cause the products to fail until they are configured correctly.

The binding process is vendor and product unique. Please refer to the documentation available for your specific HBA.

The binding may be based on the fibre channel World Wide name of the port (WWPN) or the node (WWNN), or the destination ID (AL-PA or fabric assigned).

Once the selected binding is in place, the configuration proceeds in the same manner as for parallel SCSI installations (see “Configuring SG and ST Drivers” on page 9).

Note Each time a new device is added or an old device removed, the binding must be updated to the new configuration.

Configuring Robotic Controls

Robots are controlled through a SCSI or a network connection.

- ◆ SCSI control is covered in the following sections.
- ◆ Configuration of network controlled robotic libraries (for example, ACS robot types) is discussed in the appendices of the Media Manager system administrator's guides.

Configuring SCSI Robotic Controls

Read this topic if you plan to use a robotic storage device that is controlled through a SCSI robotic connection. Information on supported SCSI robots (vendor models) can be found on the VERITAS support web site.

When communicating with SCSI-controlled robotic peripherals, Media Manager utilizes the SCSA Generic (`sg`) driver. This driver is provided with NetBackup.

Note You must install the `sg` driver before continuing with the instructions in this topic (see “Configuring SG and ST Drivers” on page 9 for details).

To display the device files that are available to be used through the `sg` driver, use the `sgscan` command with the `all` parameter and note the lines that indicate changer devices (robotic libraries), as in the following example:



```
# /usr/opensv/volmgr/bin/sgscan all
/dev/sg/c0t5l0: Tape (/dev/rmt/0): "HP          C1537A"
/dev/sg/c0t6l0: Cdrom: "TOSHIBA XM-5401TASUN4XCD"
/dev/sg/c1t2l0: Tape (/dev/rmt/7): "EXABYTE EXB-85058HE-0000"
/dev/sg/c1t4l0: Tape (/dev/rmt/9): "EXABYTE EXB-8900MH000202"
/dev/sg/c1t5l0: Changer: "EXABYTE EXB-210"
/dev/sg/c2t2l0: Tape (/dev/rmt/10): "Quantum DLT4000"
/dev/sg/c2t5l0: Tape (/dev/rmt/11): "QUANTUM DLT7000"
/dev/sg/c3t0l0: Disk (/dev/rdisk/c1t0d0): "FUJITSU M2952ESP SUN2.1G"
/dev/sg/c3t3l0: Disk (/dev/rdisk/c1t3d0): "FUJITSU M2952ESP SUN2.1G"
/dev/sg/c4t4l0: Tape (/dev/rmt/4): "Quantum DLT4000"
/dev/sg/c4t5l0: Tape (/dev/rmt/5): "Quantum DLT4000"
/dev/sg/c5t0l0: Disk (/dev/rdisk/c5t0d0): "SONY      SMO-F541"
/dev/sg/c5t1l0: Disk (/dev/rdisk/c5t1d0): "SONY      SMO-F541"
/dev/sg/c5t2l0: Disk (/dev/rdisk/c5t2d0): "SEAGATE ST11200N SUN1.05"
/dev/sg/c5t6l0: Disk (/dev/rdisk/c5t6d0): "SEAGATE ST11200N SUN1.05"
/dev/sg/c6t3l0: Changer: "SONY      DMS-B35"
/dev/sg/c6t5l0: Tape (/dev/rmt/6): "SONY      GY-2120"
/dev/sg/c7t0l0: Disk (/dev/rdisk/c7t0d0): "SEAGATE ST32550W SUN2.1G"
/dev/sg/c7t3l0: Disk (/dev/rdisk/c7t3d0): "MICROP  4221-09  1128RA"
/dev/sg/c7t4l0: Disk (/dev/rdisk/c7t4d0): "MICROP  4221-09MZ  Q4D"
/dev/sg/c8t2l0: Tape (/dev/rmt/14): "Quantum DLT4000"
/dev/sg/c8t3l0: Changer: "STK      9740"
/dev/sg/c8t4l0: Tape (/dev/rmt/13): "STK      SD-3"
/dev/sg/c8t6l0: Changer: "STK      9710"
/dev/sg/c9t0l0: Changer: "EXABYTE Exabyte 18D"
/dev/sg/c9t1l0: Tape (/dev/rmt/15): "Quantum DLT4000"
```

Note Specific device types can be filtered from the output using other forms of `sgscan`.

```
Usage: sgscan [all|basic|changer|disk|tape] [conf] [-v]
```

Examples of SCSI Robotic Control Device Files

Example 1

Using the previous `sgscan` output, if the SCSI robotic control for an Exabyte 210 is SCSI ID 5 of adapter 1, use the following path:

```
/dev/sg/c1t5l0
```

Example 2

Using the previous `sgscan` output, if the SCSI robotic control for a Sony library is SCSI ID 3 of adapter 6, use the following path:

```
/dev/sg/c6t3l0
```

Example 3

Using the previous `sgscan` output, if the SCSI robotic control for an STK 9710 is SCSI ID 6 of adapter 8 and you want to use TLD robotics, use the following path:

```
/dev/sg/c8t6l0
```

Example 4

If the SCSI robotic control for a DLT2700, DLT4700, or HP C1560B was SCSI ID 5 of adapter 0, use the following path:

```
/dev/sg/c0t5l1
```

Note that logical unit number 1 is used for those devices. The `sg` driver configuration can be modified so `sgscan` lists LUN 1 devices. In the sample `sgscan` output the configuration was not modified.

Example 5

Using the previous `sgscan` output, even if the SCSI robotic control for an STK 9740 is SCSI ID 3 of adapter 8, you would not enter any path to configure ACS robotic control.

Instead, assuming ACS control over the network, enter the appropriate ACSLS Host name. If you want to use TLD robotics to control the 9740, specify the following path:

```
/dev/sg/c8t3l0
```

Example 6 (IBM 3570 B-series Robotic Libraries)

If there is one drive in the robotic library, the robotic control is LUN 1 of the drive's SCSI ID. If there are two drives, the robotic control is LUN 1 of the Drive 1 SCSI ID. The SCSI ID's are viewed and configured by using the front panel on the robot.

The robotic control for the IBM 3570 B01/B02 is TLD, so if there are two drives, they may be connected to different host systems. If this is the case, the host system which is connected to drive 1 must also have the robotic control. Also, the library should be in RANDOM mode and BASE configuration. See the operator's guide supplied with the unit for information on setting library mode and configuration.

Assume a configuration as follows:

```
# /usr/opensv/volmgr/bin/sgscan
```



```
/dev/sg/c0t0l0: Disk (/dev/rdsk/c0t0d0): "IBM DCAS32160SUN2.1G"  
/dev/sg/c0t6l0: Cdrom: "TOSHIBA XM5701TASUN12XCD"  
/dev/sg/c1t5l0: Tape (/dev/rmt/1): "IBM 03570B02"  
/dev/sg/c1t6l0: Tape (/dev/rmt/2): "IBM 03570B02"
```

If drive 1 is SCSI ID 5, the robotic control for the robotic library is `/dev/sg/c1t5l1`.

Example 7 (Fujitsu M8100 Stackers)

The robotic control for the Fujitsu M8100 stacker is TSH. The unit must be set up to run in SYSTEM Mode and 2LUN Mode. See the M8100 Cartridge Tape Drive product guide supplied with the unit for information on setting the library modes.

The robotic control is LUN 1 of the drive's SCSI ID. The SCSI ID's are viewed and configured by using the front panel on the stacker.

Assume a configuration as follows:

```
# /usr/opensv/volmgr/bin/sgscan  
  
/dev/sg/c1t0l0: Tape (/dev/rmt/0): "FUJITSU M8100AA2"  
/dev/sg/c1t0l1: Changer: "FUJITSU M8100AA2"
```

If the drive is SCSI ID 0, the robotic control for the stacker is `/dev/sg/c1t0l1`.

Configuring Tape Drives

Read the following topics if you plan to use any peripheral with physical or virtual tape drives.

Using Berkeley-Style Close

The examples in this section use Berkeley-style close for tape drives. This is indicated by the letter `b` after the density specification. You must specify Berkeley-style close for tape devices that you configure under Media Manager.

The terms *Berkeley-style close* and *AT&T style close* refer to where a tape is left logically positioned after a close operation (in relation to a tape mark). One style leaves an application logically positioned before a tape mark and the other leaves it after. Applications must assume where the tape is left after a close in order to establish the correct orientation the next time they do a tape-position or read operation. Some operating systems allow tape devices to be configured with either type of close. NetBackup assumes it is using Berkeley-style close.



Fast-Tape Positioning (locate-block)

For AIT, DLT, Exabyte, DTF, and half-inch tape drives, Media Manager supports the SCSI `locate-block` command for positioning to a specific block on a tape. This approach improves tape-positioning greatly over the alternative method.

Enabling locate-block

NetBackup and Storage Migrator use the `locate-block` command by default if you did not uninstall the `sg passthru` driver. This uninstall procedure is explained in “Understanding the SCSI Passthru Drivers” on page 7. The driver is automatically installed with Media Manager.

Disabling locate-block

VERITAS recommends that you do not disable `locate-block` positioning. If you need to disable `locate-block` positioning, execute the following command:

```
touch /usr/opensv/volmgr/database/NO_LOCATEBLOCK
```

With `locate-block` positioning disabled, NetBackup uses the `forward-space-file/record` method and Storage Migrator skips file marks.

No Rewind Device Files

When adding tape drives to a Media Manager configuration, you need only specify a no rewind on close device path. To display the tape device files that are configured on your system, use the `sgscan` command with the `tape` parameter.

```
# /usr/opensv/volmgr/bin/sgscan tape
/dev/sg/c0t510: (/dev/rmt/0): "HP      C1537A"
/dev/sg/c1t210: (/dev/rmt/7): "EXABYTE EXB-85058HE-0000"
/dev/sg/c1t410: (/dev/rmt/9): "EXABYTE EXB-8900MH000202"
/dev/sg/c2t210: (/dev/rmt/10): "Quantum DLT4000"
/dev/sg/c2t510: (/dev/rmt/11): "QUANTUM DLT7000"
/dev/sg/c4t410: (/dev/rmt/4): "Quantum DLT4000"
/dev/sg/c4t510: (/dev/rmt/5): "Quantum DLT4000"
/dev/sg/c6t510: (/dev/rmt/6): "SONY    GY-2120"
/dev/sg/c8t210: (/dev/rmt/14): "Quantum DLT4000"
/dev/sg/c8t410: (/dev/rmt/13): "STK    SD-3"
/dev/sg/c9t110: (/dev/rmt/15): "Quantum DLT4000"
```



Note All device types can be displayed in the output using the `all` parameter with `sgscan`. This command can be helpful for associating tape devices with other SCSI devices that may be configured on the same adapter.

Usage: `sgscan [all|basic|changer|disk|tape] [conf] [-v]`

No rewind on close device files are in the `/dev/rmt` directory, and have the following format:

```
/dev/rmt/LOGICAL_DRIVE cbn
```

Where:

- ◆ `LOGICAL_DRIVE` is the logical drive id, as shown by the `sgscan` command.
- ◆ `c` indicates compression.
- ◆ `b` indicates Berkeley-style close.
- ◆ `n` indicates no rewind on close.

Examples of No Rewind Device Files

Example 1

Using the `sgscan` output, if an Exabyte 8505C drive is SCSI ID 2 of adapter 1, the device path you use follows:

```
/dev/rmt/7cbn
```

Example 2

Using the `sgscan` output, if a DLT7000 drive is SCSI ID 5 of adapter 2, the device path you use follows:

```
/dev/rmt/11cbn
```

Configuring Nonstandard Tape Drives

This topic applies to the following drive types.

Note These are nonstandard drive types that require changes to the kernel before you can use them on some of the supported versions of Solaris.

- ◆ Exabyte (models 8500, 8505, 8505XL, 8500C, 8900, or Mammoth2)

- ◆ Fujitsu M2488 and M8100
- ◆ HP 4-mm DAT
- ◆ IBM 3570 and 3590
- ◆ Quantum DLT2000, DLT4000, DLT7000, or DLT8000
- ◆ Sony AIT, AIT-2, and DTF
- ◆ STK half-inch cartridge
- ◆ Tandberg QIC and QIC 150

Caution As shown by the `st.conf` examples in this section, you must configure non-QIC tape drives as variable-mode devices if they are to be used by Media Manager on Solaris platforms. Otherwise, NetBackup is able to write data, but not read it. During a read, you see a “not in tar format” error.

The terms *variable mode* or *fixed mode* refer to the behavior of reads and writes and the way the kernel packs physical tape records into logical tape records for an application. Variable-mode devices allow more flexibility in reading previously written tapes. Many tape devices can be accessed in either mode. NetBackup assumes variable mode for non-QIC drives.

Note on Case and Spaces in `st.conf` Entries

Uppercase and lowercase are significant. For example, using `Hp` instead of `HP` would not work.

Spaces are significant within quoted strings in the `/kernel/drv/st.conf` file. The area that users most frequently have trouble with is the `vendor` field, which must always be eight characters in length.

For example, the `vendor/product` string for an HP C1533A drive is as follows (HP and 6 spaces is the `vendor` field):

```
"HP      C1533A"
```

If you were to omit some of the spaces (HP and 2 spaces is now the `vendor` field) in the `vendor` field as in the following example, the drive would not be recognized correctly.

```
"HP C1533A"
```

The best way to ensure that your entries are accurate is to copy them from the `MediaMgr_DeviceConfig_Guide.txt` file. See “Considerations When Using This Guide” on page 1.



Editing the st.conf File

Depending on your Solaris system level, you may be able to use some drives without editing the entries in this file. Solaris operating systems have built-in defaults for drives that may be used. Note that the drive must be natively supported by Solaris in a manner that is compatible with NetBackup.

Refer to the header section of your `st.conf` file for a list of drives that are natively supported in the Solaris kernel.

The `st.conf` file must be edited and an entry must be added for any drive types you are using that are not supported by Solaris. The following entries were tested by VERITAS and are known to work, but other settings may also work for the drives in your configuration.

Caution Note the second section of this list, where the third parameter (variable mode) must be zero. Not using zero causes restores to fail and may result in data loss. (The entry for ARCHIVE_VIP is the only exception.)

After making any changes to this file, verification with a test backup and restore should be done. Incorrect entries in this file may result in data loss.

```
tape-config-list =
```

```
"ARCHIVE VIPER 150", "Archive 150 Tape", "ARCHIVE_VIP",
"BNCHMARKDLT1", "Benchmark DLT1", "BM-DLT",
"Compaq DLT8000", "Quantum DLT8000 Tape Drive", "DLT8k-data",
"COMPAQ SuperDLT1", "Compaq SuperDLT", "SDLT-data",
"COMPAQ SDLT320", "COMPAQ SuperDLT drive", "SDLT-320",
"DEC DLT2000", "DEC DLT Tape Drive", "DEC-DLT",
"DEC DLT2700", "DEC DLT Tape Stacker", "DEC-DLT",
"DEC TZ89", "DEC DLT Tape Drive", "Q-DLT7000",
"EXABYTE EXB8500C", "Exabyte EXB-8500C 8mm Helical Scan", "EXB-8500C",
"EXABYTE EXB-8505", "Exabyte EXB-8505 8mm Helical Scan", "EXB-8505",
"EXABYTE EXB-8500", "Exabyte EXB-8500 8mm Helical Scan", "EXB-8500",
"EXABYTE EXB-8900", "Exabyte EXB-8900 Mammoth", "EXB-8900",
"EXABYTE Mammoth2", "Mammoth2 8MM Helical Scan Drive", "EXB-MAMMOTH2",
"FUJITSU M2488", "Fujitsu M2488", "FJ-D3",
"FUJITSU M8100", "Fujitsu M8100 1/2 Inch Cartridge", "FJ-M8100",
"HP HP354", "HP 4mm DAT Drive", "HP-DAT",
"HP C1533A", "HP DAT Autoloader", "HP-DAT",
"HP C1557A", "HP Dat DDS3 Autoloader", "HP-DAT-DDS3",
"HP C5683A", "HP DDS-4 4mm DAT", "HP_DAT_4",
"HP Ultrium", "HP Ultrium", "Ultrium",
"HP Ultrium 2-SCSI", "HP Ultrium", "ULTRIUM2",
"IBM 03590", "IBM 3590 1/2 Inch Cartridge", "IBM-3590",
"IBM 03570", "IBM 3570 1/2 Inch Cartridge", "IBM-3590",
"IBM 03590H", "IBM 3590H 1/2 Inch Cartridge", "CLASS_3590",
```



```

"IBM      ULTRIUM-TD1", "IBM Ultrium", "CLASS_3580",
"IBM      ULT3580-TD1", "IBM 3580 Ultrium", "CLASS_3580",
"IBM      ULT3580-TD2", "IBM 3580 Ultrium-2", "CLASS_LTO2",
"IBM      Ultrium-TD2", "IBM Ultrium-2", "CLASS_LTO2",
"SEAGATE  ULTRIUM06242-XXX", "Seagate LTO", "SEAGATE_LTO",
"SONY     GY-2120", "Sony DTF Drive", "gy20-data",
"SONY     GY-8240", "DTF2", "gy2120-data",
"SONY     SDX-300C", "SONY 8mm AIT", "SONY_AIT",
"SONY     SDX-400C", "SONY 8mm AIT", "SONY_AIT",
"SONY     SDX-500C", "SONY 8mm AIT2", "SONY_AIT",
"SONY     SDX-700C", "Sony AIT3 8mm", "SONY_AIT3",
"SONY     SDZ-100", "SONY S-AIT", "SONY_SAIT",
"SONY     SDZ-130", "SONY S-AIT FC", "SONY_SAIT",
"SONY     TSL-A300C", "SONY 8mm AIT", "SONY_AIT",
"SONY     TSL-A500C", "SONY 8mm AIT2", "SONY_AIT",
"STK      4781", "STK 1/2 Inch Cartridge (4480)", "STK-4781",
"STK      4791", "STK 1/2 Inch Cartridge (Silverton)", "STK-4791",
"STK      4890", "STK 1/2 Inch Cartridge (Twin Peaks)", "STK-4890",
"STK      9840", "STK 1/2 Inch Cartridge (9840)", "STK-9840",
"STK      T9840B", "STK 1/2 Inch Cartridge (9840B)", "STK-9840",
"STK      T9840C", "STK 1/2 Inch Cartridge (9840C)", "STK-9840",
"STK      T9940A", "STK 60 Gig Tape Drive", "CLASS_STK",
"STK      SD-3", "STK 1/2 Inch Cartridge (Redwood)", "STK-SD-3",
"STK      T9940A", "STK 60 Gig Tape Drive", "CLASS_STK",
"STK      T9940B", "STK 60 Gig Tape Drive", "CLASS_STK",
"SUN      DLT4000", "SUN DLT Tape Drive", "DEC-DLT",
"SUN      DLT7000", "SUN DLT7000 Tape Drive", "Q-DLT7000",
"TANDBERGSLR5 4/8GB", "Tandberg 8 Gig QIC", "TAND-8G-VAR",
"TANDBERGDLT4000", "Tandberg DLT4000", "DEC-DLT",
"TANDBERGDLT7000", "Tandberg DLT7000", "Q-DLT7000",
"TANDBERGDLT8000", "Tandberg DLT8000 Tape Drive", "DLT8k-data",
"TANDBERGSuperDLT1", "TANDBERGSuperDLT1", "SDLT-data",
"Quantum  DLT2000", "Quantum DLT Tape Drive", "DEC-DLT",
"Quantum  DLT4000", "Quantum DLT Tape Drive", "DEC-DLT",
"Quantum  DLT4500", "Quantum DLT Tape Stacker", "DEC-DLT",
"Quantum  DLT4700", "Quantum DLT Tape Stacker", "DEC-DLT",
"QUANTUM  DLT7000", "Quantum DLT7000 Tape Drive", "Q-DLT7000",
"QUANTUM  DLT8000", "Quantum DLT8000 Tape Drive", "DLT8k-data",
"Quantum  DLT2700", "Quantum DLT Tape Stacker", "DEC-DLT",
"QUANTUM  SuperDLT1", "QuantumSuperDLT", "SDLT-data",
"QUANTUM  SDLT320", "Quantum SDLT320-DTE", "SDLT320";

ARCHIVE_VIP = 1,0x32,512,0x163a,4,0x0,0x0,0x0,0x0,3;
BM-DLT = 1,0x38,0,0x18639,4,0x40,0x40,0x40,0x40,3;
CLASS_3580 = 1,0x24,0,0x45863d,2,0x00,0x01,0;
CLASS_3590 = 1,0x24,0,0x1c63d,4,0x0,0x0,0x0,0x0,3;
CLASS_LTO2 = 1,0x24,0,0x45863d,2,0x00,0x01,0;

```



```
CLASS_STK = 1,0x36,0,0x1d639,1,0x00,0;
DEC-DLT = 1,0x36,0,0x9639,4,0x0,0x0,0x0,0x0,3;
DLT8k-data = 1,0x38,0,0x19639,4,0x1a,0x1b,0x41,0x41,3;
EXB-8500C = 1,0x35,0,0x9639,4,0x14,0x15,0x8C,0x00,3;
EXB-8505 = 1,0x35,0,0x9639,4,0x14,0x15,0x8C,0x00,3;
EXB-8500 = 1,0x35,0,0x9639,4,0x14,0x00,0x00,0x15,2;
EXB-8900 = 1,0x35,0,0x9639,4,0x27,0x27,0x27,0x00,3;
EXB-MAMMOTH2 = 1,0x35,0,0x19639,4,0,0x27,0x28,0x7f,2;
FJ-D3 = 1,0x21,0,0xCA19,4,0x09,0x09,0x09,0x09,0;
FJ-M8100 = 1,0x24,0,0x1d63d,4,0x0,0x0,0x0,0x0,3;
gy20-data = 1,0x36,0,0xd659,1,0x00,0;
gy2120-data = 1,0x36,0,0x19659,1,0x00,0;
HP-DAT = 1,0x34,0,0x9639,4,0x0,0x0,0x0,0x0,3;
HP-DAT-DDS3 = 1,0x34,0,0,0x9639,4,0x0,0x8c,0x8c,0x8c,3;
HP_DAT_4 = 1,0x34,0,0x9639,4,0x00,0x8c,0x8c,0x8c,1;
IBM-3590 = 1,0x24,0,0x1c63d,4,0x0,0x0,0x0,0x0,3;
Q-DLT7000 = 1,0x38,0,0x19639,4,0x82,0x83,0x84,0x85,3;
SDLT-data = 1,0x38,0,0x19639,4,0x90,0x91,0x90,0x91,3;
SDLT-320 = 1,0x38,0,0x19639,4,0x92,0x93,0x92,0x93,3;
SDLT320 = 1,0x38,0,0x8639,4,0x90,0x91,0x92,0x93,3;
SEAGATE_LTO = 1,0x36,0,0x1d639,4,0x00,0x00,0x00,0x00,1;
SONY_AIT = 1,0x36,0,0x9639,4,0x0,0x0,0x0,0x0,0;
SONY_AIT3 = 1,0x36,0,0xd679,4,0x00,0x00,0x00,0x00,0;
SONY_SAIT = 1,0x36,0,0x1d639,4,0x00,0x00,0x00,0x00,0;
STK-4781 = 1,0x24,0,0x1d43d,1,0x00,0;
STK-4791 = 1,0x24,0,0x1d67d,1,0x00,0;
STK-4890 = 1,0x24,0,0x1d67d,1,0x00,0;
STK-9840 = 1,0x36,0,0x1d639,1,0x00,0;
STK-SD-3 = 1,0x24,0,0x1d67d,1,0x00,0;
TAND-8G-VAR = 1,0x37,0,0x963b,4,0xa0,0xd0,0xd0,0xd0,3;
Ultrium = 1,0x36,0,0x19639,4,0x00,0x00,0x00,0x00,3;
ULTRIUM2 = 1,0x36,0,0xd639,4,0x40,0x00,0x00,0x00,3;
```

Caution Reboot the system when you have finished changing the `st.conf` file. Use the reconfigure option (`boot -r` or `reboot -- -r`) to allow the kernel's SCSI tape (`st`) driver to recognize the drives as the correct type during system initialization.

Adding Logical Unit Number Entries

If the devices you are adding utilize the logical unit number (LUN) concept, (such as many fibre channel SAN configurations) you may also have to add entries to the following files:

- ◆ `st.conf`



- ◆ `sg.conf`
- ◆ `sg.links`

See the “Configuring SG and ST Drivers” on page 9 for information on `sg.build`, a script that is used to create these files, and examples of the proper syntax to use.

Adding HP 4-mm Drives and HP DAT Autoloaders

Read this section if you plan to use HP 4-mm DAT tape drives or HP C1560B DAT Autoloaders.

Note Other switch settings may work, but these settings were functional with an HP35480 drive and HP C1560B Autoloader during testing at VERITAS.

In the tables, 1 = On and 0 = Off. Use the following hardware (tape drive) switch settings on HP35480 4-mm (DAT) drives:

Switch	Setting
1	1
2	1
3	1
4	1
5	1
6	1
7	1
8	1

Use the following settings on HP C1533A drives in an HP C1560B DAT Autoloader:

Switch	Setting
1	1
2	1



Switch	Setting
3	1
4	1
5	1
6	1
7	0
8	0

Adding Sony AIT or AIT-2 Drives

Review this section if you plan to use Sony AIT or AIT-2 tape drives in your configuration.

No Rewind Device Files

When adding tape drives to a Media Manager configuration, you need only specify a no rewind on close device path. To display the no rewind device files that are configured on your system, use the `sgscan` command with the `tape` parameter.

```
# /usr/openv/volmgr/bin/sgscan tape  
  
/dev/sg/c2t5l0: Tape (/dev/rmt/6): "SONY SDX-300C"
```

Using the `sgscan` output, if the drive is SCSI ID 5 of adapter 2, the device path you use follows:

```
/dev/rmt/6cbn
```

Dip Switch Settings

Sony drives have 8 dip switches located on the bottom of the drive. It is important to set these switches correctly, even if it means taking the drives out of robots and checking them.

Some robots (for example, Spectra Logic robots) provide a way to set the drive switches from the robot itself. For Spectra Logic robots, it doesn't matter what the physical drive switches are. The Treefrog (215) robot has a dial in the back to set the appropriate OS. The Bullfrog (10000) robot has a means of setting the OS through a touch screen.

Depending on the version of the AIT drive, drives are shipped from Sony with one of the following settings shown in the tables (in the tables, 1 = On and 0 = Off).

Note Robot vendors and hardware resellers may change the default drive switch settings.

Switch	Setting
1	0
2	0
3	0
4	0
5	0
6	0
7	1
8	1

Switch	Setting
1	0
2	0
3	0
4	0
5	1
6	0
7	1
8	0



Switches 1 thru 4 are for setting the OS type. Switches 5 thru 8 can be usually be left set at the default position.

Sony documentation (*UNIX Configuration Guide, V2.xx*) states that switches 1 thru 4 can be left set at the default position. However, the drive firmware must be at (or above) one of the following levels:

- ◆ 0404 (SDX-300C)
- ◆ 0700 (SDX-400C)
- ◆ 0107 (SDX-500C)

If the drive has older firmware, update the firmware or use the following settings for switches 1 thru 4:

Switch	Setting
1	0
2	1
3	0
4	1

You can use the following command to determine the current dip switch settings without removing the drives and checking them:

```
/usr/opensv/volmgr/bin/scsi_command -d /dev/sg/c2t5l0 -ait
```

The output is as follows:

```
Physical AIT drive switch setting = 0x0 (Default configuration)  
Logical AIT drive switch setting = 0xa (SUN - SunOS and Solaris)
```

Configuring Optical Disk Drives

Read the following topics if you plan to use optical disk drives.



Configuring HP Optical Disk Drives

To use standalone HP optical-disk drives, the `sg` driver must be installed (see “Understanding the SCSI Passthru Drivers” on page 7). The system must also be configured to recognize the optical drives as disk drives at system boot time.

If you are adding HP 1.2 gigabyte or equivalent model magneto-optical disk drives, the system may not recognize these as disk drives and thus cannot use them. See “Setting the HP Optical Drive Type in Nonvolatile Memory” on page 28 for more information.

The Solaris 8 6/00 release introduced volume manager (`vold`), which attempts to manage all removable media devices. If `vold` manages an optical disk, NetBackup cannot access it.

Edit `/etc/vold.conf` and comment out the following line. Optical disks will then work as they did before this Solaris 8 change.

```
#use rmdisk drive /dev/rdisk/c*s2 dev_rmdisk.so rmdisk%d
```

Creating Device Files

When adding optical disk drives to a Media Manager configuration, you must specify the following device paths:

- ◆ Volume header disk device path (partition 0).
- ◆ Character device path (partition 6).

To display the disk device files that are configured on your system, use the `sgscan` command with the `disk` parameter:

```
# /usr/opensv/volmgr/bin/sgscan disk

/dev/sg/c0t0l0: (/dev/rdisk/c0t0d0): "IBM      DCAS32160SUN2.1G"
/dev/sg/c0t1l0: (/dev/rdisk/c0t1d0): "HP      C1113F"
/dev/sg/c0t2l0: (/dev/rdisk/c0t2d0): "HP      C1113F"
/dev/sg/c0t5l0: (/dev/rdisk/c0t5d0): "HP      C1160F"
/dev/sg/c1t0l0: (/dev/rdisk/c1t0d0): "SONY    SMO-F541"
/dev/sg/c1t1l0: (/dev/rdisk/c1t1d0): "SONY    SMO-F541"
/dev/sg/c1t2l0: (/dev/rdisk/c1t2d0): "SEAGATE ST11200N SUN1.05"
```

Note All device types can be displayed using the `all` parameter when executing `sgscan`. This command can be helpful for associating disk devices with other SCSI devices that may be configured on the same adapter.

Usage: `sgscan [all|basic|changer|disk|tape] [conf] [-v]`



Optical disk device files are located in the `/dev` directory and have the following formats.

Volume header device:

```
/dev/rdisk/cADAPTERt TARGETd0s0
```

Character device:

```
/dev/rdisk/cADAPTERt TARGETd0s6
```

Where:

- ◆ *ADAPTER* is the logical adapter number as shown in the `sgscan` output.
- ◆ *TARGET* is the SCSI ID.

Examples of Optical Disk Device Files

Example 1

Using the previous sample `sgscan` output, if the desired optical disk drive connects to SCSI ID 5 of adapter card 0, you would use the following device paths:

Volume header device:

```
/dev/rdisk/c0t5d0s0
```

Character device:

```
/dev/rdisk/c0t5d0s6
```

Example 2

Using the previous sample `sgscan` output, if the desired optical disk drive connects to SCSI ID 0 of S bus 1 adapter card 1, you would use the following device paths:

Volume header device:

```
/dev/rdisk/c1t0d0s0
```

Character device:

```
/dev/rdisk/c1t0d0s6
```

Setting the HP Optical Drive Type in Nonvolatile Memory

To use HP optical disk drives, the system must recognize the optical drives as disk drives at system boot time. If you are adding HP 1.2 gigabyte or equivalent model magneto-optical disk drives, the system may not recognize these as disk drives.

▼ To recognize these drives

1. Install the `sg` loadable driver, if it is not already installed. See “Configuring SG and ST Drivers” on page 9 for information on installing this driver.
2. Use the `scsi_command` command to change the device type (stored in the drive’s nonvolatile memory) from optical memory to disk. The format of the command follows.

```
/usr/opensv/volmgr/bin/scsi_command -d /dev/sg/sg_id -disk
```

sg_id is the logical identifier assigned to the optical disk drive for use by the `sg` driver. See “Configuring SCSI Robotic Controls” on page 13 for information on determining the logical identifier.

Note The `/dev` path allows Media Manager to access the optical disk drive through the `sg` driver. This is an exception to the usual case where Media Manager uses the `sg` driver to access robotic controls. Therefore be sure to specify the SCSI ID for the optical disk drive, *not* the SCSI ID for the robotic control.

3. Reboot the system with the reconfigure option (`boot -r` or `reboot -- -r`) to allow the drive to be recognized as a disk drive by the kernel’s SCSI disk (`sd`) driver during system initialization.

Command Summary

The following is a summary of commands that may be useful when configuring devices. See the procedures in this chapter for examples of their usage.

```
/usr/sbin/modinfo | grep sg
```

Displays whether or not the `sg` driver is installed.

```
/usr/opensv/volmgr/bin/driver/sg.install
```

Installs or updates the `sg` driver.

```
/usr/sbin/rem_drv sg
```

Uninstalls the `sg` driver. This command is usually not necessary, since `sg.install` does this before performing a driver update.

```
/usr/opensv/volmgr/bin/sg.build all -mt max_target -ml max_lun
```

Updates `st.conf`, `sg.conf`, and `sg.links`, and generates SCSI Target IDs with multiple LUNs.

```
/usr/opensv/volmgr/bin/sgscan all
```



Scans all connected devices with a SCSI inquiry and provides correlation between physical and logical devices using all device files in `/dev/sg`.

Checks for devices connected to the Sun StorEdge Network Foundation HBA that are not configured for use by VERITAS products.

```
/usr/opensv/volmgr/bin/scsi_command -d /dev/sg/sg_id -disk
```

Changes the device type (stored in the drive's nonvolatile memory) from optical memory to disk.

`sg_id` is the logical identifier assigned to the optical disk drive for use by the `sg` driver. See "Configuring SCSI Robotic Controls" on page 13 for information on determining the logical identifier.

```
boot -r or reboot -- -r
```

Reboot the system with the reconfigure option (`-r`) to allow a drive to be recognized as a disk drive during system initialization by the kernel's SCSI disk (`sd`) driver.



This chapter describes how to configure devices for use with Media Manager on an IBM RS6000 system. Configure drives and robots using one of the available Media Manager administrative interfaces.

The major topics included are as follows:

- ◆ Before You Start
- ◆ RS6000 AIX Adapter Number Conventions
- ◆ The SCSI Passthru Driver (ovpass)
- ◆ Configuring Robotic Controls
- ◆ Configuring Tape Drives
- ◆ Configuring Optical Disk Drives
- ◆ Command Summary

Before You Start

Observe the following points when performing the configurations described in this chapter:

- ◆ Attach all peripherals and reboot the system before configuring devices. Many of these steps may be accomplished using `smit` (the System Management Interface Tool). See the `smit(1)` man page for more information.
- ◆ To obtain error and debugging information about devices and robotic software daemons, the `syslogd` daemon must be configured to be active. See `syslogd(1)` for more information.



RS6000 AIX Adapter Number Conventions

The location code for an adapter consists of two pairs of digits with the format *AA-BB*; where *AA* identifies the location code of the drawer containing the adapter card and *BB* identifies both the I/O bus and slot containing the card.

A value of 00 for *AA* means that the adapter card is located in the CPU drawer or system unit, depending on the type of system. Any other value for *AA* indicates that the card is located in an I/O expansion drawer; in which case the value for *BB* identifies the I/O bus and slot number in the CPU drawer that contains the asynchronous expansion adapter. The first digit identifies the I/O bus with 0 corresponding to the standard I/O bus and 1 corresponding to the optional I/O bus. The second digit identifies the slot on the indicated I/O bus.

The first digit of *BB* identifies the I/O bus containing the adapter card. If the card is in the CPU drawer or system unit, this digit will be 0 for the standard I/O bus or 1 for the optional I/O bus. If the card is in an I/O expansion drawer, this digit is 0. The second digit identifies the slot number on the indicated I/O bus (or slot number in the I/O expansion drawer) that contains the card.

A location code of 00-00 is used to identify the Standard I/O Planar.

Examples

00-05 identifies an adapter card that is in slot 5 of the standard I/O bus in either the CPU drawer or system unit, depending on the type of system.

00-12 identifies an adapter card that is in slot 2 of the optional I/O bus in the CPU drawer.

18-05 identifies an adapter card located in slot 5 of an I/O expansion drawer. The drawer is the one connected to the asynchronous expansion adapter located in slot 8 of the optional I/O bus in the CPU drawer.

The SCSI Passthru Driver (ovpass)

Read this topic if you plan to use SCSI-controlled robotic peripherals or HP 1.2 gigabyte or equivalent model magneto-optical disk drives.

If you are using an API robot, such as an IBM Automatic Tape Library (ATL), refer to the NetBackup Media Manager Administration guide for information on configuring the robotic peripheral.

When communicating with SCSI-controlled robotic peripherals on an IBM RS6000 system, Media Manager utilizes a SCSI passthru driver called `ovpass`.

This driver is also used to set the optical drive type, as documented in “Setting the HP Optical Drive Type in Nonvolatile Memory” on page 52. `ovpass` is not required if the only device being used is the IBM 3590 B11 tape stacker.

Note You cannot use `smitt` to configure `ovpass` device files.

Installing the SCSI Passthru Driver

To install the `ovpass` driver, enter the following command:

```
/usr/opensv/volmgr/bin/driver/install_ovpass
```

To ensure the driver device files are accessible after each system boot, the following command should be placed in the system startup script:

```
/usr/opensv/volmgr/bin/driver/mkdev_ovpass
```

Removing the SCSI Passthru Driver

To remove the `ovpass` driver, enter the following command:

```
/usr/opensv/volmgr/bin/driver/remove_ovpass
```

Upgrading The SCSI Passthru Driver

Note The following upgrade procedure is required only if you get an error while trying to configure a FCP SCSI device. See step 5 on page 35 for details.

Some versions of Media Manager before release 4.5 used a version of the passthru driver that did not support FCP SCSI controllers.



▼ **To upgrade to the latest passthru driver**

Caution Any device files (`/dev/ovpassn`) will be removed and must be re-created.

1. Remove the old `ovpass` driver.

```
/usr/openv/volmgr/bin/driver/remove_ovpass
```

2. Install the new `ovpass` driver.

```
/usr/openv/volmgr/bin/driver/install_ovpass
```

Configuring Robotic Controls

Robots are controlled through a SCSI or a network connection.

- ◆ SCSI control is covered in the following section.
- ◆ Configuration for network controlled robotic libraries (for example, ACS robots) is discussed in the appendices of the Media Manager system administrator's guides.

Configuring SCSI Robotic Controls

Read this topic if you plan to use a robotic storage device that is controlled through a SCSI robotic connection. Information on supported SCSI robots (vendor models) can be found on the VERITAS support web site.

▼ **To check for and create the necessary device files**

1. Install the SCSI passthru driver as explained in “The SCSI Passthru Driver (ovpass)” on page 33.
2. Display which SCSI controllers are physically available on your machine by using the following command:

```
/usr/sbin/lsdev -C | grep I/O
```

In the following sample output, SCSI controller 1 (01) has been assigned the logical identifier `scsi0`:

```
scsi0 Available 00-01 SCSI I/O Controller
```



In the following sample output, FCP SCSI controller 3A-08 has been assigned the logical identifier `fscsi0`:

```
fscsi0 Available 3A-08-01 FC SCSI I/O Controller Protocol Device
```

3. Display the SCSI device files that have already been created by using the following command:

```
/usr/sbin/lsdev -C -s scsi
```

The example output follows:

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
```

This output shows that two disk drives and one tape drive are configured as follows:

- ◆ `hdisk0` is a disk drive at controller 1 (01) and SCSI ID 0 (0,0)
- ◆ `hdisk1` is a disk drive at controller 1 (01) and SCSI ID 1 (1,0)
- ◆ `rmt0` is a tape drive at controller 1 (01) and SCSI ID 3 (3,0)

If the device files for the SCSI robotic control already exist, they appear in the `lsdev` output as `ovpass0`, `ovpass1`, etc. The output for this example does not show any `ovpass` files so you would have to create them as explained in the next step.

4. Display the FCP SCSI device files that have already been created by using the following command:

```
/usr/sbin/lsdev -C -s fcp
```

5. If device files for the desired robotic control SCSI ID do not exist, create the files using the following commands.

Note If you get an error (`mkdev` error code 0514-0520) while trying to configure a FCP SCSI device, review the topic “Upgrading The SCSI Passthru Driver” on page 33.

```
mkdev -c media_changer -s scsi -t ovpass -p controller -w id,lun
mkdev -c media_changer -s fcp -t ovpass -p controller
      -w scsi_id,lun
```

Where:

- ◆ *controller* is the logical identifier of the drive’s SCSI adaptor, such as `scsi0`, `scsi1` or `vscsi1`.
- ◆ *id* is the SCSI ID of the robotic connection.



- ◆ *scsi_id* is the fibre channel identifier for the N_Port address (D_ID) of the robotic connection.
- ◆ *lun* is the logical unit number of the robotic connection.

Several methods exist for determining the D_ID of the robot as follows:

- ◆ Inspect the name server for the switch (if available). Each vendor uses a unique method to make this information available. Consult the documentation for the switch vendor.
- ◆ Inspect the bridge for mapping information (if available). Each vendor uses a unique method to make this information available. Consult the documentation for the bridge vendor.
- ◆ Inspect the odm database for any tape devices in the robot using the following command:

```
/usr/bin/odmget -q "name=rmtX" CuAt
```

Where *rmtX* is the name of the tape device (for example: rmt0 or rmt1).

The following output shows that rmt0 is at SCSI ID 0x1009ef and the robot might also be at this address:

```
CuAt :
name = "rmt0"
attribute = "scsi_id"
value = "0x1009ef"
type = "R"
generic = "DU"
rep = "s"
nls_index = 6
```

- ◆ Use the *smc* (Library Medium Changer) entry for the robot to determine the correct SCSI ID and lun values. Inspect the *lsdev* output from step 4 and look for an entry like the following:

```
smc0 Available 14-08-01 IBM 3584 Library Medium Changer
(FCP)
```

If you see an entry for the robot, inspect the odm database using the following command:

```
/usr/bin/odmget -q "name=smc0" CuAt
```

```
CuAt :
name = "smc0"
attribute = "scsi_id"
value = "0x111ca"
type = "R"
generic = "DU"
```

```

rep = "s"
nls_index = 25

CuAt:
name = "smc0"
attribute = "lun_id"
value = "0x1000000000000"
type = "R"
generic = "DU"
rep = "s"
nls_index = 26

```

From the example output, the SCSI ID is 0x111ca and the lun is 1. The lun is derived from the lun ID, by right shifting it 48 bits.

6. Display the newly created logical identifier for the device by using one of the following commands:

```

/usr/sbin/lsdev -C -s scsi
/usr/sbin/lsdev -C -s fcp

```

In the following example output, `ovpass0` is a SCSI robotic control device file:

```

hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
ovpass0 Available 00-01-5,0 VERITAS Media Changer

```

The path name for these types of device files has the following form, where `ovpass_id` is the logical identifier assigned to the device.

```

/dev/ovpass_id

```

In this example, you would use the following device file path:

```

/dev/ovpass0

```

Examples of SCSI Robotic Control Device Files

Example 1

Assume this robot is not a TSD or an HP C1560B. The `ovpass` driver has been installed and the desired SCSI robotic controller is controller 1 at SCSI ID 5, but the device files do not exist.

1. Determine the logical identifier for the SCSI controller as follows:

```

/usr/sbin/lsdev -C -c adapter | grep SCSI

```



The following output shows that `scsi0` is the logical name for SCSI controller 1.

```
scsi0 Available 00-01 SCSI I/O Controller
```

2. Check if the device files exist for `ovpass` at SCSI ID 5.

```
/usr/sbin/lsdev -C -s scsi
```

The output shows that the device files exist for tape and disk, but not for the SCSI robotic control at controller 1 (`scsi0`) and SCSI ID 5 (5,0).

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
```

3. Create the device files by using the following command:

```
mkdev -c media_changer -t ovpass -s scsi -p scsi0 -w 5,0
```

4. Display the device files by issuing the following `lsdev` command:

```
/usr/sbin/lsdev -C -s scsi
```

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
ovpass0 Available 00-01-5,0 VERITAS Media Changer
```

For this example use the following device file path to configure the SCSI robotic control connected to controller 1 and SCSI ID 5:

```
/dev/ovpass0
```

Example 2

Assume the robot is a DLT2700/DLT4700 (TSD) or an HP C1560B (TL4). The `ovpass` driver has been installed, but the device files for SCSI robotic control at controller 1 with SCSI ID 3 and logical unit number 1 do not exist.

1. Determine the logical identifier for the SCSI controller:

```
/usr/sbin/lsdev -C -c adapter | grep -i SCSI
```

The following output shows that `scsi0` is the logical name for SCSI controller 1:

```
scsi0 Available 00-01 SCSI I/O Controller
```

2. Check if the device files exist for `ovpass` at SCSI ID 5.

```
/usr/sbin/lsdev -C -s scsi
```

The following output shows that the device files exist for tape and disk, but not for the SCSI robotic control at controller 1 (scsi0), SCSI ID 3, and logical unit number 1 (3,1):

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
```

3. The device files can now be created using the following command:

```
mkdev -c media_changer -t ovpas -s scsi -p scsi0 -w 3,1
```

4. Display the device files by issuing the `lsdev` command.

```
/usr/sbin/lsdev -C -s scsi
```

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
ovpass0 Available 00-01-3,1 VERITAS Media Changer
```

For this example, the device file to use for the TSD SCSI robotic control connected at controller 1 with SCSI ID 3 and logical unit number 1 would be:

```
/dev/ovpass0
```

Example 3

Assume the robot is an STK 9710 connected to a F/W Differential SCSI board and the passthru driver has been installed. Assume the drives are at SCSI ID's 4 and 5, and the robotics is at SCSI ID 6.

1. Determine the correct scsi controller.

```
lsdev -C | grep scsi
```

```
scsi0 Available 00-02 SCSI I/O Controller
ascsi0 Available 00-04 Wide SCSI I/O Controller Adapter
vscsi0 Available 00-04-0,0 SCSI I/O Controller Protocol Device
vscsi1 Available 00-04-0,1 SCSI I/O Controller Protocol Device
```

```
lsdev -C -c tape
```

```
rmt2 Available 00-04-01-4,0 Other SCSI Tape Drive
rmt3 Available 00-04-01-5,0 Other SCSI Tape Drive
```



2. The drives are on Adapter 00-04-01. Therefore, `vscsi1` is the correct adapter for making the `ovpass` device file as follows:

```
mkdev -c media_changer -t ovpass -s scsi -p vscsi1 -w 6,0
```

Note Never use the `scsi` adapter name.

Example 4 (IBM 3570 B-series Robotic Libraries)

If there is one drive in the robotic library, the robotic control is LUN 1 of the drive's SCSI ID. If there are two drives, the robotic control is LUN 1 of the Drive 1 SCSI ID. The SCSI IDs can be set or viewed using the front panel on the robot. The robotic control for the IBM 3570 B01/B02 is TLD, so if there are two drives they may be connected to different host systems.

If this is the case, the host system which is connected to Drive 1 must also have the robotic control. Also, the library should be in `RANDOM` mode and `BASE` configuration. See the operator's guide supplied with the unit for information on setting library mode and configuration.

Assume a configuration as follows:

```
lsdev -C -c tape

rmt0 Available 00-02-01-5,0 Other SCSI Tape Drive
rmt0 Available 00-02-01-6,0 Other SCSI Tape Drive
```

If drive 1 is SCSI ID 5, the robotic control for the robotic library will be LUN 1 of this SCSI ID. Assuming `vscsi1` is the correct adapter, make the `passthru` device (`ovpass`) as follows:

```
mkdev -c media_changer -t ovpass -s scsi -p vscsi1 -w 5,1
```

Configuring IBM 3590 Stacker Robotic Controls

If you plan to use a Tape Stacker Half-inch (TSH) robotic storage device, see the VERITAS support web site for the vendor model associated with the TSH robot type.

Perform the following steps to check for and create the necessary device files:

1. Display the SCSI tape devices configured in the system using the following command:

```
/usr/sbin/lsdev -C -c tape

rmt0 Defined 00-02-00-4,0 Other SCSI Tape Drive
rmt1 Available 00-08-00-6,0 2.3 GB 8mm Tape Drive
.
.
```



rmt12 Available 00-04-01-6,0 IBM 3590 Tape Drive and Medium Changer

2. The SCSI robotic path for the IBM 3590 is the same as the no rewind on close tape path. When configuring the TSH SCSI robotic path, the robotic control path for the 3590 would be `/dev/rmt12.1`. The tape drive path would also be `/dev/rmt12.1`.

Configuring Tape Drives

If you are using IBM tape drives, VERITAS recommends that you install the IBM AIX tape driver. Refer to the IBM documentation on using this driver.

If you are using other tape drives, VERITAS recommends that you use the IBM AIX OST (other SCSI tape) driver. Refer to the IBM documentation on using this driver.

Configuring Non-QIC Tape Drives

The terms *variable length block* or *fixed length block* refer to the behavior of reads and writes and the way the kernel packs physical tape records into logical tape records for an application. Variable-mode devices allow more flexibility in reading previously written tapes. Many tape devices can be accessed in either mode. NetBackup assumes variable length for non-QIC drives.

For more information, see `chdev(1)`, `smit(1)` and the system management guide. The `smit` application is the most convenient way to manually change from fixed to variable-length-block devices.

Caution Non-QIC tape drives must be configured as variable-length-block devices if they will be used by Media Manager. Otherwise, NetBackup is able to write data but may not be able to read it correctly. During a read, you may see a “not in tar format” error.

Automatic Configuration

When a non-QIC tape drive is configured using NetBackup, NetBackup will automatically issue the `chdev` command to configure the drive as a variable length block device. It is normally not necessary to manually run the `chdev` command, but the details of the command issued by NetBackup are provided (see “Using the `chdev` Command” on page 42).



Using the `chdev` Command

Ensure that the device being used is configured for variable mode by using the `chdev` command as follows:

```
/usr/sbin/chdev -l Dev -a block_size=0
```

Where *Dev* is the logical identifier for the drive (for example: `rmt0` or `rmt1`).

Using Extended-File Marks for Drives

Tape drives must be configured to use extended file marks, if those tape drives are capable of supporting them (for example, 8-mm drives). See `chdev(1)` and `smit(1)` for additional information. Otherwise, NetBackup may not be able to use those drives.

Automatic Configuration

When a tape drive is configured using NetBackup, NetBackup will automatically issue the `chdev` command to configure the drive to use extended file marks. It is normally not necessary to manually run the `chdev` command, but the details of the command issued by NetBackup are provided (see “Using the `chdev` Command” on page 42).

Using the `chdev` Command

Ensure that the device being used is configured for extended file marks as required by Media Manager by using the `chdev` command as follows:

```
/usr/sbin/chdev -l Dev -a extfm=yes
```

Where *Dev* is the logical identifier for the drive (for example: `rmt0` or `rmt1`).

Fast-Tape Positioning (`locate-block`)

For DLT, Exabyte, and half-inch cartridge tape drives, Media Manager supports the SCSI `locate-block` command for positioning tape to a specific block. This improves tape-positioning greatly over what can be obtained with the alternative.

Media Manager uses the `locate-block` command by default unless you disable it by executing the following:

```
touch /usr/opensv/volmgr/database/NO_LOCATEBLOCK
```

With `locate-block` positioning disabled, NetBackup uses the `forward-space-file/record` method.

Creating No Rewind Device Files

When adding tape drives to a Media Manager configuration, you need only specify a no rewind on close device path. These SCSI device files are in the `/dev` directory and have the following format:

```
/dev/rmtID.1
```

Where *ID* is the logical identifier assigned to the device by the system.

▼ To check for and create the necessary device files

1. Display which SCSI controllers are physically available by using the `lsdev` command as follows:

```
/usr/sbin/lsdev -C | grep I/O
```

This sample output shows that SCSI controller 1 (00-01) has been assigned the logical identifier `scsi0`.

```
scsi0 Available 00-01 SCSI I/O Controller
```

2. Display the SCSI device files that have already been created by using one of the following commands:

```
/usr/sbin/lsdev -C -s scsi
/usr/sbin/lsdev -C -s fcp
```

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
```

This example output shows that two disk drives and one tape drive exist as follows:

- ◆ `hdisk0` is a disk drive at controller 1 (00-01) and SCSI ID 0 (0, 0)
- ◆ `hdisk1` is a disk drive at controller 1 (00-01) and SCSI ID 1 (1, 0)
- ◆ `rmt0` is a tape drive at controller 1 (00-01) and SCSI ID 3 (3, 0)

If the device files for the SCSI tape drives exist, they appear in the output as `rmt0`, `rmt1`, and so on. The previous example output shows `rmt0`.

For `rmt0` and `rmt1`, you would use the following no rewind on close device files:

```
/dev/rmt0.1
/dev/rmt1.1
```



3. If the device files for the SCSI ID of the desired tape drive do not exist, create them using the following command:

```
/usr/sbin/mkdev -c tape -s scsi -t ost -p controller -w id,lun
```

Where:

- ◆ *controller* is the logical identifier of the SCSI adapter for the device, such as `scsi0` or `scsi1`.
- ◆ *id* is the SCSI ID of the drive connection.
- ◆ *lun* is the logical unit number of the drive connection.

An example for an 8-mm drive connected to controller 0 and SCSI ID 5 follows:

```
mkdev -c tape -s scsi -t ost -p scsi0 -w 5,0
```

You can display the newly created logical identifier for the device by using the `lsdev` command.

```
/usr/sbin/lsdev -C -s scsi
```

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
rmt1 Available 00-01-00-5,0 Other SCSI Tape Drive
ovpass0 Available 00-01-6,0 VERITAS Media Changer
```

The `rmt1` device file has been created.

4. If the device files do not exist on a FCP controller, use the following command to create them, where *device* is the controller number from step 1 on page 43. For example, `fscsi0`.

```
/usr/sbin/cfgmgr -l device
```

5. Ensure that the device being used is configured for variable-mode and extended file marks as required by Media Manager by using the `chdev` command as follows, where *Dev* is the logical identifier for the drive (for example: `rmt0` or `rmt1`).

```
/usr/sbin/chdev -l Dev -a block_size=0
/usr/sbin/chdev -l Dev -a extfm=yes
```

No Rewind Device File Example

Assume the device files for the desired SCSI 8-mm tape drive (controller 1, SCSI ID 5) do not exist.

1. Determine the logical identifier for the SCSI controller as follows:

```
/usr/sbin/lsdev -C -c adapter | grep SCSI
```

The following output shows that `scsi0` is the logical name for SCSI controller 1:

```
scsi0 Available 00-01 SCSI I/O Controller
```

2. Check if the device files exist for any device at SCSI ID 5.

```
/usr/sbin/lsdev -C -s scsi
```

The following output shows that some device files exist for tape and disk, but not for the 8-mm tape drive at controller 1 (`scsi0`) and SCSI ID 5 (5,0):

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
```

3. Create the desired device files by using the following command:

```
mkdev -c tape -t ost -s scsi -p scsi0 -w 5,0
```

4. Display the device files by issuing the following `lsdev` command:

```
/usr/sbin/lsdev -C -s scsi
```

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
rmt1 Available 00-01-00-5,0 Other SCSI Tape Drive
```

5. To ensure that the tape device is configured for variable-mode and extended file marks, use the following commands:

```
chdev -l rmt1 -a block_size=0
chdev -l rmt1 -a extfm=yes
```

Enter the following device file path to configure the 8-mm drive connected to controller 1 and SCSI ID 5:

```
/dev/rmt1.1
```



Using Multiple Tape Densities

After creating the necessary device files for your tape drives you may want to use non-default densities on drives that support them (for example, Exabyte 8500C tape drives).

There are two configurable densities available for all tape drives, although not all tape drives support multiple densities. The default density for both density setting 1 and density setting 2 is 0, which means maximum density.

To modify either of the density settings, you can use `smit (1)` or commands similar to the following:

```
chdev -l tapedev -a density_set_1=Density
chdev -l tapedev -a density_set_2=Density
```

Where:

- ◆ *tapedev* is the logical identifier for the drive, such as `rmt0` or `rmt1`.
- ◆ *Density* is the decimal number representing the desired density.

To use density setting 1, use the following no rewind on close device file:

```
/dev/rmt* .1
```

To use density setting 2, use the following no rewind on close device file:

```
/dev/rmt* .5
```

Adding HP 4-mm Drives and HP C1560B DAT Autoloaders

To support HP 4-mm DAT tape drives and HP C1560B DAT Autoloaders use the tape drive switch settings as shown in the following table. Other combinations may work, but these are the settings that were functional during testing with an HP 35480 tape drive and HP C1560B DAT Autoloader.

In the table, 1 = On and 0 = Off.

Switch	Setting
1	1
2	1
3	1
4	1

Switch	Setting
5	1
6	1
7	0
8	0

Adding Sony AIT Drives

Read this section if you plan to use Sony AIT tape drives in your configuration.

No Rewind Device Files

When adding tape drives to a Media Manager configuration, you need only specify a no rewind on close device path. To display the no rewind device files that are configured on your system, use the `lsdev` command as follows:

```
/usr/sbin/lsdev -C -s scsi
```

```
rmt6 Available 00-03-01-6,0 Other SCSI Tape Drive
```

Using the `lsdev` output, if the drive is SCSI ID 6 of adapter 3, the device path you use follows:

```
/dev/rmt0.1
```

Dip Switch Settings

Sony AIT drives have 8 dip switches located on the bottom of the drive. It is important to set these switches correctly, even if it means taking the drives out of robots and checking them.

Some robots (for example, Spectra Logic) provide a way to set the drive switches from the robot itself. For Spectra Logic robots, it doesn't matter what the drive switches are. The Treefrog (215) robot has a dial in the back to set the appropriate OS. The Bullfrog (10000) robot has a means of setting the OS through the touchscreen.

Depending on the version of the AIT drive, drives are shipped from Sony with one of two switch settings, as shown in the following tables (in the tables, 1 = On and 0 = Off).



Note Robot vendors and hardware resellers may change the default drive switch settings.

Switch	Setting
1	0
2	0
3	0
4	0
5	0
6	0
7	1
8	1

Switch	Setting
1	0
2	0
3	0
4	0
5	1
6	0
7	1
8	0

Switches 1 thru 4 are for setting the OS type. Switches 5 thru 8 can be usually be left set at the default position.



Sony documentation (*UNIX Configuration Guide, V2.xx*) states that switches 1 thru 4 can be left set at the default position. However, the drive firmware must be at (or above) one of the following levels:

- ◆ 0404 (SDX-300C)
- ◆ 0700 (SDX-400C)
- ◆ 0107 (SDX-500C)

If the drive has older firmware, update the firmware or use the following switch settings for switches 1 thru 4:

Switch	Setting
1	1
2	0
3	0
4	0

You can use the following command to determine the correct dip switch settings without removing the drives and checking them:

```
/usr/openv/volmgr/bin/scsi_command -d /dev/rmt0.1 -ait
```

The output is as follows:

```
Physical AIT drive switch setting = 0x1 (IBM RS6000 - AIX - disconnect
enabled)
Logical AIT drive switch setting = 0xff (Not set, physical setting in
effect)
```

This example was an AIT drive in a ADIC Grau library. The drive was removed and set to the AIX switch settings.



Configuring Optical Disk Drives

When adding optical disk drives to a Media Manager configuration, you specify only a character device path. Optical disk character device files are located in the `/dev` directory and have the following format, where *ID* is the logical identifier assigned to the device by the system.

```
/dev/rhdiskID
```

Note To use HP optical disk drives, the system must recognize the optical drives as disk drives at system boot time. If you are adding HP 1.2 gigabyte or equivalent model magneto-optical disk drives to an AIX system, the system may not recognize them as disk drives, and thus cannot use them. See “Setting the HP Optical Drive Type in Nonvolatile Memory” on page 52 for information on correcting this condition.

Creating Device Files

▼ To check for and create the necessary device files

1. Display which SCSI controllers are physically available on your machine by using the following `lsdev` command:

```
/usr/sbin/lsdev -C -c adapter | grep SCSI
```

This sample output shows that SCSI controller 1 (00-01) has been assigned the logical identifier `scsi0`.

```
scsi0 Available 00-01 SCSI I/O Controller
```

2. Display the SCSI device files that have already been created by using the following `lsdev` command:

```
/usr/sbin/lsdev -C -s scsi
```

The following example output shows that two disk drives and one tape drive exist:

- ◆ `hdisk0` is a disk drive at controller 1 (00-01) and SCSI ID 0 (0,0)
- ◆ `hdisk1` is a disk drive at controller 1 (00-01) and SCSI ID 1 (1,0)
- ◆ `rmt0` is a tape drive at controller 1 (00-01) and SCSI ID 3 (3,0)

If the device files for the SCSI optical disk drives exist, they show up in the output as `hdisk0`, `hdisk1`, and so on.

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
```

For `hdisk0`, you would use the following device path:

```
/dev/rhdisk0
```

3. If the device files for the desired optical drive's SCSI ID do not exist, you can create them with the following command:

```
mkdev -c disk -s scsi -t osdisk -p controller -w id,lun
```

Where:

- ◆ *controller* is the logical identifier of the device's SCSI adapter, such as `scsi0` or `scsi1`.
- ◆ *id* is the SCSI ID of the drive connection.
- ◆ *lun* is the logical unit number of the drive connection.

An example for an optical disk drive on controller 1 and SCSI ID 5 follows:

```
mkdev -c disk -t osdisk -s scsi -p scsi0 -w 5,0
```

4. You can display the newly-created logical identifier for the device by using the following command:

```
/usr/sbin/lsdev -C -s scsi
```

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
hdisk2 Available 00-01-00-5,0 Other SCSI Disk Drive
ovpass0 Available 00-01-6,0 VERITAS Media Changer
```

The device files for `hdisk2` have been created and you can now use them.

Examples of Optical Disk Device Files

Assume the device files for the desired optical disk drive (controller 1, SCSI ID 5) do not yet exist.

1. Determine the logical identifier for the SCSI controller as follows:

```
/usr/sbin/lsdev -C -c adapter | grep SCSI
```

The output shows that `scsi0` is the logical name for SCSI controller 1.

```
scsi0 Available 00-01 SCSI I/O Controller
```



2. Check to see if the device files exist for `ovpass` at SCSI ID 5.

```
/usr/sbin/lsdev -C -s scsi
```

The output shows that some device files exist for tape and disk, but not for the optical disk drive at controller 1 (`scsi0`) and SCSI ID 5 (5,0).

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
```

3. Create device files for the optical disk drive on controller 1 at SCSI ID 5 by using the following command:

```
mkdev -c disk -t osdisk -s scsi -p scsi0 -w 5,0
```

4. Display the device files by issuing the `lsdev` command.

```
/usr/sbin/lsdev -C -s scsi
```

```
hdisk0 Available 00-01-00-0,0 400 MB SCSI Disk Drive
hdisk1 Available 00-01-00-1,0 400 MB SCSI Disk Drive
rmt0 Available 00-01-00-3,0 Other SCSI Tape Drive
hdisk2 Available 00-01-00-5,0 Other SCSI Disk Drive
```

5. Enter the following character device file path to configure the optical disk drive connected to controller 1 and SCSI ID 5:

```
/dev/rhdisk2
```

Setting the HP Optical Drive Type in Nonvolatile Memory

To use HP optical disk drives, the system must recognize the optical drives as disk drives at system boot time. If you are adding HP 1.2 gigabyte or equivalent model magneto-optical disk drives to an AIX system, the system may not recognize them as disk drives and cannot use them.

▼ To detect whether the system recognizes the optical drives

1. Execute the following command after system boot.

```
/usr/sbin/lsdev -C -s scsi
```

2. If you see the appropriate controller and SCSI ID combination for the optical drive listed as Other SCSI Disk Drive, the system recognizes the drive as a disk drive.

```
hdisk0 Available 00-00-0S-0,0 2.2 GB SCSI Disk Drive
rmt0 Available 00-00-0S-3,0 Other SCSI Tape Drive
omd0 Defined 00-00-0S-6,0 Other SCSI Read/Write Optical Drive
ovpass0 Available 00-00-0S-2,0 VERITAS Media Changer
```

▼ **To recognize these drives when the operating system does not**

1. Install the `ovpass` driver if it is not already installed. See “The SCSI Passthru Driver (`ovpass`)” on page 33.
2. Create the `ovpass` device file for the optical drive so that the driver can be used to communicate with the optical drive.
 - a. Display the SCSI device files that have already been created by using the following command: `/usr/sbin/lsdev -C -s scsi`

The following example output shows that a disk drive, a tape drive, an optical drive, and SCSI robotic control are configured:

- ◆ `hdisk0` is a disk drive at controller 1 (00) and SCSI ID 0 (0,0)
- ◆ `rmt0` is a tape drive at controller 1 (00) and SCSI ID 3 (3,0)
- ◆ `omd0` is an optical drive at controller 1 (00) and SCSI ID 6 (6,0)
- ◆ `ovpass0` refers to the SCSI robotic control for controller 1 (00) and SCSI ID 2 (2,0)

```
hdisk0 Available 00-00-0S-0,0 2.2 GB SCSI Disk Drive
rmt0 Available 00-00-0S-3,0 Other SCSI Tape Drive
omd0 Defined 00-00-0S-6,0 Other SCSI Read/Write Optical
Drive
ovpass0 Available 00-00-0S-2,0 VERITAS Media Changer
```

- b. Create the device files for the optical drive by using the following command:

```
mkdev -c media_changer -s scsi -t ovpass -p controller
-w id,lun
```

Where:

controller is the logical identifier of the drive’s SCSI adapter, such as `scsi0` or `scsi1`.

id is the SCSI ID of the optical drive (not the robotic connection).



lun is the logical unit number of the optical drive.

For example:

```
mkdev -c media_changer -s scsi -t ovpass -p scsi 0 -w 6,0
```

Use the following command to obtain the logical identifier for the optical drive you just created:

```
/usr/sbin/lsdev -C -s scsi
```

- c.** Verify the temporary *ovpass* device file created in step b.

```
/usr/opensv/volmgr/bin/scsi_command -d /dev/ovpass_id -inquiry
```

Where *ovpass_id* is the logical identifier assigned to the temporary device.

For example if the temporary *ovpass* device was *ovpass2*, enter the following:

```
/usr/opensv/volmgr/bin/scsi_command -d /dev/ovpass2 -inquiry
```

The output shows the following:

```
removable device type c_8h_HP
```

- 3.** Use the following command to change the device type (stored in the drive's nonvolatile memory) from optical memory to disk. The format of the command is as follows, where *ovpass_id* is the logical identifier assigned to the device.

```
/usr/opensv/volmgr/bin/scsi_command -d /dev/ovpass_id -disk
```

For example:

```
/usr/opensv/volmgr/bin/scsi_command -d /dev/ovpass1 -disk
```

- 4.** Remove the *ovpass* device files and the optical drive that were created by using *rmdev* command as in the following:

```
rmdev -l ovpass_id -d  
rmdev -l optical_drive_id -d
```

Where:

- ◆ *ovpass_id* is the logical identifier assigned to the device.
- ◆ *optical_drive_id* is the optical drive identifier assigned to the optical drive.

For example:



```
rmdev -l ovpass1 -d
rmdev -l omd0 -d
```

5. Reboot the system to allow the drive to be recognized as a disk drive by the kernel's SCSI disk driver during system initialization.

The optical drive should be displayed as: `hdisk $logical_number$` , where *logical_number* is the logical number assigned to the drive by the system.

For example:

```
/usr/sbin/lsdev -C -s scsi
```

The following example output shows a disk drive, tape drive, robotic control, and optical drive:

```
hdisk0 Available 00-00-0S-0,0 2.2 GB SCSI Disk Drive
rmt0 Available 00-00-0S-3,0 Other SCSI Tape Drive
ovpass0 Available 00-00-0S-2,0 VERITAS Media Changer
hdisk1 Available 00-00-0S-6,0 Other SCSI Disk Drive
```

Command Summary

The following is a summary of commands that may be useful when configuring devices. See the procedures in this chapter for examples of their usage.

```
/usr/opensv/volmgr/bin/driver/install_ovpass
```

Installs the ovpass driver for the first time.

```
/usr/opensv/volmgr/bin/driver/remove_ovpass
```

Removes the ovpass driver.

```
/usr/opensv/volmgr/bin/driver/mkdev_ovpass
```

Place this command in the system startup script to ensure that the ovpass driver device files are accessible after each system boot.

```
/usr/sbin/lsdev -C | grep I/O
```

Displays adapters that are physically available on your server.

```
/usr/sbin/lsdev -C -s filetype
```

Displays the device files that have been created, where *filetype* defines the type of file displayed. `scsi` displays SCSI files and `fc` displays fibre channel files.

```
mkdev -c media_changer -s scsi -t ovpass -p controller -w id,lun
```



Creates device files for the robotic control SCSI ID.

Where *controller* is the logical identifier of the drive SCSI adaptor (such as *scsi0* or *scsi1*), *id* is the SCSI ID of the robotic connection, and *lun* is the logical unit number of the robotic connection.

```
mkdev -c media_changer -s fcp -t ovpass -p controller -w scsi_id,lun
```

Creates device files for the robotic control fibre channel SCSI ID.

Where *controller* is the logical identifier of the drive SCSI adaptor (such as *scsi0* or *scsi1*), *scsi_id* is the fibre channel SCSI ID of the robotic connection, and *lun* is the logical unit number of the robotic connection.

```
mkdev -c disk -s scsi -t osdisk -p controller -w id,lun
```

Creates device files for optical disk drives.

Where *controller* is the logical identifier of the drive SCSI adaptor (such as *scsi0* or *scsi1*), *id* is the SCSI ID of the robotic connection, and *lun* is the logical unit number of the robotic connection.

```
mkdev -c tape -s scsi -t ost -p controller -w id,lun
```

Creates device files for tapes.

Where *controller* is the logical identifier of the drive SCSI adaptor (such as *scsi0* or *scsi1*), *id* is the SCSI ID of the robotic connection, and *lun* is the logical unit number of the robotic connection.

```
/usr/sbin/chdev -l dev -a block_size=0
```

Configures the drive with logical identifier specified by *dev* (for example: *rmt0*) to variable mode.

```
/usr/sbin/chdev -l dev -a extfm=yes
```

Configures the drive with logical identifier specified by *dev* (for example: *rmt0*) for extended file marks.

```
/usr/opensv/volmgr/bin/scsi_command -d /dev/ovpass_id -disk
```

Used for HP optical disk drives to change the device type (stored in the drive's nonvolatile memory) from optical memory to disk.

Where *ovpass_id* is the logical identifier assigned to the device.

```
/etc/lsattr -l dev -E -H
```

Displays device information, where *dev* is the name of the device (for example, *rmt1*).

```
/usr/sbin/cfgmgr -l device
```

Creates device files on a FCP controller, where *device* is the controller number (for example, *fscsi0*).

```
/usr/bin/odmget -q "name=rmtX" CuAt
```

Displays the device attributes for the device (*rmtX*). This command can be used to determine SCSI target and lun pairs when configuring fibre channel devices.

Where *rmtX* is the name of the tape device (for example: rmt0 or rmt1).





This chapter shows how to configure devices for use with Media Manager on an HP9000 system. Configure drives and robots using one of the available Media Manager administrative interfaces.

The major topics included are as follows:

- ◆ Before You Start
- ◆ Configuring Robotic Controls
- ◆ Configuring Tape Drives
- ◆ Configuring Optical Disk Drives
- ◆ SSO Configurations With More Than 16 Tape Drives
- ◆ Command Summary

Before You Start

If You Are Using NetBackup Server

Portions of this chapter include configuration topics and examples for configurations and options that are not supported in NetBackup Server. It is important to refer to the VERITAS support web site to determine support for NetBackup Server, before using this chapter.

Topics Not Applicable to NetBackup Server

- ◆ “Enabling SCSI Reserve/Release” on page 70.
- ◆ “Cautions with Using the HP-UX EMS Tape Device Monitor” on page 71.
- ◆ “SSO Configurations With More Than 16 Tape Drives” on page 77



Configuring Robotic Controls

Robots are controlled through a SCSI or a network connection. Robot control configuration can be found as follows:

- ◆ SCSI control is covered in the following sections.
- ◆ Configuration of network controlled robotic libraries (for example, ACS robots) is discussed in the appendices of the Media Manager System Administrator's Guides.

Configuring SCSI Robotic Controls

Read this topic if you plan to use a robotic storage device that is controlled through a SCSI robotic connection. Information on supported SCSI robots (vendor models) can be found on the VERITAS support web site.

Determining Which Passthru Driver to Configure

When communicating with SCSI-controlled robotic peripherals, Media Manager robotic software uses the `spt` or `sctl` SCSI passthru driver. The driver that is used depends on the type of SCSI interface on the system.

The two types of SCSI interfaces are as follows:

- ◆ Interfaces that use the `scsi1/scsi3` bus-adapter driver require the `spt` passthru driver. The 28655A SCSI interface is in this category.
See "Configuring Device Files for the `spt` Passthru Driver" on page 61.
- ◆ Interfaces that use the `c700` or `c720` bus-adapter driver require the `sctl` passthru driver. For example, the following interfaces are in this category:
 - ◆ The GSC built-in SCSI interface.
 - ◆ Add-on cards for HP9000-700.
 - ◆ Some add-on cards for HP9000-800 D, K, T, and V series systems.

When attaching an autochanger (robotic library) device to a GSC interface and using the `sctl` driver, the `schgr` device driver must also be installed. Without this driver installed, the system will not bind the driver to the device. See the `autochanger(7)` man page.

See "Configuring Device Files for the `sctl` Passthru Driver" on page 63.

Examples

To determine the type of interface on your system, use the `ioscan -f` command as shown in the following examples.

Example 1: 28655A SCSI Interface (spt driver)

```
ioscan -f
```

```
Class   I  H/W Path Driver S/W State   H/W Type      Description
=====
bc      0                root   CLAIMED    BUS_NEXUS
bc      1 56                bc     CLAIMED    BUS_NEXUS      Bus Converter
ext_bus 0 56/52            scsi1  CLAIMED    INTERFACE      HP 28655A - SCSI
                                                Interface
target  0 56/52.2         target CLAIMED    DEVICE
tape    0 56/52.2.0       tape2  CLAIMED    DEVICE          HP   HPC1533A
```

In this case, the `ext_bus` entry (which designates the bus adapter) specifies a `scsi1` driver. You would configure the `spt passthru` driver for the SCSI robotic controls on this system (see “Configuring Device Files for the spt Passthru Driver” on page 61).

Example 2: Built-in SCSI interface (sctl driver)

```
ioscan -f
```

```
Class      I  H/W Path      Driver   S/W State   H/W Type      Description
=====
ext_bus    2  10/12/5       c700    CLAIMED    INTERFACE     Built-in SCSI
target     11 10/12/5.0      tgt     CLAIMED    DEVICE
tape       0  10/12/5.0.0   stape   CLAIMED    DEVICE         HP C1533A
target     12 10/12/5.2      tgt     CLAIMED    DEVICE
disk       6  10/12/5.2.0   sdisk  CLAIMED    DEVICE         TOSHIBA CD-ROM
```

In this case, the `ext_bus` entry specifies a `c700` driver. You would configure the `sctl passthru` driver for the SCSI robotic controls on this system (see “Configuring Device Files for the sctl Passthru Driver” on page 63).

Configuring Device Files for the spt Passthru Driver

Use the following procedure to configure these types of device files. See “Determining Which Passthru Driver to Configure” on page 60 to determine if you require these files.



Note The HP-UX kernel has to be configured to use the `spt` SCSI passthru driver. Refer to the HP-UX `scsi_pt (7)` man page.

The device files for the `spt` driver have the following format:

```
/dev/spt/cCONTROLLERtTARGETlUNIT
```

Where:

- ◆ *CONTROLLER* is the Instance number of the controlling bus. The Instance value is displayed in the output of `ioscan -f` in the column labeled I of the controller's entry (`ext_bus` in the column labeled Class).
- ◆ *TARGET* is the SCSI ID of the robotic control.
- ◆ *UNIT* is the SCSI logical unit number (LUN) of the robot. This is usually 0.

You must create the device files for the `spt` driver manually, as they are not created automatically when the system boots.

▼ To create these device files

These steps are also documented in the `scsi_pt (7)` man page.

1. Install and configure the driver as described in the man page.
2. Determine the character major number of the `spt` driver using `lsdev -d spt`.
3. Use the following commands to create the device file for the SCSI robotic control:

```
mkdir /dev/spt
mknod /dev/spt/Name c Major 0xIITL00
```

Where:

- ◆ *Name* is the device name as defined in the format: `cCONTROLLERtTARGETlUNIT`
- ◆ *Major* is the character major number (from the `lsdev` command).
- ◆ *Ii* is two hexadecimal digits identifying the controlling bus interface card by its Instance number.
- ◆ *T* is one hexadecimal digit representing the SCSI ID of robotic control.
- ◆ *L* is one hexadecimal digit representing the SCSI LUN of the robotic control.

Example of Creating a Device File

If the robotic control for an HP Optical Disk Library (ODL) is on a secondary SCSI bus at SCSI ID 3, LUN 0, use the following steps to create the device file.

1. Use the `ioscan -f` command to get information on the SCSI bus and the robotic control.

```

Class      I  H/W Path  Driver  S/W State H/W Type      Description
=====
bc         0                root    CLAIMED   BUS_NEXUS
bc         1  56        bc      CLAIMED   BUS_NEXUS     Bus Converter
ext_bus    1  56/16     scsi1   CLAIMED   INTERFACE     HP 28655A - SCSI
                                                Interface
target     4  56/16.3   target  CLAIMED   DEVICE
spt        0  56/16.3.0 spt     CLAIMED   DEVICE        HP      C1700T

```

The Instance number for the robot's SCSI bus is 1. It also confirms that the `spt` driver is attached to the optical robotic control at H/W Path `56/16.3.0`.

2. Use `lsdev` to get the character major number for the `spt` driver.

```
lsdev -d spt
```

The output from this command shows that the character major number for the `spt` driver is 137.

```

Character      Block      Driver      Class
137            -1         spt         spt

```

3. Create the `/dev/spt` directory, if it has not already been created.

```
mkdir /dev/spt
```

4. Create the device file as follows:

```
mknod /dev/spt/c1t310 c 137 0x013000
```

This command creates the `/dev/spt/c1t310` device file. Specify this file as the robot control path when configuring your device under Media Manager.

Configuring Device Files for the `sctl` Passthru Driver

Use the following procedure to configure these types of device files. See “Determining Which Passthru Driver to Configure” on page 60 to determine if you require these files.

Note You do not have to reconfigure the HP-UX kernel to use the `sctl` passthru driver on HP9000-700 systems, since the generic SCSI driver is part of basic HP-UX.



If the devices do not exist, you can create device files by using the `mknod` command as follows. See the `scsi_ctl(7)` man page.

```
mkdir /dev/sctl
cd /dev/sctl

/etc/mknod cCONTROLLERtTARGETlLUN c 203 0xII TL00
```

Where:

- ◆ *CONTROLLER* is the Instance number of the controlling bus. The Instance value is displayed in `ioscan -f` output under column I of the controller entry (ext_bus in the Class column).
- ◆ *TARGET* is the SCSI ID of the robotic control.
- ◆ *LUN* is the SCSI logical unit number.
- ◆ *II* are two hexadecimal digits that identify the controlling bus interface card by its Instance number (same as controller).
- ◆ *T* is one hexadecimal digit representing the SCSI ID.
- ◆ *L* is one hexadecimal digit representing the SCSI LUN.

Using `ioscan` With `sctl` Robots

If the robotic control has its own SCSI ID, it has an entry similar to the following:

```
Class      I  H/W Path   Driver   S/W State H/W Type  Description
=====
unknown   -1  2/0/1.1.0  unknown  UNCLAIMED UNKNOWN  LAGO SYSL3-340L
```

The `Class`, `I`, and `Driver` columns may also have invalid information. In these instances the robotics are correct, but `ioscan` returns invalid information.

Examples of Creating Device Files

Example 1

In this example the robotic control for a ADIC Scalar 100 library is on a SCSI bus with a instance number of 7 (ext_bus entry, I column), SCSI ID 2 and LUN 0. The robotic control for an IBM ULT3583-TL library is on the same SCSI bus at SCSI ID 3 and LUN 0.

Use the following procedure to create the robotic device files:

1. Use the `ioscan -f` command to get information on the SCSI bus and the robotic control.

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
ext_bus	7	0/7/0/1	c720	CLAIMED	INTERFACE	SCSI C896 Fast Wide LVD
target	10	0/7/0/1.0	tgt	CLAIMED	DEVICE	
tape	65	0/7/0/1.0.0	stape	CLAIMED	DEVICE	QUANTUM SuperDLT1
target	11	0/7/0/1.1	tgt	CLAIMED	DEVICE	
tape	66	0/7/0/1.1.0	stape	CLAIMED	DEVICE	QUANTUM SuperDLT1
target	12	0/7/0/1.2	tgt	CLAIMED	DEVICE	
autoch	14	0/7/0/1.2.0	schgr	CLAIMED	DEVICE	ADIC Scalar 100
target	13	0/7/0/1.3	tgt	CLAIMED	DEVICE	
autoch	19	0/7/0/1.3.0	schgr	CLAIMED	DEVICE	IBM ULT3583-TL
target	14	0/7/0/1.4	tgt	CLAIMED	DEVICE	
tape	21	0/7/0/1.4.0	atdd	CLAIMED	DEVICE	IBM ULT3580-TD1
target	15	0/7/0/1.5	tgt	CLAIMED	DEVICE	
tape	19	0/7/0/1.5.0	atdd	CLAIMED	DEVICE	IBM ULT3580-TD1

2. The commands to create the device files follow. See the “Command Summary” on page 78 for the `mknod` command format or see the `scsi_ctl(7)` man page.

```
cd /dev/sctl
/etc/mknod c7t210 c 203 0x072000
/etc/mknod c7t310 c 203 0x073000
```

This creates the following device files, which you specify to Media Manager during configuration of the ADIC robotic control and IBM robotic control respectively:

```
/dev/sctl/c7t210
/dev/sctl/c7t310
```

Note It is important to also create the passthru driver device files for tape drives. See “Configuring Tape Drives” on page 67.

Example 2

Assume the robotic control for an Exabyte 10i tape stacker (TS8) is on a built-in SCSI bus at SCSI ID 3, LUN 0. Also assume that an `ioscan -f` verifies that the SCSI ID is 3 and shows that the Instance number for the robot’s SCSI bus is 1.

The commands to create the device file are

```
cd /dev/sctl
/etc/mknod c1t310 c 203 0x013000
```

This creates the following device file, which you specify to Media Manager:



```
/dev/sctl/c1t3l0
```

Example 3

1. Use the `ioscan -f` command to get information on the SCSI bus and the robotic control.

```
Class   I H/W Path           Driver  S/W State H/W Type  Description
=====
ext_bus 3 0/0/0.8.0.0.0       fcpmux  CLAIMED  INTERFACE HP A3308
                                FCP-SCSI MUX Interface

target  0 0/0/0.8.0.0.0.0     tgt     CLAIMED  DEVICE
tape    0 0/0/0.8.0.0.0.0     stape   CLAIMED  DEVICE    QUANTUM DLT7000

target  1 0/0/0.8.0.0.0.1     tgt     CLAIMED  DEVICE
autoch  0 0/0/0.8.0.0.0.1.0  schgr   CLAIMED  DEVICE    STK9740

target  2 0/0/0.8.0.0.0.7     tgt     CLAIMED  DEVICE
ctl     3 0/0/0.8.0.0.0.7.0  sctl    CLAIMED  DEVICE    Initiator
```

With fibre channel and SCSI muxes the hardware paths are a bit longer. If you use the bus H/W Path as a mask and apply it to the other hardware paths for devices on that bus, you are left with *SCSI ID.SCSI LUN* for the device.

This example has a bus with H/W Path of 0/0/0.8.0.0.0, which has an instance number (I column) of 3. Applying the mask shows a DLT 7000 drive at SCSI ID 0, SCSI LUN 0 and a STK 9740 robot at SCSI ID 1, SCSI LUN 0 also on this bus.

When configuring the robotic device file for the STK 9740 robot, you would use `controller=3, target=1, and lun=0`. To enable the passthru path for the Quantum DLT 7000 drive, you would use `controller=3, target=0, and lun=0`.

2. The commands to create the device file for the robotic control are as follows:

```
cd /dev/sctl
/etc/mknod c3t1l0 c 203 0x031000
```

These commands create the following device file, which you specify to Media Manager during configuration of the robotic control:

```
/dev/sctl/c3t1l0
```

3. The commands to create the passthru device file for the tape drive follow. See the “Command Summary” on page 78 for the `mknod` command format or see the `scsi_ctl(7)` man page.

```
cd /dev/sctl
/etc/mknod c3t0l0 c 203 0x030000
```

These commands create the following passthru device file.

```
/dev/sctl/c3t0l0
```

Although the passthru device file is used during NetBackup operation, it is not specified during configuration. During Media Manager tape drive configuration, the following no rewind on close device file path is used:

```
/dev/rmt/c3t0d0BESTnb
```

Configuring Tape Drives

Read the following topics if you plan to use tape drives:

Using Berkeley Style Close

The examples in this section show *Berkeley-style close* for tape drives as indicated by the letter `b` after the compression specification. It is mandatory to specify Berkeley-style close for tape devices that you configure under Media Manager.

The terms *Berkeley-style close* and *AT&T style close* refer to operations where a tape is left logically positioned after a close operation (in relation to a tape mark). One style leaves an application logically positioned before a tape mark and the other leaves it after. Applications must assume where the tape is left after a close in order to establish the correct orientation the next time they do a tape-position or read operation. Some operating systems allow tape devices to be configured with either type of close. NetBackup assumes it is using Berkeley-style close on an HP9000.

Using the Passthru Driver for Tape Drives

NetBackup and Storage Migrator can function without a passthru path to tape devices, *but* the following capabilities are not available:

- ◆ Locate-block (fast-tape) positioning
- ◆ Data protection provided by SCSI reserve/release
- ◆ Automatic configuration for tape devices
- ◆ Performance optimization for Quantum SDLT drives.

Note Passthru paths are not supported on HP-PB adapters such as HP 28696A - Wide SCSI or HP 28655A - SE SCSI.



Automatic Configuration

Because using the passthru path is so important, NetBackup will automatically create the corresponding passthru path whenever a tape drive is configured with a device file of the format: `/dev/rmt/cCONTROLLERtTARGETdUNITBESTnb`.

These paths are created in the `/dev/sctl` directory, which will also be created if it does not exist. Passthru paths will also be created automatically whenever the NetBackup device configuration wizard is run. In either case, NetBackup will not modify or delete any existing passthru paths. NetBackup assumes that any existing passthru paths were created correctly.

NetBackup does not detect the type of adapter cards installed in the system, so it will also create passthru paths for tape drives connected to adapter cards that do not support passthru. This is expected and will not cause any problems.

It is normally not necessary to manually create passthru paths for tape drives, but the steps for doing so are provided (see “Enabling Passthru Paths” on page 68).

Enabling Passthru Paths

To enable passthru paths, a device file in the directory `/dev/sctl` must exist for the tape drives. Create the device files as shown in the following example.

Note When using the `mknod` command for tape drives, *TARGET* is the SCSI ID of the tape drive *not* the SCSI ID of the robotic control.

Example:

In this example the robotic control for a ADIC Scalar 100 library is on a SCSI bus with a instance number of 7 (`ext_bus` entry, I column), SCSI ID 2 and LUN 0, and the robotic control for a IBM ULT3583-TL library is on the same SCSI bus at SCSI ID 3 and LUN 0.

The ADIC library contains 2 Quantum Super DLT drives, one with SCSI ID 0, SCSI LUN 0 and the other with SCSI ID 1, SCSI LUN 0.

The IBM library contains 2 IBM Ultrium LTO drives, one with SCSI ID 4, SCSI LUN 0 and the other with SCSI ID 5, SCSI LUN 0.

Use the following procedure to create the robotic control device files and the passthru driver tape drive device files:

1. Assume the configuration from `ioscan -f` is as follows:

```

Class      I  H/W Path      Driver  S/W State H/W Type  Description
=====
ext_bus    7  0/7/0/      c720    CLAIMED  INTERFACE SCSI  C896 Fast
    
```

						Wide LVD
target	10	0/7/0/1.0	tgt	CLAIMED	DEVICE	
tape	65	0/7/0/1.0.0	stape	CLAIMED	DEVICE	QUANTUM SuperDLT1
target	11	0/7/0/1.1	tgt	CLAIMED	DEVICE	
tape	66	0/7/0/1.1.0	stape	CLAIMED	DEVICE	QUANTUM SuperDLT1
target	12	0/7/0/1.2	tgt	CLAIMED	DEVICE	
autoch	14	0/7/0/1.2.0	schgr	CLAIMED	DEVICE	ADIC Scalar 100
target	13	0/7/0/1.3	tgt	CLAIMED	DEVICE	
autoch	19	0/7/0/1.3.0	schgr	CLAIMED	DEVICE	IBM ULT3583-TL
target	14	0/7/0/1.4	tgt	CLAIMED	DEVICE	
tape	21	0/7/0/1.4.0	atdd	CLAIMED	DEVICE	IBM ULT3580-TD1
target	15	0/7/0/1.5	tgt	CLAIMED	DEVICE	
tape	19	0/7/0/1.5.0	atdd	CLAIMED	DEVICE	IBM ULT3580-TD1

Note Use the IBM `atdd` driver when configuring IBM tape drives on HP-UX. Configure `atdd` and BEST device paths according to IBM driver documentation. Do not configure `atdd` for robotic control of IBM robots. Check the VERITAS support web site for the latest recommended `atdd` driver version from IBM.

2. The commands to create the robotic device files follow. See the “Command Summary” on page 78 for the `mkknod` command format or see the `scsi_ctl(7)` man page.

```
cd /dev/sctl
/etc/mknod c7t210 c 203 0x072000
/etc/mknod c7t310 c 203 0x073000
```

This creates the following device files, which you specify to Media Manager during configuration of the ADIC robotic control and IBM robotic control respectively:

```
/dev/sctl/c7t210
/dev/sctl/c7t310
```

3. The commands to create the passthru device files for the tape drives are as follows:

```
cd /dev/sctl
/etc/mknod c7t010 c 203 0x070000
/etc/mknod c7t110 c 203 0x071000
/etc/mknod c7t410 c 203 0x074000
/etc/mknod c7t510 c 203 0x075000
```

These commands create the following passthru device files. Although the passthru device files for tape drives are used during NetBackup operation, they are not specified during configuration.



```
/dev/sct1/c7t0l0  
/dev/sct1/c7t1l0  
/dev/sct1/c7t4l0  
/dev/sct1/c7t5l0
```

During Media Manager tape drive configuration, the following no rewind on close device files are used. See “No Rewind Device Files” on page 71 for instruction on creating no rewind device files.

```
/dev/rmt/c7t0d0BESTnb  
/dev/rmt/c7t1d0BESTnb  
/dev/rmt/c7t4d0BESTnb  
/dev/rmt/c7t5d0BESTnb
```

Fast-Tape Positioning (locate-block)

Locate-block is supported for most drive types in HP9000 for Fast/Wide GSC SCSI adapters. See the VERITAS support web site for a list of drive types that are supported.

Enabling locate-block

NetBackup and Storage Migrator use the locate-block command by default if a passthru path is configured. See “Enabling Passthru Paths” on page 68.

Disabling locate-block

To disable locate-block positioning, execute the following command:

```
touch /usr/opensv/volmgr/database/NO_LOCATEBLOCK
```

With locate-block positioning disabled, NetBackup uses the forward-space-file/record method and Storage Migrator skips file marks.

Enabling SCSI Reserve/Release

This is a NetBackup Enterprise Server topic.

The VERITAS implementation of SCSI reserve/release protects data on a tape from corruption by other applications in a shared drive (SSO) configuration.

▼ To enable SCSI reserve/release

1. Set the kernel parameter `st_at_s_enabled` to zero. Using the HP SAM utility is the easiest way to set this parameter.

Leaving this parameter set to `ONE` causes conflicts between the operating system and NetBackup or Storage Migrator's use of SCSI reserve/release commands.

2. Reboot your system.

Cautions with Using the HP-UX EMS Tape Device Monitor

This is a NetBackup Enterprise Server topic.

The Tape Device Monitor (`dm_stape`) of the Event Monitoring System (EMS) should be configured to *not* run on hosts participating in a tape SAN configuration. Part of the EMS service periodically polls the tape devices to monitor their condition. When this occurs from one server while another server is using the tape device, it may interfere with backup operations causing those operations to time out and abort.

The problem can be avoided in either of the following ways:

- ◆ If you want to completely disable EMS you can run the `/etc/opt/resmon/sbin/monconfig` tool and select (D)isable Monitoring.
- ◆ If the `POLL_INTERVAL` value in the `/var/stm/config/tools/monitor/dm_stape.cfg` file is set to zero, EMS will still run, but it will not log any events or poll the devices (that is, it will not send any SCSI commands).

No Rewind Device Files

When adding tape drives to the Media Manager configuration, you need only specify a no rewind on close device file path. These device files are found in the `/dev/rmt` directory and have the following format:

```
/dev/rmt/cCONTROLLERtTARGETdUNITBESTnb
```

Where:

- ◆ `CONTROLLER` is the Instance number of the controlling bus. The Instance value is displayed in `ioscan -f` output under the column I of the controllers entry (`ext_bus` in the Class column).
- ◆ `TARGET` is the SCSI ID of the tape drive.
- ◆ `UNIT` is the SCSI logical unit number (LUN) of the drive. This is usually 0.



If the desired tape device file does not exist, you can create device files through `sam`, the system administration manager, or with the following `mksf (1M)` command:

```
mksf -C tape -H H/W_Path -b BEST -u -n
```

Where *H/W_Path* is the hardware path of the tape drive as specified by `ioscan`.

No Rewind Device File Example

Assume that the desired 4-mm DDS2 compression tape drive is at SCSI ID 2 and `ioscan -f` shows the following:

```
Class   I  H/W Path Driver  S/W State  H/W Type      Description
=====
bc      0                root  CLAIMED    BUS_NEXUS
bc      1  56          bc      CLAIMED    BUS_NEXUS      Bus Converter
ext_bus 0  56/52       scsi1  CLAIMED    INTERFACE      HP 28655A-SCSI
                                                Interface
target  0  56/52.2    target CLAIMED    DEVICE
tape    0  56/52.2.0  tape2  CLAIMED    DEVICE          HP   HPC1533A
.
.
.
```

The Instance number for the controlling bus is 0 and the H/W path for the tape drive is 56/52.2.0.

The command to create the device file for the drive follows:

```
mksf -C tape -H 56/52.2.0 -b BEST -u -n
```

This creates the following device file, which you specify to Media Manager:

```
/dev/rmt/c0t2d0BESTnb
```

Switch Settings for HP C1533A 4-mm DAT Drives

If you have standalone or robotic 4-mm drives, model HP C1533A, you may have to change the switch settings on the bottom of the drive. This drive comes in the HP C1560B (48AL) DAT Autoloader.

If the C1533A drive or HP C1560B autoloader was purchased from HP, the default switch settings should work. These default settings as documented by Hewlett Packard, are as follows. In the table, 1 = On and 0 = Off

Switch	Setting
1	1
2	1
3	0
4	1
5	1
6	1
7	1
8	1

However, if the drive or autoloader was purchased from another vendor and that vendor changed the switch settings, you will have to set the switches as shown.

You may also have to make this change to HP C1533A drives in non-HP 4-mm robots.

Switch Settings for Sony AIT Drives

Sony AIT drives have 8 dip switches located on the bottom of the drive. It is important to set these switches correctly, even if you have to take the drives out of robots to check them.

Some robots (for example, Spectra Logic) provide a way to set the drive switches from the robot itself. For Spectra Logic robots, it doesn't matter what the drive switches are. The Treefrog (215) robot has a dial in the back to set the appropriate OS. The Bullfrog (10000) robot has a means of setting the OS through a touch screen.

Depending on the version of the AIT drive, drives are shipped from Sony with one of the following two settings:

Note Robot vendors and hardware resellers may change the default drive switch settings.



In the following tables, 1 = On and 0 = Off.

Switch	Setting
1	0
2	0
3	0
4	0
5	0
6	0
7	1
8	1

Switch	Setting
1	0
2	0
3	0
4	0
5	1
6	0
7	1
8	0

Switches 1 thru 4 are for setting the OS type. Switches 5 thru 8 can be usually be left set at the default position.



Sony documentation (*UNIX Configuration Guide, V2.xx*) states that switches 1 thru 4 can be left set at the default position. However, the drive firmware must be at (or above) one of the following levels:

- ◆ 0404 (SDX-300C)
- ◆ 0700 (SDX-400C)
- ◆ 0107 (SDX-500C)

Configuring Optical Disk Drives

When adding optical disk drives to the Media Manager configuration, you need only specify a character device path. Optical disk character device files are found in the `/dev/rdisk` directory and have the following format:

```
/dev/rdisk/cBItTARGETd0
```

Where:

- ◆ *BI* is the bus Instance number of the controlling bus. The Instance value is displayed in `ioscan` output under the column `I` of the `ext_bus` entries.
- ◆ *TARGET* is the SCSI ID of the drive. This ID is in the third position of the H/W Path as displayed by `ioscan`. For example, in `56/52.5.0` the SCSI ID is 5.

You can determine the bus Instance using `ioscan -C ext_bus -f`. The output is similar to the following example:

```
Class   I  H/W Path Driver S/W State H/W Type   Description
=====
ext_bus 0  56/52      scsi1  CLAIMED  INTERFACE  HP 28655A- SCSI
                                           Interface
ext_bus 1  56/53      lpr2   CLAIMED  INTERFACE  HP 28655A- Parallel
                                           Interface
```

You can determine the configured drives using `ioscan -C disk -f`. The output is

```
Class   I  H/W Path  Driver S/W State H/W Type   Description
=====
disk    1  56/52.1.0 disc3  CLAIMED  DEVICE   HP C1716T
disk    2  56/52.2.0 disc3  CLAIMED  DEVICE   HP C1716T
disk    3  56/52.5.0 disc3  CLAIMED  DEVICE   HP C2490AM
disk    4  56/52.6.0 disc3  CLAIMED  DEVICE   HP C2490AM
```



Example of an Optical Disk Device File

Assume you are using the two optical disk drives at SCSI IDs 1 and 2 as shown in the previous `disk ioscan` example. These drives are on bus 56/52, which as shown in the previous `ext_bus ioscan`, is bus Instance 0.

The character device file paths that you specify to Media Manager follow:

For target 1:

```
/dev/rdisk/c0t1d0
```

For target 2:

```
/dev/rdisk/c0t2d0
```

Using the Configure Storage Devices Wizard with Optical Disk Drives

The Media Manager device configuration wizard can discover and automatically configure optical disk drives that have a `/dev/sctl` SCSI passthru device file.

Note Optical disk drives are not supported in an SSO configuration.

▼ To use the device configuration wizard

1. Create the passthru device files.

See “Configuring Device Files for the `sctl` Passthru Driver” on page 63 for instructions.

2. Start the wizard from the list of wizards displayed in the right pane of the **Media and Device Management** window of the NetBackup Administration Console.

Select **Configure Storage Devices**.

See your NetBackup Media Manager system administrator’s guide for more information on using this wizard.

SSO Configurations With More Than 16 Tape Drives

This is a NetBackup Enterprise Server topic.

When the number of tape devices that are configured approaches 16, changes in tape device status may not be visible to all media servers in a Shared Storage Option (SSO) configuration. This is because the default maximum size of IPC message queues may not be large enough.

In these cases, communication between the `rdevmi` process on the scan hosts and the `oprnd` processes on the media servers can be interrupted when the number of messages sent exceeds the maximum size of the queue.

VERITAS recommends modifying the HP-UX kernel parameters using the `/usr/sbin/sam` utility. See the appropriate HP-UX documentation for information on command-line utilities.

▼ To modify the kernel

These statements increase the maximum number of messages that can be created, and the number of bytes per queue. A reboot is necessary for the changes to take effect.

1. Select **SAM Kernel Configuration** from the list.
2. Select **SAM Configurable Parameters** from the list.
3. Select **msg_mnb** from the list.
4. Select **Actions** from the menu bar.
5. Select **Modify Configurable Parameter** from the menu.
6. Tab to **Formula/Value** and enter 65536
7. Tab to **OK** to save the value and return.
8. Repeat step 3 thru step 7 and change the value of **msg_tql** to 512.
9. Select **Actions** from the menu bar.
10. Select **Process New Kernel** from the menu to process the kernel modifications and exit the utility.

Be aware that increasing the maximum size of the IPC message queue may increase the amount of memory allocated to other IPC message queues on the system. The impact of these changes should be fully assessed before they are implemented.



Command Summary

The following is a summary of commands that may be useful when configuring devices. See the procedures in this chapter for examples of usage.

```
ioscan -C TYPE -f
```

Shows information about the physical interfaces. Numeric information is displayed in decimal. *TYPE* is the type of interface as follows:

spt specifies SCSI robotic controls.

tape specifies tape drives.

disk specifies optical disks.

ext_bus specifies SCSI controllers.

```
mknod /dev/spt/Name c Major 0xIITL00
```

Creates device files for SCSI robotic or tape drive controls.

Name is the device name as defined in the format: *cCONTROLLERtTARGETIUNIT*

Major is the character major number (from the *lsdev* command).

II are the two hexadecimal digits identifying the controlling bus interface card by its Instance number. The Instance value is displayed in the *ioscan* output under the I column of the proper *ext_bus* entry.

T is one hexadecimal digit for the SCSI ID of the robotic control.

L is one hexadecimal digit for the SCSI LUN of the robotic control.

```
lsdev -d spt
```

Displays information about the SCSI robotic control drivers.

```
mksf -C tape -H H/W_Path -b BEST -u -n
```

Creates device files for tape drives. Where *H/W_Path* is the hardware path of the tape drive, as specified by *ioscan*.

This chapter explains how to configure devices for use with Media Manager on a HP Alpha platform. You configure drives and robots using one of the available Media Manager administrative interfaces.

The main topics included in this chapter are

- ◆ Before You Start
- ◆ Configuring Robotic Controls
- ◆ Configuring Tape Drives
- ◆ SSO Configurations With More Than 16 Tape Drives
- ◆ Command Summary



Before You Start

If You Are Using NetBackup Server

Portions of this chapter include configuration topics and examples for configurations and options that are not supported in NetBackup Server. It is important to refer to the VERITAS support web site to determine support for NetBackup Server, before using this chapter.

Topics Not Applicable to NetBackup Server

“SSO Configurations With More Than 16 Tape Drives” on page 89.

Configuring Robotic Controls

Robots are controlled through a SCSI or a network connection. Robot control configuration is explained as follows:

- ◆ SCSI robotic control is covered in the following section.
- ◆ Configuration for network controlled robotic libraries is discussed in the appendices of the Media Manager system administrator’s guide.

Configuring SCSI Robotic Controls

Read this topic if you plan to use a robotic storage device that is controlled through a SCSI robotic connection. Information on supported SCSI robots (vendor models) can be found on the VERITAS support web site.

When communicating with SCSI-controlled robotic peripherals, Media Manager robotic software utilizes the SCSI passthru capability of the media changer driver. The TRU64 UNIX kernel does not have to be changed to use this driver since this driver is part of basic TRU64 UNIX.

Creating SCSI Robotic Control Device Files

Media Manager requires that device files from the `/dev/changer` directory are used to configure SCSI robotic control. These files are created by the operating system at boot time.

To display devices that are available on the system, use the following command:

```
# hwmgr -view devices
```



HWID: Device Name	Mfg	Model	Location
3: /dev/kevm			
34: /dev/disk/floppy0c		3.5in floppy	fdi0-unit-0
55: /dev/disk/cdrom0c	COMPAQ	CDR-8435	bus-1-targ-0-lun-0
56: /dev/disk/dsk0c	DEC	RZ2DD-KS (C)	DEC bus-2-targ-0-lun-0
57: /dev/disk/dsk1c	DEC	RZ2DD-KS (C)	DEC bus-2-targ-1-lun-0
58: /dev/disk/dsk2c	DEC	RZ2DD-KS (C)	DEC bus-2-targ-2-lun-0
70: /dev/changer/mc0		C6280-4000	bus-2-targ-3-lun-0
71: /dev/ntape/tape6	Quantum	DLT4000	bus-2-targ-4-lun-0

Example of SCSI Robotic Control Device File

The previous output from the `hwmgr` command shows an HP C6280 robot connected on bus 2 at SCSI ID 3, lun 0. The corresponding device file is `/dev/changer/mc0`. This file should be used to configure the device in Media Manager.

Configuring Tape Drives

Read the following topics if you plan to use tape drives:

Fast-Tape Positioning (`locate-block`)

For most drive types, Media Manager supports the SCSI `locate-block` command for positioning a tape to a specific block.

NetBackup uses the `locate-block` command by default unless you disable it by executing the following:

```
touch /usr/opensv/volmgr/database/NO_LOCATEBLOCK
```

With `locate-block` positioning disabled, NetBackup uses the `forward-space-file/record` method of tape positioning.

Adding Standard Tape Drives

Media Manager requires that no rewind on close device files are used to configure tape drives. These files are created by the operating system at boot time. The device files are located in the `/dev/ntape` directory and have the following format:

```
/dev/ntape/tapeID_dDENSITY
```



Where:

- ◆ *ID* is the identification number of the tape device.
- ◆ Values for *DENSITY* can be 0 - 7. Typically, 1 (for high density) is used.

To display devices that are available on the system, use the following command:

```
# hwmgr -view devices
```

HWID:	Device Name	Mfg	Model	Location
3:	/dev/kevm			
34:	/dev/disk/floppy0c		3.5in floppy	fdi0-unit-0
55:	/dev/disk/cdrom0c	COMPAQ	CDR-8435	bus-1-targ-0-lun-0
56:	/dev/disk/dsk0c	DEC	RZ2DD-KS (C)	DEC bus-2-targ-0-lun-0
57:	/dev/disk/dsk1c	DEC	RZ2DD-KS (C)	DEC bus-2-targ-1-lun-0
58:	/dev/disk/dsk2c	DEC	RZ2DD-KS (C)	DEC bus-2-targ-2-lun-0
70:	/dev/changer/mc0		C6280-4000	bus-2-targ-3-lun-0
71:	/dev/ntape/tape6	Quantum	DLT4000	bus-2-targ-4-lun-0

No Rewind Device File Example

The previous output from the `hwmgr` command shows a Quantum DLT 4000 tape drive connected on bus 2 at SCSI ID 4, lun 0. The corresponding device file is `/dev/ntape/tape6`.

After adding a density suffix of `_d1` (for high density) the device file is `/dev/ntape/tape6_d1`. This file should be used to configure the device in Media Manager.

Adding Nonstandard Tape Drives

This topic applies to the following drive types:

- ◆ HP LTO
- ◆ Seagate LTO
- ◆ STK 9840

Some types of tape drives require changes to the kernel before you can use them on Tru64.

▼ To change the kernel

Refer to the following man pages for more information on Dynamic Device Recognition (DDR):

- ◆ `ddr.dbase(4)`
 - ◆ `ddr_config(8)`
1. Add the appropriate device-specific entries to the `/etc/ddr.dbase` file (see “Device-Specific Entry for HP Ultrium 230e” on page 83 and the other entries that follow).
 2. Compile the `/etc/ddr.dbase` file using the `ddr_config` (Dynamic Device Recognition) utility to create the `ddr.db` file.

Device-Specific Entry for HP Ultrium 230e

```
SCSIDEVICE
Type = tape
Name = "HP          " "Ultrium"
```

```
PARAMETERS:
MaxTransferSize = 0xffffffff
ReadyTimeSeconds = 0x2d
InquiryLength = 0x20
```

```
DENSITY:
DensityNumber = 0
OneFileMarkOnClose = yes
DensityCode = 0x00
Blocking = 0
CompressionCode = 0x0
Buffered = 0x1
```

```
DENSITY:
DensityNumber = 1
OneFileMarkOnClose = yes
DensityCode = 0x00
Blocking = 0
CompressionCode = 0x1
Buffered = 0x1
```

Device-Specific Entry for Seagate Viper 200 - LTO

```
SCSIDEVICE
Type = tape
Name = "SEAGATE" "ULTRIUM"
```

```
PARAMETERS:
```



```
TypeSubClass      = tk
TagQueueDepth     = 0
MaxTransferSize   = 0x0fffffff # (16MB - 1)
ReadyTimeSeconds  = 180 # seconds
CMD_PreventAllow  = supported
CMD_ExtReserveRelease = supported
BlockSize         = 0
PwrMgmt_Capable   = false
```

DENSITY:

```
DensityNumber     = 0,2,3,4,5,6,7
DensityCode       = default
CompressionCode   = 0x0
Buffered          = 0x1
```

DENSITY:

```
DensityNumber     = 1
DensityCode       = default
CompressionCode   = 0x1
Buffered          = 0x1
```

Device-Specific Entry for STK 9840

SCSIDEVICE

```
Type = tape
Stype = 2
Name = "STK" "9840"
```

PARAMETERS:

```
TypeSubClass      = 3480
BlockSize         = 0
MaxTransferSize   = 0x40000 # 256k
SyncTransfers     = enabled
WideTransfers     = enabled
Disconnects       = enabled
CmdReordering     = disabled
TaggedQueuing     = disabled
TagQueueDepth     = 0
WCE_Capable       = false
PwrMgmt_Capable   = false
LongTimeoutRetry  = disabled
ReadyTimeSeconds  = 240
DisperseQueue     = false
CMD_PreventAllow  = supported
CMD_ExtReserveRelease = supported
```

```

DENSITY:
#
# /dev/tape/tapeX_d0, _d4
#
DensityNumber = 0,4
DensityCode = 0x42
CompressionCode = 0
Buffered = 0x1
#
DENSITY:
#
# /dev/tape/tapeX_d1, _d5
#
DensityNumber = 1,5
DensityCode = 0x42
CompressionCode = 1
#
DENSITY:
#
# /dev/tape/tapeX_d2, _d6
#
DensityNumber = 2,6
DensityCode = 0x43
CompressionCode = 0
Buffered = 0x1

```

Switch Settings for HP C1533A 4mm DAT Drives

If you have standalone or robotic 4MM drives that are model HP C1533A, you may have to change the switch settings on the bottom of the drive. This drive comes in the HP C1560B (48AL) DAT Autoloader.

If the drive or autoloader was purchased from HP, the default switch settings should work. However, if the device was purchased from another vendor, that vendor may have changed the default switch settings. The same thing may apply to other vendor's 4MM robots if they contain HP C1533A drives.

If this situation exists, set the switch settings as shown in the following table (the documented default). In the table, 1 = On and 0 = Off.

Switch	Setting
1	1
2	1



Switch	Setting
3	0
4	1
5	1
6	1
7	1
8	1

Switch Settings for Sony AIT Drives

Sony AIT drives have 8 dip switches located on the bottom of the drive. It is important to set these switches correctly, even if it means taking the drives out of robots and checking them.

Some robots (for example, Spectra Logic) provide a way to set the drive switches from the robot itself. For Spectra Logic robots, it doesn't matter what the drive switches are. The Treefrog (215) robot has a dial in the back to set the appropriate OS. The Bullfrog (10000) robot has a means of setting the OS through a touch screen.

Depending on the version of the AIT drive, drives are shipped from Sony with one of two settings as shown in the following tables (in the tables, 1 = On and 0 = Off).

Note Robot vendors and hardware resellers may change the default drive switch settings.

Switch	Setting
1	0
2	0
3	0
4	0
5	0
6	0
7	1
8	1

Switch	Setting
1	0
2	0
3	0
4	0
5	1
6	0
7	1
8	0

Switches 1 thru 4 are for setting the OS type. Switches 5 thru 8 can be usually be left set at the default position.



Sony documentation (*UNIX Configuration Guide, V2.xx*) states that switches 1 thru 4 can be left set at the default position. However, the drive firmware must be at (or above) one of the following levels:

- ◆ 0404 (SDX-300C)
- ◆ 0700 (SDX-400C)
- ◆ 0107 (SDX-500C)

If the drive has older firmware, update the firmware or use the following settings for switches 1 thru 4:

Switch	Setting
1	0
2	0
3	1
4	1

SSO Configurations With More Than 16 Tape Drives

This is a NetBackup Enterprise Server topic.

When the number of tape devices that are configured approaches 16, changes in tape device status may not be visible to all media servers in a Shared Storage Option (SSO) configuration. This is because the default maximum size of IPC message queues may not be large enough.

In these cases, communication between the `rdevmi` process on the scan hosts and the `opr` processes on the media servers can be interrupted when the number of messages sent exceeds the maximum size of the queue.

VERITAS recommends modifying the Tru64 kernel parameters using the `/usr/bin/X11/dxkerneltuner` utility. See the appropriate Tru64 documentation for information on command-line utilities.

▼ To modify the kernel

These statements increase the maximum number of messages that can be created, and the number of bytes per queue. A reboot is necessary for the changes to take effect.

1. Select **IPC** from the list and click **Select Subsystem**.
2. In the **Boot Time Value** column, change the following parameter values:

```
msg_mnb 65536
msg_tql 512
```

3. Save the changes and exit the utility.

Be aware that increasing the maximum size of the IPC message queue may increase the amount of memory allocated to other IPC message queues on the system. The impact of these changes should be fully assessed before they are implemented.



Command Summary

The following is a summary of commands that may be useful when configuring devices. See the procedures in this chapter for usage examples.

```
hwmgr -view devices
```

Displays all devices on the system.



This chapter provides information for configuring devices for use with Media Manager on a SGI platform running IRIX.

You configure drives and robots for NetBackup using one of the available Media Manager administrative interfaces.

The major topics included are as follows:

- ◆ Before You Start
- ◆ Using SCIP Controllers
- ◆ Using the mediad Command
- ◆ Configuring Robotic Controls
- ◆ Configuring Tape Drives Using SGI APD Software
- ◆ Configuring Tape Drives (IRIX 6.5.15 Only)
- ◆ SSO Configurations With More Than 16 Tape Drives.
- ◆ Configuring Optical Disk Drives
- ◆ Command Summary



Before You Start

Observe the following points when performing the configurations described in this chapter:

- ◆ When configuring tape drives, two different methods are used depending upon the level of the IRIX operating system being run, as follows:
 - ◆ “Configuring Tape Drives Using SGI APD Software” on page 95 applies to all supported IRIX releases *after* version 6.5.15.
 - ◆ “Configuring Tape Drives (IRIX 6.5.15 Only)” on page 96 applies only to the IRIX 6.5.15 release.
- ◆ The SCSI ID number *must be* unique for the SCSI bus it is on, and *must be* any value other than zero.
- ◆ Typical device path names used when configuring drives and robots are described. Instructions for changing and rebuilding the kernel are also included. Depending on the type and number of devices you are adding, you may have to enter information in kernel source files and then reconfigure the kernel.
- ◆ The SGI IRIX version of Media Manager has been tested using SCSI peripherals (tape drives, optical disk drives, and robotic control) attached to the built-in SCSI controllers, sometimes referred to as on-board SCSI or Integral SCSI controllers.

When referring to these SCSI controllers, this guide uses the term *integral SCSI controller*. Communication with tape drives attached to integral SCSI controllers is done through the `tps (7M)`, `tpsc (7M)`, and `ts (7M)` tape drivers. Communication with disk drives (including optical disk drives) attached to integral SCSI controllers is done through the `dks (7M)` disk driver.

If You Are Using NetBackup Server

Portions of this chapter include configuration topics and examples for configurations and options that are not supported in NetBackup Server. It is important to refer to the VERITAS support web site to determine support for NetBackup Server, before using this chapter.

Topics Not Applicable to NetBackup Server

“SSO Configurations With More Than 16 Tape Drives” on page 107.



Using SCIP Controllers

If your IRIX system has SCIP fast-wide-differential controllers, a change to the `/var/sysgen/master.d/scip` file may be required to avoid SCSI timeouts.

You should change the following line:

```
uint                scip_mintimeout = 0
```

To the following:

```
uint                scip_mintimeout = 180
```

This value was tested with a Quantum DLT4700 and corrected driver errors. In general, it is better to try a peripheral first without modifying this file. If errors occur, then change the timeout and retry. You may have to contact SGI for further information.

After making this change, you must generate a new kernel and reboot the system as follows:

1. Run the following kernel auto-configuration script:

```
/etc/autoconfig
```

2. Reboot the system to utilize the newly built kernel.

Using the mediad Command

Do *not* use the IRIX `mediad` command to monitor devices configured under Media Manager. If you do, Media Manager will not be able to access the devices and you will see a message similar to the following in the system log:

```
Apr 12 10:30:55 3D:boris mediad: Could not access
device /dev/rmt/tps0d4nr, Device busy
```

If you see this type of message and you are using `mediad`, then disable `mediad` as described in the `mediad(1M)` man page.

For example, assume you encounter this problem with a tape device whose device file is `/dev/rmt/tps0d4`. Instruct `mediad` to not monitor this tape device by editing the `/etc/config/mediad.config` file. `mediad` monitors this file so your change should be immediate.

In this example, you would add the following line to `mediad.config`:

```
ignore device /dev/rmt/tps0d4
```



Configuring Robotic Controls

Robots are controlled through a SCSI or a network connection. Robot control configuration is explained as follows:

- ◆ SCSI control is covered in the following section.
- ◆ Configuration for network controlled robotic libraries is explained in the appendices of the Media Manager system administrator's guides.

Configuring SCSI Robotic Controls

Read this topic if you plan to use a robotic device that is controlled through a SCSI robotic connection. Information on supported SCSI robots (vendor models) can be found on the VERITAS support web site.

When communicating with SCSI-controlled robotic peripherals on an SGI platform, Media Manager robotic software utilizes `ds (7M)`, the generic (user mode) SCSI driver. Since this driver is part of basic IRIX, you do not have to reconfigure the kernel and reboot the system to use this driver.

Examples of SCSI Robotic Control Device Files

Note Note that the second-to-last character in the following example paths is the letter `l`, rather than the number `1`, and represents (l)ogical unit.

Example 1

If the robotics control is not for a DLT2700, DLT4700, HP C1560B, or other LUN 1 peripheral and is on SCSI bus (adapter) 0 at SCSI ID 5, the device file you specify is

```
/dev/scsi/sc0d5l0
```

Example 2

If the robotics control is not for a DLT2700, DLT4700, HP C1560B, or other LUN 1 peripheral and is on SCSI bus (adapter) 1 at SCSI ID 3, the device file you specify is

```
/dev/scsi/sc1d3l0
```

Example 3

If a DLT2700, DLT4700, HP C1560B, or other LUN 1 peripheral robotics control is on SCSI bus (adapter) 1 at SCSI ID 4 with logical unit number 1, the device file you specify is

```
/dev/scsi/sc1d411
```

Configuring Tape Drives Using SGI APD Software

This topic applies to all supported IRIX versions after version 6.5.15.

Beginning with the 6.5.16 release of IRIX, the SGI Asynchronous Personality Daemon (APD) and device driver license enablers are required to configure new tape devices with IRIX. The APD software will make the appropriate changes needed to the IRIX operating system. The following table shows SGI APD releases and the tape devices that are supported by each:

APD Release	Release Date	Release Contents (Tape Devices Supported)
APD-2.1	March 2002	StorageTek T9840B, Seagate LTO gen-1 SCSI, and Quantum SDLT 200 SCSI
APD-2.2	July 2002	Includes all of release 2.1 plus: IBM LTO gen-1 FC and IBM LTO gen-1 SCSI
APD-2.3	September 2002	includes all of releases 2.1 and 2.2 plus: IBM 3590F and SONY AIT-3
APD-2.4	November 2002	Includes all of releases 2.1, 2.2, and 2.3 plus: StorageTek T9940B
APD-2.5	February 2003	Includes all of releases 2.1, 2.2, 2.3, and 2.4 plus: Quantum SDLT 320 SCSI
APD-2.6	July 2003	Includes all of releases 2.1, 2.2, 2.3, 2.4, and 2.5 plus: IBM LTO gen-2 SCSI, IBM LTO gen-2 FC, and HP LTO gen-2 SCSI

The APD software and the correct device driver license enablers are available from SGI. When you receive the APD release package, you get documentation that will guide you through the license enabler process. This process will require you to enter the SGI licensing domain where your device driver license will be activated.

The license enablers are structured using the following two models:



- ◆ One model enables you to use the license on up to 10 SGI IRIX nodes, supporting up to 20 tape drives.
- ◆ One model enables you to use the license on up to 20 SGI IRIX nodes, supporting up to 100 tape drives.

For the latest information on APD software visit the SGI web site: sgi.com.

Configuring Tape Drives (IRIX 6.5.15 Only)

The following topics in this section apply only to IRIX version 6.5.15.

Fast-Tape Positioning (locate-block)

For most drive types, Media Manager supports the SCSI `locate-block` command for positioning a tape to a specific block. This improves tape-positioning significantly over the alternative method.

NetBackup and Storage Migrator use the `locate-block` command by default unless you disable the command by executing the following:

```
touch /usr/opensv/volmgr/database/NO_LOCATEBLOCK
```

With `locate-block` positioning disabled, NetBackup uses the `forward-space-file/record` method and Storage Migrator skips file marks.

No Rewind Device Files

When adding tape drives to a Media Manager configuration, you need only specify a no rewind on close device path. In a typical configuration, most of the desired tape device files exist and you just have to locate them in the `/dev` directory.

No rewind on close device files that connect to the integral SCSI controllers have the following format:

```
/dev/rmt/tpsCONTROLLERdTARGEThrvc
```

Where:

- ◆ `CONTROLLER` is the SCSI bus (adapter) number.
- ◆ `TARGET` is the SCSI ID.
- ◆ The `v` specifies a variable mode device.
- ◆ The `c` specifies tape compression.

Some device types (like Exabyte) also have suffixes on device files that designate their particular drive type. For example

```
/dev/rmt/tpsCONTROLLERdTARGEThrv.8500c      (EXB8500C)
```

Examples of No Rewind Device Files

Example 1

If the desired HP 4-mm (DAT) drive is on SCSI bus 1 at SCSI ID 4, specify the following device path for that drive:

```
/dev/rmt/tps1d4nrvc
```

Example 2

If the desired Exabyte 8500C or 8505 tape drive is on SCSI bus 0 at SCSI ID 3, specify the following device path for that drive:

```
/dev/rmt/tps0d3nrvc.8500c
```

Example 3

If the desired DLT2000 or DLT4000 tape drive is on SCSI bus 0 at SCSI ID 5, specify the following device path for the drive:

```
/dev/rmt/tps0d5nrvc
```

Example 4

If the desired DLT7000 tape drive is on SCSI bus 0 at SCSI ID 5, specify the following device path for the drive:

```
/dev/rmt/tps0d5nrvc.7000c
```

Example 5

If the desired Exabyte 8900 (Mammoth) is on SCSI bus 1 at SCSI ID 5, specify the following device file path for the drive:

```
/dev/rmt/tps1d5nrvc
```

Since this drive writes in only one format, you can ignore the other device files that are created for this drive.



Configuring Nonstandard Tape Drives

For the IRIX system to recognize these drives, specific entries are needed in the kernel. See “Changing the /var/sysgen/master.d/scsi File” on page 105 for instructions on adding these entries.

Adding HP 4-mm DAT Drives and HP C1560B DAT Autoloaders

Ensure that the hardware switch settings on HP35480A 4-mm (DAT) drives are as shown in the following tables (in the tables, 1 = On and 0 = Off).

Note Other combinations may work, but these are the settings that were functional during testing by VERITAS with an HP35480A drive and HP C1560B Autoloader.

Switch	Setting
1	1
2	1
3	1
4	1
5	1
6	1
7	0
8	0

Ensure that the hardware (tape drive) switch settings on the HP C1533A 4-mm (DAT) drives are as follows:

Switch	Setting
1	1
2	1
3	0



Switch	Setting
4	1
5	1
6	1
7	0
8	0

Adding DAT drives (except the HP C1560B DAT Autoloader)

```

/* HP DAT drives. Any product number that starts with HP354.*/
{ DATTAPE, TPDAT, 2, 5, "HP", "HP354", 0, 0, {0, 0, 0, 0},
MTCAN_BSF|MTCAN_BSR|MTCAN_APPEND|MTCAN_SETMK|MTCAN_PART|MTCAN_PREV|
MTCAN_SYNC|MTCAN_SPEOD|MTCAN_CHKRDY|MTCAN_VAR|MTCAN_SETSZ|
MTCAN_SILI|MTCAN_SEEK|MTCAN_CHTYPEANY,
/* minimum delay on i/o is 4 minutes, because when a retry is
* performed, the drive retries a number of times, and then
* rewinds to BOT, repositions, and tries again. */
40, 4*60, 4*60, 5*60, 512, 128*512, 0, (u_char*)0, 3 * 3600,
(0), 0, 0, 0,
},

```

Adding the HP C1560B DAT Autoloader

```

/* HP DAT drives. Any product number that starts with HP1533. */
{ DATTAPE, TPDAT, 2, 5, "HP", "C1533", 0, 0, {0, 0, 0, 0},
MTCAN_BSF|MTCAN_BSR|MTCAN_APPEND|MTCAN_SETMK|MTCAN_PART|MTCAN_PREV|
MTCAN_SYNC|MTCAN_SPEOD|MTCAN_CHKRDY|MTCAN_VAR|MTCAN_SETSZ|
MTCAN_SILI|MTCAN_SEEK|MTCAN_CHTYPEANY,
/* minimum delay on i/o is 4 minutes, because when a retry is
* performed, the drive retries a number of times, and then
* rewinds to BOT, repositions, and tries again. */
40, 4*60, 4*60, 5*60, 512, 128*512, 0, (u_char*)0, 3 * 3600,
(0), 0, 0, 0,
},

```



Adding Sony DTF Drives

For the IRIX system to recognize these drives, the following specific entries are needed in the kernel.

```
/* SONY GY-2120 drive */
{ SONYGY, TPGY2120, 4, 7, "SONY", "GY-2120", 0, 0, {0, 0, 0, 0},
MTCAN_BSF | MTCAN_BSR | MTCANT_RET | MTCAN_CHKRDY | MTCAN_PREV |
MTCAN_SEEK | MTCAN_APPEND | MTCAN_SILI | MTCAN_VAR | MTCAN_SETSZ |
MTCAN_CHTYPEANY | MTCAN_COMPRESS,
20, 100*60, 10*60, 9*60, 9*60, 16384, 256*1024,
tpsc_default_dens_count, tpsc_default_hwg_dens_names,
tpsc_default_alias_dens_names,
{0}, 0, 0, 0,
0, (u_char *)0
},

/* SONY GY-8240 drive */
{ SONYGY, TPGY2120, 4, 7, "SONY", "GY-8240", 0, 0, {0, 0, 0, 0},
MTCAN_BSF|MTCAN_BSR|MTCANT_RET|MTCAN_CHKRDY|MTCAN_PREV|
MTCAN_SEEK|MTCAN_APPEND|MTCAN_SILI|MTCAN_VAR|MTCAN_SETSZ|
MTCAN_CHTYPEANY|MTCAN_COMPRESS,
20, 100*60, 10*60, 9*60, 9*60, 16384, 256*1024,
tpsc_default_dens_count, tpsc_default_hwg_dens_names,
tpsc_default_alias_dens_names,
{0}, 0, 0, 0, 0, (u_char *)0
},
```

Adding Sony AIT-2 Drives

For the IRIX system to recognize these drives, the following specific entry is needed in the kernel.

```
/* SONY AIT-2 drive */
{ SONYAIT, TP8MM_AIT, 4, 8, "SONY", "SDX-500C" /*AIT2*/, 0, 0, {0},
MTCAN_BSF|MTCAN_BSR|MTCAN_APPEND|MTCAN_SETMK|MTCAN_PART|
MTCAN_PREV|MTCAN_SYNC|MTCAN_SPEOD|MTCAN_CHKRDY|MTCAN_VAR|
MTCAN_SETSZ|MTCANT_IMM|MTCAN_SILI|MTCAN_SEEK|MTCAN_CHTYPEANY
|MTCAN_COMPRESS,
40, 4*60, 4*60, 5*60, 3*3600, 512, 512*512,
tpsc_default_dens_count, tpsc_default_hwg_dens_names,
tpsc_default_alias_dens_names,
{0}, 0, 0, 0, 0, (u_char *)0
},
```



Checking Switch Settings

Sony AIT drives have 8 dip switches located on the bottom of the drive. It is important to set these switches correctly, even if it means taking the drives out of robots and checking them.

Some robots (for example, Spectra Logic) provide a way to set the drive switches from the robot itself. For Spectra Logic robots, it doesn't matter what the drive switches are. The Treefrog (215) robot has a dial in the back to set the appropriate OS. The Bullfrog (10000) robot has a means of setting the OS through a touch screen.

Depending on the version of the AIT drive, drives are shipped from Sony with one of the settings shown in the following tables (in the tables, 1 = On and 0 = Off).

Note Robot vendors and hardware resellers may change the default drive switch settings.

Switch	Setting
1	0
2	0
3	0
4	0
5	0
6	0
7	1
8	1

Switch	Setting
1	0
2	0



Switch	Setting
3	0
4	0
5	1
6	0
7	1
8	0

Switches 1 thru 4 are for setting the OS type. Switches 5 thru 8 can be usually be left set at the default position.

Sony documentation (*UNIX Configuration Guide, V2.xx*) states that switches 1 thru 4 can be left set at the default position. However, the drive firmware must be at (or above) one of the following levels:

- ◆ 0700 (SDX-400C)
- ◆ 0107 (SDX-500C)

Use the following settings for switches 1 thru 4, if either of the following is true:

- ◆ The drive has older firmware and you choose not to update the firmware.
- ◆ The drive is a SDX-300C drive.

Switch	Setting
1	1
2	1
3	0
4	0

Adding Quantum DLT 7000 Drives

For the IRIX system to recognize these drives, specific entries are needed in the kernel.



```

/* DEC DLT7000 drive */
{ DECDLT, TPDLT, 7, 7, "QUANTUM", "DLT7000", 0, 0,
  {0, 0, 0, 0}, MTCAN_BSF|MTCAN_BSR|MTCAN_APPEND|MTCAN_LEOD|
MTCAN_CHKRDY|MTCAN_VAR|MTCAN_SETSZ|MTCAN_SILI|MTCAN_SEEK|
MTCAN_SYNC|MTCAN_CHTYPEANY|MTCAN_COMPRESS,
20, 8*60, 20*60, 5*60, 4096, 64*1024, 0, (u_char*)0 },

```

Adding Quantum DLT8000 Drives or Stackers

For the system to recognize these drives, specific entries are needed in the kernel.

The section used to define arrays for density counts and density names must contain the following entry:

```

#define tpsc_dlt8000_dens_count 2
char *tpsc_dlt8000_hwg_dens_names[] = { "8000", "8000_compress" };
char *tpsc_dlt8000_alias_dens_names[] = { ".8000", ".8000c" };

```

The struct `tpsc_types tpsc_types[]` array must contain the following entry:

```

/* DEC THZxx DLT drive */
{ DECDLT, TPDLT, 0, 7, "QUANTUM", "DLT8000", 0, 0,
  {0 /*8000*/, 0 /*8000c*/ },
MTCAN_BSF|MTCAN_BSR|MTCAN_APPEND|MTCAN_SPEOD|
MTCAN_CHKRDY|MTCAN_VAR| MTCAN_SETSZ|MTCAN_SILI|MTCAN_SEEK|
MTCAN_SYNC|MTCAN_CHTYPEANY|MTCAN_COMPRESS|MTCAN_SETDEN,
20, 8*60, 20*60, 5*60, 3*3600, 4096, 64*1024,
tpsc_dlt8000_dens_count, tpsc_dlt8000_hwg_dens_names,
tpsc_dlt8000_alias_dens_names,
{0}, 0, 0, 0,
0, (u_char *)0 },

```

Adding Quantum SDLT220 Drives

For the IRIX system to recognize these drives, specific entries are needed in the kernel.

```

/* This is the config without compression */
{ DECDLT, TPDLT, 7, 9, "QUANTUM", "SuperDLT1", 0, 0,
  {0, 0, 0, 0}, MTCAN_BSF|MTCAN_BSR|MTCAN_APPEND|MTCAN_SPEOD
|MTCAN_CHKRDY|MTCAN_VAR|MTCAN_SETSZ|MTCAN_SILI|MTCAN_SEEK
|MTCAN_SYNC|MTCAN_CHTYPEANY,
20, 8*60, 20*60, 5*60, 3*3600, 16384, 64*1024,
tpsc_default_dens_count, tpsc_default_hwg_dens_names,
tpsc_default_alias_dens_names,

```



```
{0}, 0, 0, 0, 0, (u_char *)0 },
```

Adding Exabyte Mammoth2 Compression Drives

For the IRIX system to recognize these drives, specific entries are needed in the kernel.

```
/* EXABYTE Mammoth2 */
{ EXABYTE8900, TP8MM_8900, 7, 8, "EXABYTE", "Mammoth2", 0,0,
{0, 0, 0, 0},
MTCAN_BSF|MTCAN_BSR|MTCAN_PREV|MTCAN_CHKRDY|MTCAN_VAR|MTCAN_SETSZ|
MTCAN_SILI|MTCAN_CHTYPEANY|MTCAN_SPEOD|MTCAN_SYNC|
MTCAN_SEEK|MTCAN_COMPRESS,
80, 4*60, 25*60, 5*60, 5*60, 1024, 128*1024,
tpsc_default_dens_count, tpsc_default_hwg_dens_names,
tpsc_default_alias_dens_names,
{0}, 0, 0, 0,
0, (u_char *)0 },
```

Adding IBM 3590E Drives

For the IRIX system to recognize these drives, specific entries are needed in the kernel.

```
/* IBM NTP drive */
{ IBMNTP, TPNTP, 3, 8, "IBM", "03590E1A", 0, 0, {0, 0, 0, 0},
MTCAN_BSF|MTCAN_BSR|MTCAN_SPEOD|MTCANT_RET|MTCAN_CHKRDY|
MTCAN_PREV|MTCAN_SEEK|MTCAN_APPEND|MTCAN_SILI|MTCAN_VAR|
MTCAN_SETSZ|MTCAN_CHTYPEANY|MTCAN_COMPRESS|MTCANT_LOAD|
MTCAN_LDREW ,
20, 14*60, 67*60, 14*60, 67*60, 16384, 512*1024,
tpsc_default_dens_count, tpsc_default_hwg_dens_names,
tpsc_default_alias_dens_names,
"\300\0\0\0\30\0", 6, 0, 0,
0, (u_char *)0 },

/* IBM NTPSTACKER drive */
{ IBMNTP, TPNTSTACKER, 3, 8, "IBM", "03590E11", 0, 0, {0, 0, 0, 0},
MTCAN_BSF|MTCAN_BSR|MTCAN_SPEOD|MTCANT_RET|MTCAN_CHKRDY|
MTCAN_PREV|MTCAN_SEEK|MTCAN_APPEND|MTCAN_SILI|MTCAN_VAR|
MTCAN_SETSZ|MTCAN_CHTYPEANY|MTCAN_COMPRESS|MTCANT_LOAD|
MTCAN_LDREW ,
20, 14*60, 67*60, 14*60, 67*60, 16384, 512*1024,
tpsc_default_dens_count, tpsc_default_hwg_dens_names,
```

```
tpsc_default_alias_dens_names,
"\300\0\0\0\30\0", 6, 0, 0,
0, (u_char *)0 },
```

Adding STK 9840 or T9940A FC Drives

For the IRIX system to recognize these drives, the following specific entry is needed in the kernel.

```
/* STK 9940 drive */
{ STK9840, TPSTK9840, 3, 4, "STK", "T9940A", 0, 0, {0, 0, 0, 0},
MTCAN_BSF|MTCAN_BSR|MTCANT_RET|MTCAN_CHKRDY|MTCAN_PREV|
MTCAN_SPEOD|MTCAN_SEEK| MTCAN_APPEND|MTCAN_SILI|MTCAN_VAR|
MTCAN_SETSZ|MTCAN_CHTYPEANY|MTCAN_COMPRESS,
20, 8*60, 10*60, 3*60, 3*60, 16384, 256*1024,
tpsc_default_dens_count, tpsc_default_hwg_dens_names,
tpsc_default_alias_dens_names,
{0}, 0, 0, 0,
0, (u_char *)0 },
```

Changing the /var/sysgen/master.d/scsi File

The IRIX tape driver (`tpsc`) provides support for all devices currently supported by VERITAS and coexists with the tape support (`ts`) system. You can choose which driver interface (`ts` or `tpsc`) to use for a particular device type.

The tape support system consists of a tape support driver, personality daemons, and a daemon to manage the personality daemons from SGI or the tape device vendor. For information on how to configure the tape support system, see the `ts` and `ts.config` man pages.

Adding Drive Support

To add support for a new standalone or robotic drive for either driver interface, the appropriate array must contain entries for the drives, as follows:

- ◆ For the `ts` driver interface, put entries in `struct ts_types ts_types[]`.
- ◆ For the `tpsc` driver interface, put entries in `struct tpsc_types tpsc_types[]`.

These entries are required for the system to recognize the drives. You can find this array in `/var/sysgen/master.d/scsi`.



1. No further changes are necessary if the following are both true:
 - ◆ The appropriate entries for the drive are present in this file.
 - ◆ You have previously rebuilt the kernel and modified `MAKEDEV` as explained in “Reconfiguring the Kernel and Modifying the `MAKEDEV` Script”.
2. If the entries are *not* in the file, add them as follows:
 - a. Save a copy of `/var/sysgen/master.d/scsi`.
 - b. Add the entries. An easy way to make this addition is to copy the entries from the `MediaMgr_DeviceConfig_Guide.txt` file. See “Considerations When Using This Guide” on page 1.
 - c. Reconfigure the kernel as explained in “Reconfiguring the Kernel and Modifying the `MAKEDEV` Script”.

Reconfiguring the Kernel and Modifying the `MAKEDEV` Script

If you made any changes to the `/var/sysgen/master.d/scsi` file, then you must update the kernel and modify the `MAKEDEV` script as follows:

1. Run the following kernel auto-configuration script:

```
/etc/autoconfig
```
2. If you are using the tape support (`ts`) system, run `chkconfig -f ts on`.
3. Reboot the system to utilize the newly-built kernel.

SSO Configurations With More Than 16 Tape Drives

This is a NetBackup Enterprise Server topic.

When the number of tape devices that are configured approaches 16, changes in tape device status may not be visible to all media servers in a Shared Storage Option (SSO) configuration. This is because the default maximum size of IPC message queues may not be large enough.

In these cases, communication between the `rdevmi` process on the scan hosts and the `opr`d processes on the media servers can be interrupted when the number of messages sent exceeds the maximum size of the queue.

VERITAS recommends adding the following statements to the `var/sysgen/stune` file. These statements increase the maximum number of messages that can be created, and the number of bytes per queue. A reboot is necessary for the changes to take effect.

```
# Increase the maximum number of messages that can be created
msgtql = 512
```

```
# Increase message queue maximum number of bytes
msgmnb = 65536
```

Be aware that increasing the maximum size of the IPC message queue may increase the amount of memory allocated to other IPC message queues on the system. The impact of these changes should be fully assessed before they are implemented.



Configuring Optical Disk Drives

When adding optical disk drives to a Media Manager configuration, you must specify the following device paths:

- ◆ Character device path (disk partition *s7*)
- ◆ Volume header disk device path (disk partition *vh*)

In a typical SGI IRIX configuration, most of the desired optical disk device files already exist and you just have to locate them in the `/dev` directory.

Character disk device files have the following format:

```
/dev/rdsk/dksCONTROLLERdTARGETs7
```

Volume disk device files have the following format:

```
/dev/rdsk/dksCONTROLLERdTARGETvh
```

Where:

- ◆ *CONTROLLER* is the SCSI bus (adapter) number.
- ◆ *TARGET* is the SCSI ID.
- ◆ *s7* is the desired character device partition.
- ◆ *vh* is the desired volume header partition.

Examples of Optical Disk Device Files

If the desired optical disk drive is on SCSI bus 1 at SCSI ID 3, you specify the following paths:

```
/dev/rdsk/dks1d3vh (volume header)  
/dev/rdsk/dks1d3s7 (character device)
```

Command Summary

The following is a summary of commands that may be useful when configuring devices. See the procedures in this chapter for examples of their usage.

`MAKEDEV Type`

If the device files you need do not exist, you can execute this command from the `/dev` directory to create them.

Type indicates the type of device file, as follows:

- ◆ `tps` creates all the tape device file combinations for `tps` (the SCSI tape driver for Integral SCSI controllers)
- ◆ `scsi` creates all the device files for the generic SCSI driver.
- ◆ `dks` creates all the device files for `dks` (the SCSI disk driver for integral SCSI controllers).

`/etc/autoconfig`

Runs the kernel auto-configuration script.

`/sbin/hinv -v`

Shows the system configuration, including devices configured on SCSI controllers. This command can also be used to verify that a tape drive is recognized by the system.

`/sbin/uname -aR`

Shows what operating system is currently running.

`mt status`

Prints status information for the tape unit.

`chkconfig -f ts on`

Enables the (ts) tape support system.





Intel Hosts Running Red Hat Enterprise Linux AS 2.1/ES 2.1

7

This chapter explains how to configure devices for use with Media Manager on an Intel host platform running Red Hat Linux. You can configure robots and drives for Media Manager using one of the available Media Manager administrative interfaces.

The main topics included in this chapter are as follows:

- ◆ Before You Start
- ◆ Configuring Robotic Controls
- ◆ Configuring Tape Drives
- ◆ Verifying The Device Configuration
- ◆ SSO Configurations With More Than 32 Tape Drives
- ◆ Other Considerations (Advanced Topics)
- ◆ Utilities to Test SCSI Devices
- ◆ Command Summary

Before You Start

Observe the following important points when performing the tasks described in this chapter:

- ◆ Verify that the `st` (tape) device driver is installed or loaded in the kernel. This driver allows the use of SCSI tape drives.
- ◆ Verify that the `sg` device driver is installed or loaded in the kernel. This driver allows passthru commands to SCSI tape drives and control of robotic devices.

Use the following command to display and verify that these modules are loaded in the kernel: `/sbin/lsmmod`. Example output from the `lsmmod` command follows:

Module	Size	Used by
<code>sg</code>	14844	0
<code>st</code>	24556	0



The standard Red Hat Enterprise Linux AS 2.1/ES 2.1 releases have these modules available for loading. When running Red Hat Linux, these modules are dynamically loaded as needed.

It is also possible to load these modules if they are not in the kernel, use the following commands:

```
/sbin/insmod st  
/sbin/insmod sg
```

- ◆ During NetBackup installation (and also at boot time), the binary `/usr/opensv/volmgr/bin/make_scsi_dev` will execute and does the following:
 - ◆ Creates the directories `/dev/sg` and `/dev/st`.
 - ◆ Obtains the device file output generated by the `sg` and `st` drivers.
 - ◆ Creates device files for each tape device and library of the format required by Media Manager and places them in these directories.
 - ◆ Establishes a default tape driver operating mode. If the operator changes the default mode, NetBackup may be unable to correctly read and write tape media, resulting in data loss.

In particular, never set `MT_ST_ASYNC_WRITES`, or `MT_ST_SYSV` to the value one. Never set `MTSETBLK` to a non-zero value. Do not interfere with the execution of `make_scsi_dev` at system boot (it is called by the `S77netbackup` startup script).

See “Configuring SCSI Robotic Control Device Paths” on page 113 and “Adding Standard Tape Drives” on page 115.

- ◆ Verify that a SCSI low-level driver is installed for each HBA in your system. Refer to your HBA vendor documentation.
 - ◆ Follow the HBA Vendor's installation guide to install or load the driver in the kernel.
 - ◆ Configure the kernel for SCSI tape support, SCSI generic support.
 - ◆ Probe all LUNs on each SCSI device and enable the SCSI low-level driver for the HBA.
 - ◆ If using LILO, be sure to add `max_scsi_luns=N` to the `lilo.conf` file. Refer to HBA documentation for specific details.
 - ◆ Enable multi-LUN support for the kernel according to Red Hat documentation.



If You Are Using NetBackup Server

Portions of this chapter include configuration topics and examples for configurations and options that are not supported in NetBackup Server. It is important to refer to the VERITAS support web site to determine support for NetBackup Server, before using this chapter.

Topics Not Applicable to NetBackup Server

“SSO Configurations With More Than 32 Tape Drives” on page 116.

Configuring Robotic Controls

To use robotics, the following drivers must be configured in the kernel or loaded as modules:

- ◆ Standard SCSI driver.
- ◆ SCSI-adaptor driver.
- ◆ Linux SCSI generic (sg) driver.

Information on supported SCSI robots (vendor models) can be found on the VERITAS support web site.

Configuring SCSI Robotic Control Device Paths

The binary `/usr/opensv/volmgr/bin/make_scsi_dev` creates device files in the `/dev/sg` directory. The names of these files in this directory have the following format:

```
hHOSTcCHANNELtTARGETlLUN
```

Where:

- ◆ *HOST* is the host bus adaptor.
- ◆ *CHANNEL* is channel.
- ◆ *TARGET* is the target ID.
- ◆ *LUN* is the logical unit number.

Use the files in the `/dev/sg` directory for the robotic path when using Media Manager interfaces to configure robots.

There must be a `/dev/sgN` entry (where *N* is a decimal number from 0 to 255) for each device. These entries are needed by `make_scsi_dev`, which is run during the NetBackup installation.



If you have devices that are not being discovered by Media Manager device discovery, it may be because the Linux default number of these entries is not sufficient. You may need to create additional entries.

Create device entries as follows, where *N* is a decimal number from 0 to 255. After creating all entries necessary, rerun `make_scsi_dev`.

```
mknod /dev/sgN c 21 N
```

Examples of SCSI Robotic Control Device Files

```
h10c0t110  
h10c0t210  
h10c0t310  
h25c0t010  
h25c0t110
```

Configuring Tape Drives

To use SCSI tape drives, the following drivers must be configured in the kernel or loaded as modules:

- ◆ Standard SCSI driver
- ◆ SCSI-adaptor driver
- ◆ SCSI tape (st) driver
- ◆ Linux SCSI generic (sg) driver

Using the Passthru Driver for Tape Drives

NetBackup can function without a passthru path to tape devices, *but* the following capabilities are not available:

- ◆ Locate-block (fast-tape) positioning
- ◆ Data protection provided by SCSI reserve/release
- ◆ Automatic configuration for tape devices
- ◆ Performance optimization for Quantum SDLT drives

Enabling Passthru Paths

Several `sg` device files are provided by default in the typical Linux installation. If you have more devices than the default number provided, you must create the required device files.

There must be a `/dev/sgN` entry for each device. These entries are needed by `make_scsi_dev`, which is run during the NetBackup installation.

If you have devices that are not being discovered by Media Manager device discovery, it may be because the Linux default number of these entries is not sufficient. You may need to create additional entries.

▼ To create device entries

1. Run `mknod /dev/sgN c 21 N`. *N* is a decimal number from 0 to 255.
2. Run `make_scsi_dev`.

Adding Standard Tape Drives

`make_scsi_dev` creates device files in the `/dev/st` directory. The names of the no rewind device files in this directory have the following format:

```
nhHOSTcCHANNELt TARGETlLUN
```

Where:

- ◆ *n* is the no rewind on close device file.
- ◆ *HOST* is the host bus adaptor.
- ◆ *CHANNEL* is channel.
- ◆ *TARGET* is the target ID.
- ◆ *LUN* is the logical unit number.

When adding tape drives to a Media Manager configuration, you need to specify a no rewind on close device path. Use the files in the `/dev/st` directory when configuring tape drives.

Examples of SCSI Tape Device Files

```
nh10c0t2l0
nh10c0t3l0
```



Verifying The Device Configuration

The file `/proc/scsi/scsi` shows all devices recognized by the SCSI driver. To verify that the operating system can see the devices, run the following command from a terminal window to view this file:

```
cat /proc/scsi/scsi
```

The output displayed should be similar to the following example:

```
Attached devices:
Host: scsi0 Channel: 00 Id: 01 Lun: 00
Vendor: HP          Model: C7200-8000          Rev: 1040
Type:   Medium Changer                      ANSI SCSI revision: 03
Host: scsi0 Channel: 00 Id: 02 Lun: 00
Vendor: QUANTUM    Model: DLT8000          Rev: 010F
Type:   Sequential-Access                   ANSI SCSI revision: 02
Host: scsi0 Channel: 00 Id: 03 Lun: 00
Vendor: QUANTUM    Model: DLT8000          Rev: 010F
Type:   Sequential-Access                   ANSI SCSI revision: 02
```

If the operating system can see your SCSI devices, Media Manager device discovery will also see the devices.

SSO Configurations With More Than 32 Tape Drives

This is a NetBackup Enterprise Server topic.

When the number of tape devices that are configured approaches 32, changes in tape device status may not be visible to all media servers in a Shared Storage Option (SSO) configuration. This is because the default maximum size of IPC message queues may not be large enough.

Linux has no intrinsic limit for the maximum number of messages that can be created (MSGTQL). However, the maximum number of bytes for the message queue (MSGMNB) can be tuned.

VERITAS recommends adding the following statements to the `/etc/sysctl.conf` file. A reboot is necessary for the changes to take effect.

```
# Increase message queue max number of bytes
kernel.msgmnb = 65536
```

Be aware that increasing the maximum size of the IPC message queue may increase the amount of memory allocated to other IPC message queues on the system. The impact of these changes should be fully assessed before they are implemented.



Other Considerations (Advanced Topics)

You may require the following advanced topics.

Support for Additional Tape Devices

The `st` tape driver supports up to 32 tape devices in its default configuration. This configuration provides eight minor device numbers. The driver can be re-configured to support up to 64 tape devices (with four minor device numbers) or up to 128 tape devices (with two minor device numbers).

Since NetBackup uses only one minor number, you can modify the driver and support up to 128 tape devices. The `st.h` source file, found in the Linux source directory `/drivers/scsi`, must be modified to change the number of devices that will be supported as shown in the following table:

Number of Tape Devices Supported	Original Value	New Value
64	<code>#define ST_NBR_MODE_BITS 2</code>	<code>#define ST_NBR_MODE_BITS 1</code>
128	<code>#define ST_NBR_MODE_BITS 2</code>	<code>#define ST_NBR_MODE_BITS 0</code>

Improving Performance

The `st` tape driver has internal buffers that have a default size of 32K. Performance may be enhanced if they are set to match the default block size used by `bptm`. The default block size for `bptm` is 64K. Edit the `st_options.h` file as shown in the following table:

Original Value	New Value
<code>#define ST_BUFFER_BLOCKS 32</code>	<code>#define ST_BUFFER_BLOCKS 64</code>

You also may need to change the following entry to have a smaller value depending on the available system memory:

```
#define ST_MAX_BUFFERS 4
```

Follow the Red Hat guidelines for incorporating these source changes into your system.



Using the Debug Mode

The st tape driver can be put into a debug mode. This mode will echo each command and its result to the syslog. See Red Hat documentation for details.

Using an Emulex HBA

If NetBackup is unable to mount tapes when using an Emulex HBA in a fibre channel configuration, it may be necessary to modify the `lpfc.conf.c` file.

Set `lpfc_check_cond_err` to a value of zero. NetBackup is unable to mount tapes if this variable is left at a value of one.

The use of the touch file `/usr/opensv/volmgr/AVRD_DEBUG` on a system with the Emulex HBA driver may cause the system log (syslog) to contain many entries that look like the following. You can ignore these messages.

```
Unknown drive error on DRIVENAME (device N, PATH) sense[0] = 0x70,  
sense[1] = 0x0, sensekey = 0x5
```

Using Persistent Binding

Persistent bindings should be used to lock the mappings between SCSI Targets reported to Linux and specific devices. WWPN binding is often used. If binding is not possible with the HBA in your configuration, then add an `ENABLE_AUTO_PATH_CORRECTION` entry in the `/usr/opensv/volmgr/vm.conf` file on all Linux media servers.

Utilities to Test SCSI Devices

You can manipulate tape devices with the system `mt` command. The man page for `MT(1)` explains how to do this.

Robots can be tested using the `robtest` utility in `/usr/opensv/volmgr/bin`.

There is also a set of SCSI utilities available from the Linux SCSI Generic (sg) driver home page.

Command Summary

The following is a summary of commands that may be useful when configuring devices. See the appropriate sections of this chapter for examples of their usage.

```
sbin/lsmod
```



List loaded modules.

```
sbin/insmod
```

Install loadable kernel modules.

```
/usr/sbin/reboot
```

Stop and restart the system.

```
/bin/mknod /dev/sgN c 21 N
```

Create SCSI generic device files. Where N is a decimal number from 0 to 255.

```
/usr/opensv/volmgr/bin/make_scsi_dev
```

Create NetBackup device files.



This chapter explains how to install tape device drivers for use with Media Manager on an Intel host platform running Windows.

You can configure robots and drives for Media Manager using one of the available Media Manager administrative interfaces.

Installing 32 Bit Tape Device Drivers

When installing NetBackup for the first time, VERITAS recommends that you install the device drivers for your storage device *after* you install NetBackup software and *before* you configure NetBackup.

If you are upgrading NetBackup, you can install the latest tape device drivers before you upgrade NetBackup.

Use the device driver install wizard to install the latest device drivers.

▼ To use the Device Driver Installer wizard

This wizard (located on the NetBackup CD) guides you through the installation of the latest device drivers.

1. Log in as Administrator on the server where you installed NetBackup.
2. Insert the NetBackup CD-ROM in the drive.

On Windows systems with AutoPlay enabled for CD-ROM drives, the NetBackup installation browser starts automatically.

On Windows systems that have AutoPlay for CD-ROM drives disabled, run `Launch.exe` from the top-level directory on the CD-ROM.

3. In the VERITAS CD Browser, click **Additional Products > Additional Product Installations > NetBackup Tape Device Drivers**.

The Device Driver Installer wizard starts.



4. Follow the prompts in the wizard to install device drivers for your storage device.

On the Choosing tape drives screen of the wizard, select **Use VERITAS tape drivers for all tape devices**.

Use the **More Information** button for explanations of the available choices.

5. At the completion of the wizard, be sure to reboot your system.

The drivers are installed in the following Windows directory. Different sets of drivers are installed for Windows 2000 and for Windows NT systems

```
C:\WINNT\system32\drivers
```

▼ **To obtain device driver installation software**

If you do not have a CD-ROM, you can download the NetBackup Tape Device Driver installation software from the VERITAS support web site.

<http://www.support.veritas.com>

▼ **To determine the version of a device driver**

The drivers are installed in the following Windows directory:

```
C:\WINNT\system32\drivers
```

The device driver files do not have a version number. To determine the version of a device driver file, use the Modified date found in the file Properties dialog (right click on the driver file name).

▼ **To obtain the latest tape device drivers**

Visit the VERITAS support web site.

<http://www.support.veritas.com>

Index

Symbols

- /etc/sysctl.conf file 116
- /etc/system file 7
- /usr/bin/X11/dxkerneltuner utility 89
- /usr/sbin/sam utility 77

A

- accessibility features xvii
- ACS (see Automated Cartridge System)
- AIX (see RS6000)
- AL-PA destination ID 13
- APD 95
- AT&T style close 16, 67
- atdd driver 69
- autoconfig command 109
- Automated Cartridge System
 - on Sun4/SPARC 6

B

- Berkeley-style close
 - on HP9000 67
 - on Sun4/SPARC 16
- binding process 13
- boot -r
 - on Sun4/SPARC 30

C

- cfgmgr command 56
- chdev command 41, 56
- chkconfig command 106, 109
- command summary
 - for HP Alpha 90
 - for HP9000 78
 - for RedHat Linux 118
 - for RS6000 55
 - for SGI IRIX 109
 - for Sun4/SPARC 29
- configurations with more than 16 drives 7, 77, 89, 107

- configurations with more than 32 drives 116
- Configure Storage Devices wizard 76

D

- D_ID 36
- DAT (see HP 4-mm DAT)
- Device Configuration
 - wizard 76
- device configuration
 - sequence 2
- device driver install wizard 121
- device drivers
 - ovpass 33
 - sd
 - on Sun4/SPARC 29
 - sg
 - on Red Hat Linux 111
 - on Sun4/SPARC 13
 - spt (SCSI passthru)
 - on HP9000 62
 - st
 - on Red Hat Linux 111
 - on Sun4/SPARC 22
 - Windows 121

E

- Exabyte compression drives
 - on SGI IRIX 104
- extended file marks 42

F

- fabric assigned destination ID 13
- fast-tape positioning (see locate-block)
- fibre channel
 - configuration 66
 - drivers 6
- fixed length block 41
- fixed mode devices 19
- forward-space-file/record 70



G

Glossary. *See* NetBackup Help.

H

- hinv command 109
- HP 1.2 GB optical
 - on RS6000 33, 50
- HP 4-mm DAT
 - on RS6000 46
 - on SGI IRIX 98
 - on Sun4/SPARC 23
- HP Alpha
 - Dynamic Device Recognition 83
 - locate-block 81
 - SCSI robotic controls 80
- HP C1560B DAT Autoloader
 - on RS6000 46
 - on SGI IRIX 98
 - on Sun4/SPARC 23
- HP LTO
 - on HP Alpha 82
- HP optical disk
 - on HP9000 75
 - on RS6000 50
 - on SGI IRIX 108
 - on Sun4/SPARC 27
- HP9000
 - optical disk configuration
 - make device files 75
 - SCSI robotic controls 60
 - make device files 62, 64
 - spt (SCSI passthru) driver 62
 - tape drive configuration
 - Berkeley-style close 67
 - make device files 71
- hwmgr command 80, 82, 90

I

- IBM 3590E drives
 - on SGI IRIX 104
- IBM RS6000 (see RS6000)
- insmod command
 - on Red Hat Linux 112
- install_ovpass script 33, 55
- Intel hosts running Windows 121
- ioscan command
 - on HP9000 78
- IRIX (see SGI IRIX)

K

- kernel changes
 - HP Alpha 82
 - HP9000 71
 - SGI IRIX
 - for Exabyte compression 104
 - for HP 4-mm DAT drives 98
 - for IBM 3590E 104
 - for Quantum DLT 220 103
 - for Quantum DLT 7000 102
 - for Quantum DLT 8000 103
 - for Sony AIT-2 drives 100
 - for Sony DTF drives 100
 - for STK drives 105

L

- locate-block
 - on HP Alpha 81
 - on RS6000 42
 - on SGI IRIX 96
 - on Sun4/SPARC 17
- logical unit numbers
 - on Sun4/SPARC 22
- lsattr command 56
- lsdev command
 - on HP9000 78
 - on RS6000 55
- lsmod command
 - on Red Hat Linux 111

M

- make_scsi_dev command
 - on Red Hat Linux 112
- MAKEDEV
 - on SGI IRIX 109
- mediad command 93
- mkdev command 56
- mknod command
 - on HP9000 78
- modinfo command 29
- mt command 118

N

- N_Port address 36
- NetBackup Enterprise Server xiv, 1, 6, 70, 71, 77, 89, 107, 116
- NetBackup Server xiv, 1, 6, 59, 80, 92, 113

O

- odmget command 57
- optical disk



- on HP9000 75
- on RS6000 50
- on SGI IRIX 108
- on Sun4/SPARC 27
- ovpass driver 33

P

- passthru driver (see SCSI)

Q

- Quantum DLT 220
 - on SGI IRIX 103
- Quantum DLT 7000
 - on SGI IRIX 102
- Quantum DLT 8000
 - on SGI IRIX 103

R

- Red Hat Linux
 - loading drivers 112
 - verifying the device configuration 116
- rem_drv command 29
- remove_ovpass command 33, 55
- robotic controls
 - SCSI
 - on HP Alpha 80
 - on HP9000 60
 - on Red Hat Linux 113
 - on RS6000 34, 40
 - on SGI IRIX 94
 - on Sun4/SPARC 13
- robtest utility 118
- RS6000
 - adapter numbers 32
 - install_ovpass script 33
 - locate-block 42
 - optical disk configuration
 - make device files 50
 - set in nonvolatile memory 52
 - ovpass driver 33
 - installing 33
 - uninstalling 33
 - upgrading 33
 - passthru driver 33
 - remove_ovpass command 33
 - SCSI robotic controls 34, 40
 - make device files 34, 40
 - smit tool 31, 33
 - tape drive configuration
 - extended file marks 42

- HP 4-mm DAT 46
- make device files 43
- multiple densities 46
- Sony AIT 47
- variable mode devices 41

S

- SAM utility 71
- SAN media server xiv
- schgr device driver 60
- scip SCSI controller 93
- scripts
 - install_ovpass 33
 - remove_ovpass 33
 - sg.install
 - on Sun4/SPARC 8
 - sgscan 13, 17, 29
- SCSI
 - integral, on SGI IRIX 92
 - logical unit numbers
 - on Sun4/SPARC 22
 - on board
 - on SGI IRIX 92
 - passthru driver
 - on RS6000 33
 - on Sun4/SPARC 7
 - robotic control
 - on HP Alpha 80
 - on HP9000 60
 - on Red Hat Linux 113
 - on RS6000 34, 40
 - on SGI IRIX 94
 - spt (SCSI passthru) driver
 - on HP9000 62
- SCSI reserve/release
 - data integrity 3
 - disabling 3
 - enabling 70, 71
- scsi_command
 - on RS6000 56
 - on Sun4/SPARC 29, 30
- sd driver
 - on Sun4/SPARC 29
- Seagate LTO
 - on HP Alpha 82
- sg driver
 - on Red Hat Linux 111
 - on Sun4/SPARC 13
- sg.build command 29



- sg.install script
 - on Sun4/SPARC 8, 29
- SGI Asynchronous Personality Daemon 95
- 91
- SGI IRIX
 - kernel changes
 - for Exabyte compression 104
 - for HP 4-mm DAT 98
 - for IBM 3590E 104
 - for Quantum DLT 220 103
 - for Quantum DLT 7000 102
 - for Quantum DLT 8000 103
 - for Sony AIT-2 100
 - for Sony DTF 100
 - for STK 105
 - locate-block 96
 - mediaid command 93
 - optical disk configuration
 - make device files 108
 - SCSI
 - integral 92
 - on-board 92
 - robotic controls 94
 - tape drive configuration
 - Exabyte compression 104
 - HP 4-mm DAT 98
 - IBM 3590E 104
 - make device files 96
 - Quantum DLT 220 103
 - Quantum DLT 7000 102
 - Quantum DLT 8000 103
 - Sony AIT-2 100
 - Sony DTF 100
 - STK 105
 - using scip controllers 93
- Shared Storage Option (SSO)
 - configuration 7, 77, 89, 107, 116
 - optical drives 76
 - SCSI reserve/release 70
- smit command 41
- Sony AIT
 - on HP 73
 - on HP Alpha 86
 - on RS6000 47
 - on Sun4/SPARC 24
- Sony AIT-2
 - on SGI IRIX 100
 - on Sun4/SPARC 24
- Sony DTF
 - on SGI IRIX 100
- spt driver (see SCSI)
- st driver
 - on Red Hat Linux 111
 - on Sun4/SPARC 22
- st.conf file 19
- STK
 - on SGI IRIX 105
- STK 9840
 - on HP Alpha 82
- Sun4/SPARC
 - adapter card removal 5
 - locate-block 17
 - optical disk configuration
 - make device files 27
 - set in nonvolatile memory 28
 - SCSI passthru driver 7
 - SCSI robotic controls 13
 - sg driver
 - install or reconfigure 8
 - sg.install script 8
 - st driver 22
 - st.conf file 19
 - tape drive configuration
 - Berkeley-style close 16
 - HP 4-mm DAT 23
 - make device files 17
 - Sony AIT 24
 - Sony AIT-2 24
 - variable mode devices 19
 - using ACS 6
 - switch settings, HP 4-mm DAT
 - on HP Alpha 85
 - on HP9000 72
 - on RS6000 46
 - on SGI IRIX 98
 - on Sun4/SPARC 23
 - switch settings, Sony AIT
 - on HP 73
 - on HP Alpha 86
 - on RS6000 47
 - on SGI IRIX 101
 - on Sun4/SPARC 24
 - switch settings, Sony AIT2
 - on Sun4/SPARC 24

T

- tape drive configuration
 - on HP Alpha 81



on HP9000 71
on Red Hat Linux 115
on RS6000
 HP 4-mm DAT 46
 make device files 43
 Sony AIT 47
on SGI IRIX
 Exabyte compression 104
 HP 4-mm DAT 98
 IBM 3590E 104
 make device files 96
 Quantum DLT 220 103
 Quantum DLT 7000 102
 Quantum DLT 8000 103
 Sony AIT-2 100
 Sony DTF 100
 STK 105
on Sun4/SPARC
 HP 4-mm DAT 23
 make device files 17
 Sony AIT 24
 Sony AIT-2 24

text version of this guide 2

U

uname command 109
using the passthru driver
 capabilities 67, 114
using the text version of this guide 2
using this guide 1

V

var/sysgen/stune file 107
variable length block 41
variable-mode devices
 on RS6000 41
 on Sun4/SPARC 19
VERITAS Storage Migrator xiii
VERITAS support web site 2
vold 27

W

world wide node names (WWNN) 13
world wide port names (WWPN) 12, 13

